















**Nikon Wireless & Wired Remotes & Releases - Digital Camera Compatibility Chart**

Device	Compatible Cameras		
 <p><b>WR-1 Remote Controller</b></p>	<p>These cameras have a 10 pin connector and use the MC-37 Connecting Cord:</p> <p>D5 D4S/D4 D3/D3X/D3S D2X/D2Xs/D2Hs/D2H D1 series D850 D810/D810A D800/D800E D700 D500 D300/D300s D200</p>	<p>These cameras have an accessory terminal and use the MC-38 Connecting Cord:</p> <p>Z 7 Z 6 Df D750 D610 D600 D7500 D7200 D7100 D7000</p>	<p>These cameras have an accessory terminal and use the MC-38 Connecting Cord:</p> <p>D5600 D5500 D5300 D5200 D5100 D5000 D3300 D3200 D3100 D90 COOLPIX P1000</p> <p><i>* products not shown to scale ** chart up to date as of 8.30.18</i></p> <p><i>* The WR-1 Remote Controller can also control the WR-R10 in addition to another WR-1.</i></p> <p><i>** The Wireless Remote Controllers can be used with the D2X, D2Xs, D2Hs, and D200, however they will temporarily display [GPS] if the exposure meters are activated after the unit is attached.</i></p>
 <p><b>WR-T10 + WR-R10 + WR-A10 Remote Controller Kit</b></p>	<p>These cameras must use the WR-A10 (10 pin) Adapter:</p> <p>D5 D4S/D4 D3/D3X/D3S D2Hs/D2Xs/D2H D1 D850 D810/D810A D800/D800E D700 D500 D300/D300s D200 D100</p>	<p>These cameras have an accessory terminal and do not use the WR-A10 Adapter:</p> <p>Z 7 Z 6 Df D750 D610 D600 D7500 D7200 D7100 D7000 D5600 D5500</p>	<p>These cameras have an accessory terminal and do not use the WR-A10 Adapter:</p> <p>D5300 D5200 D5100 D5000 D3300 D3200 D3100 D90 COOLPIX A COOLPIX P7700 COOLPIX P7800 COOLPIX P1000</p> <p><i>** The Wireless Remote Controllers can be used with the D2X, D2Xs, D2Hs, and D200, however they will temporarily display [GPS] if the exposure meters are activated after the unit is attached.</i></p>
 <p><b>WR-R10 Remote Controller (transceiver)</b></p>	<p>Compatible with:</p> <p>Z 7 Z 6 Df D750 D610 D600 D7500 D7200 D7100 D7000 D5600 D5500</p>	<p>Compatible with:</p> <p>D5300 D5200 D5100 D5000 D3300 D3200 D3100 D90 COOLPIX A COOLPIX P7700 COOLPIX P7800 COOLPIX P1000</p>	<p>With the WR-A10 Adapter, the WR-R10 works with the following cameras:</p> <p>D5 D4S/D4 D3/D3X/D3S D2X/D2Xs/D2Hs/D2H D1 series D850 D810/D810A D800/D800E D700 D300/D300s D200</p> <p><i>Requires the WR-T10 or WR-1 to act as transmitter. Can also be triggered by another camera that is equipped with a WR-R10.</i></p>
 <p><b>WR-A10 Remote Controller Adapter for cameras with 10 pin connectors</b></p>	<p>With the WR-A10 Remote Controller Adapter (10 pin), the WR-R10 also works with the following cameras:</p> <p>D5 D4S/D4 D3/D3X/D3S D2H/D2X/D2Hs/D2Xs D1 series D850 D810/D810A</p>	<p>With the WR-A10 Remote Controller Adapter (10 pin), the WR-R10 also works with the following cameras:</p> <p>D800/D800E D700 D500 D300/D300s D200</p>	<p><i>* The WR-A10 Remote Controller Adapter is a 10 pin adapter that lets photographers using select DSLRs with a 10 pin connection use the WR-R10. The adapter must be used as the WR-R10 is designed to fit the accessory terminal that certain DSLRs use.</i></p>
 <p><b>WR-T10 Remote Controller (transmitter)</b></p>	<p>Compatible with:</p> <p>D5 D4S/D4 D3/D3X/D3S D2X/D2Xs/D2Hs/D2H D1 series D850 D810/D810A D800/D800E D700 D750 D610 D600 D500</p>	<p>Compatible with:</p> <p>Z 7 Z 6 Df D7500 D7200 D7100 D7000 D5600 D5500 D5300</p>	<p>Compatible with:</p> <p>D5200 D5100 D5000 D3300 D3200 D3100 D300/D300s D200 D90 COOLPIX A COOLPIX P7800 COOLPIX P7700 COOLPIX P1000</p> <p><i>* The WR-T10 Remote Controller can also control the WR-1 in addition to the WR-R10. It can not be used on its own, it needs a WR-1 or WR-R10 attached to a camera to receive the signal.</i></p> <p><i>** The Wireless Remote Controllers can be used with the D2X, D2Xs, D2Hs, and D200, however they will temporarily display [GPS] if the exposure meters are activated after the unit is attached.</i></p>



 <p><b>WU-1a Wireless Mobile Adapter</b></p>	<p><b>Compatible with:</b></p> <p>Df D7100 D5200 D3300 D3200 Nikon 1 S2</p>	<p><b>Compatible with:</b></p> <p>COOLPIX A COOLPIX P7800 COOLPIX P530 COOLPIX P520 COOLPIX P330</p>
 <p><b>WU-1b Wireless Mobile Adapter</b></p>	<p><b>Compatible with:</b></p> <p>D610 D600 Nikon 1 AW1 Nikon 1 S1 Nikon 1 V2 Nikon 1 J3</p>	
 <p><b>UT-1 Communication Unit</b></p>	<p><b>Compatible with:</b></p> <p>D5 D4S/D4 D810/D810A D800/D800E</p>	<p><b>Compatible with:</b></p> <p>D750 D7200 D7100 D7000</p>
 <p><b>UT-1 Communication Unit + WT-5A Wireless Transmitter</b></p>	<p><b>Compatible with:</b></p> <p>D5 D4S/D4 D810/D810A D800/D800E</p>	<p><b>Compatible with:</b></p> <p>D750 D7200 D7100 D7000</p>
 <p><b>WT-6A Wireless Transmitter</b></p>	<p><b>Compatible with:</b></p> <p>D5</p>	
 <p><b>WT-7A Wireless Transmitter</b></p>	<p><b>Compatible with:</b></p> <p>Z 7 Z 6 D850 D500</p>	
 <p><b>WT-5A Wireless Transmitter</b></p>	<p><b>Compatible with:</b></p> <p>D5 D4S/D4</p>	<p><b>The WT-5A is also compatible with the following cameras, when used with the UT-1:</b></p> <p>D810/D810A D800/D800E D750</p> <p><b>The WT-5A is also compatible with the following cameras, when used with the UT-1:</b></p> <p>D7200 D7100 D7000</p>
 <p><b>WT-4A Wireless Transmitter</b></p>	<p><b>Compatible with:</b></p> <p>D4S/D4 D3 Series D800/D800E D700 D300S/D300 D7000</p>	



 <p><b>ML-L7 Wireless Remote Control (Bluetooth)</b></p>	<p><b>Compatible with:</b></p> <p>COOLPIX P1000</p>						
 <p><b>ML-L6 Wireless Remote Control</b></p>	<p><b>Compatible with:</b></p> <p>KeyMission 360 KeyMission 170</p>						
 <p><b>ML-L3 Wireless Remote Control (Infrared)</b></p>	<p><b>Compatible with:</b></p> <p>D750 D610 D600 D7500 D7200 D7100 D7000 D5500 D5300 D5200</p>	<p><b>Compatible with:</b></p> <p>D5100 D5000 D3400 D3300 D3200 D3000 D90 D80 D70/D70s</p>	<p><b>Compatible with:</b></p> <p>Nikon 1 V3 Nikon 1 V2 Nikon 1 V1 Nikon 1 J2 Nikon 1 J1 D60 D50 D40/D40x</p>	<p><b>Compatible with:</b></p> <p>COOLPIX A COOLPIX P7800 COOLPIX P7700 COOLPIX P7100 COOLPIX P7000 COOLPIX P900</p>			
 <p><b>ML-3 Modulite Remote Control Set (uses the 10 pin connector)</b></p>	<table border="0"> <tr> <td data-bbox="516 1169 738 1478"> <p><b>Compatible with:</b></p> <p>D5 D4S/D4 D3 Series D2 Series D1 Series D850 D810/D810A D800/D800E</p> </td> <td data-bbox="738 1169 901 1478"> <p><b>Compatible with:</b></p> <p>D700 D500 D300/D300S D200 D100 using the MB-D100</p> </td> </tr> </table>				<p><b>Compatible with:</b></p> <p>D5 D4S/D4 D3 Series D2 Series D1 Series D850 D810/D810A D800/D800E</p>	<p><b>Compatible with:</b></p> <p>D700 D500 D300/D300S D200 D100 using the MB-D100</p>	
<p><b>Compatible with:</b></p> <p>D5 D4S/D4 D3 Series D2 Series D1 Series D850 D810/D810A D800/D800E</p>	<p><b>Compatible with:</b></p> <p>D700 D500 D300/D300S D200 D100 using the MB-D100</p>						
 <p><b>MC-36/MC-36A Multi-Function Remote Control Cord (uses the 10 pin connector)</b></p>	<table border="0"> <tr> <td data-bbox="516 1478 738 1760"> <p><b>Compatible with:</b></p> <p>D5 D4S/D4 D3 Series D2Xs D850 D810/D810A D800/D800E</p> </td> <td data-bbox="738 1478 901 1760"> <p><b>Compatible with:</b></p> <p>D700 D500 D300/D300S D200</p> </td> </tr> </table>				<p><b>Compatible with:</b></p> <p>D5 D4S/D4 D3 Series D2Xs D850 D810/D810A D800/D800E</p>	<p><b>Compatible with:</b></p> <p>D700 D500 D300/D300S D200</p>	
<p><b>Compatible with:</b></p> <p>D5 D4S/D4 D3 Series D2Xs D850 D810/D810A D800/D800E</p>	<p><b>Compatible with:</b></p> <p>D700 D500 D300/D300S D200</p>						
 <p><b>MC-30/MC-30A Remote Trigger Release (uses the 10 pin connector)</b></p>	<table border="0"> <tr> <td data-bbox="516 1760 738 2110"> <p><b>Compatible with:</b></p> <p>D5 D4S/D4 D3 Series D2 Series D1 Series D850 D810/D810A D800/D800E</p> </td> <td data-bbox="738 1760 901 2110"> <p><b>Compatible with:</b></p> <p>D700 D500 D300/D300S D200 D100 using the MB-D100</p> </td> </tr> </table>				<p><b>Compatible with:</b></p> <p>D5 D4S/D4 D3 Series D2 Series D1 Series D850 D810/D810A D800/D800E</p>	<p><b>Compatible with:</b></p> <p>D700 D500 D300/D300S D200 D100 using the MB-D100</p>	
<p><b>Compatible with:</b></p> <p>D5 D4S/D4 D3 Series D2 Series D1 Series D850 D810/D810A D800/D800E</p>	<p><b>Compatible with:</b></p> <p>D700 D500 D300/D300S D200 D100 using the MB-D100</p>						
 <p><b>MC-DC2 Remote Cord (uses an accessory terminal)</b></p>	<table border="0"> <tr> <td data-bbox="516 2110 738 2483"> <p><b>Compatible with:</b></p> <p>Z 7 Z 6 Df D750 D610 D600 D7500 D7200 D7100 D7000</p> </td> <td data-bbox="738 2110 901 2483"> <p><b>Compatible with:</b></p> <p>D5600 D5500 D5300 D5200 D5100 D5000 D3300 D3200 D3100 D90</p> </td> <td data-bbox="901 2110 1112 2483"> <p><b>Compatible with:</b></p> <p>COOLPIX A COOLPIX P7800 COOLPIX P7700 COOLPIX P1000</p> </td> </tr> </table>				<p><b>Compatible with:</b></p> <p>Z 7 Z 6 Df D750 D610 D600 D7500 D7200 D7100 D7000</p>	<p><b>Compatible with:</b></p> <p>D5600 D5500 D5300 D5200 D5100 D5000 D3300 D3200 D3100 D90</p>	<p><b>Compatible with:</b></p> <p>COOLPIX A COOLPIX P7800 COOLPIX P7700 COOLPIX P1000</p>
<p><b>Compatible with:</b></p> <p>Z 7 Z 6 Df D750 D610 D600 D7500 D7200 D7100 D7000</p>	<p><b>Compatible with:</b></p> <p>D5600 D5500 D5300 D5200 D5100 D5000 D3300 D3200 D3100 D90</p>	<p><b>Compatible with:</b></p> <p>COOLPIX A COOLPIX P7800 COOLPIX P7700 COOLPIX P1000</p>					



*At the heart of the image™*



AR-3 Cable Release

**Compatible with:**

Df