Recommended Xerox Media for Phaser Phaser 7400N, 7400DN, 7400DX, and 7400DXF (Europe)



Revision 6.0, Publish Date: January, 2008

Important Note:

All media is listed by product, Paper Type System Setting, Paper Type, weight (standard gsm), re-order number, size, and tray runability. The additional information column is for hints and tips on how to run certain media applications.

Media recommendations made in this publication are based on qualification tests* conducted using standard test images with moderate to heavy image area coverage. Test duration for each product/media type is based on the suggested machine monthly copy/print volume. Test machines are maintained within specifications defined by user documentation.

* Testing environment Temperature 20 degreesC±4, Relative Humidity 40% ±10%.

* Machine reliability specifications may be affected by increased usage of the Transparency, Card Stock, Label, and Special modes. In addition, variances in machine reliability may occur due to extended use of some media types. Your Xerox service representative can advise you on special application media types for long duration copy/print runs.

For specifications and a description of the various media types discussed in this publication, please refer to www.Xerox.com.

For additional recommended Phaser media, look under Supplies on: http://www.office.xerox.com/ and select your Product Family.

© 2007 Xerox Corporation. All rights reserved.

Xerox®, The Document Company®, and all Xerox product names and product numbers mentioned in this publication are trademarks of Xerox Corporation. Other company trademarks are also acknowledged.

For the latest line of Xerox supplies contact your local Xerox representative or a recommended distributor. For the most recent version of this list visit our website at www.xerox.com, select "Country", then "Supplies".

Г

Plain Heavy Plain		
Glossy Coated Paper Thin Card Control Thick Card	Extra Thick Card	
Labels Transparency		

January, 2008
Phaser 7400N,
7400DN, 7400DT,
7400DX, and 7400DXF
· · ·

A=Auto Duplex M=Manual Duplex S=Simplex Only



Paper	Paper Type	Weight	Re-Order #	Cross Reference #	Туре
			003R97988		
	Plain	90 gsm	003R97990		
			003R97991		
	Heavy Plain	100 gsm	003R97993		
	Heavy Plain	120 gsm	003R97958		
Norma Optional (Option)	Thin Card	160 gsm	003R97963		
Xerox Colotech+ (Gold)			003R97964		
			003R97965		
			003R97967		
	Thick Card	200 gsm	003R97968		
			003R97969		
			003R97975		
	Extra Thick	250 gsm	003R97976		
			003R97977		
			003R97663		
	Plain	90 gsm	003R97664		
			003R97665		
Xerox Digital Colour			003R98007		
Impressions	Thin Card	160 gsm	003R98008		
			003R97671		
	Extra Thick	250 gsm	003R97672		
			003R91820		
Xerox Business	Plain	80 gsm	003R91823		4-hol
			003R91821		
Xerox Recycled Supreme	Plain	80 gsm	003R94565		
			003R91832		
Xerox Premier	Plain	80 gsm	003R91720		
					4
			003R93872 003R95813		1-up 4-up
Xerox Colour Laser/ Copier Labels	Label		003R95813		4-up 6-up
			003R93873		8-up
			003R93875		14-up
			003R95815		21-u
			003R97524		24-up
J			H		-

Туре	Size	Trays					Additional Information Refer to the "Paper Tips" embedded page for additional printer-specific information, e.g., High		
		1/MPT	2	3	4	5	6	Capacity tray usage.	
	A4	Α	Α	Α	Α	Α	Α		
	A3	Α	Α	Α	Α	Α	Α	Paper Type Plain should be selected on the user interface for Trays/MPT. For higher print gloss, use the Heavy Plain setting.	
	SRA3	Α	Α	Α	Α	Α	Α		
	A4	A	Α	A	Α	A	A	Paper Type Heavy Plain should be selected on the user interface for Trays/MPT.	
	A4	A	A	A	A	A	A	Paper Type Heavy Plain should be selected on the user interface for Trays/MPT.	
	A4	Α	Α	Α	Α	Α	Α		
	A3	Α	Α	Α	Α	Α	Α	Paper Type Thin Card should be selected on the user interface for Trays/MPT.	
	SRA3	Α	Α	Α	Α	Α	Α		
	A4	M						Paper Type Thick Card should be selected on the user interface for Trays/MPT.	
	A3	M						raper type mick card should be selected on the user interface for trays/mrt.	
	SRA3	м							
	A4	м							
	A3	м						Paper Type Extra Thick Card should be selected on the user interface for Trays/MPT.	
	SRA3	м							
	A4	Α	Α	Α	Α	Α	Α		
	A3	Α	Α	Α	Α	Α	Α	Paper Type Plain should be selected on the user interface for Trays/MPT. For higher print gloss, use the Heavy Plain setting.	
	SRA3	Α	Α	Α	Α	Α	Α	use the neary main setting.	
	A4	Α	Α	Α	Α	Α	Α		
	A3	A	A	A	A	A	A	Paper Type Thin Card should be selected on the user interface for Trays/MPT.	
	A3	м					1		
	SRA3	M						Paper Type Extra Thick Card should be selected on the user interface for Trays/MPT.	
	JKA3	M							
	A4	Α	Α	Α	Α	Α	Α		
4-hole	A4	Α	Α	Α	Α	Α	Α	Paper Type Plain should be selected on the user interface for Trays/MPT.	
	A3	Α	Α	Α	Α	Α	Α		
	A4	Α	Α	A	Α	A	A	Paper Type <i>Plain</i> should be selected on the user interface for Trays/MPT.	
j	A5	Α	Α	Α	Α	Α	Α		
	A4	A	A	A	A	A	A	Paper Type Plain should be selected on the user interface for Trays/MPT.	
1-up	A4	S					1		
4-up	A4 A4	S							
-	A4 A4							Paper Type <i>Labels</i> should be selected on the user interface for Trays/MPT.	
6-up	A4 A4	S							
8-up	A4 A4	S							
14-up		S							
21-up	A4	S							
24-up	A4	S		L			I		

