

All information contained in this Ford Quick Reference Guide was accurate at the time of duplication. We reserve the right to change features, operation and/or functionality of any vehicle specification at any time. Your Ford dealer is the best source for the most current information.

For detailed operating and safety information, please see your Owner's Guide.

May 2007
First Printing
Quick Reference Guide

Ford Fusion
Litho in U.S.A.



8E5J 19G217 AA

ESSENTIAL INFORMATION

FUEL TYPE AND TANK CAPACITY

Your fuel tank can accommodate approximately 17.5 gallons (66.2 L) of gasoline. Your vehicle is designed to use unleaded gasoline with an (R+M)/2 octane rating of 87. Using gasoline with a lower octane rating may degrade performance.

TIRE PRESSURE

Your vehicle's tire pressure specifications are found on the vehicle's Safety Compliance Certification Label located on the driver's door jamb. Check your tires for proper air pressure monthly and before long trips. Use a tire gauge to check the tire inflation pressure, including the spare tire (if equipped). Always use an accurate tire pressure gauge. Check the tire pressure when tires are cold, after the vehicle has been parked for at least three hours or has been driven less than three miles. (As you drive, the temperature in the tire warms up, increasing the tire pressure.) Improperly inflated tires can affect vehicle handling and can fail suddenly, resulting in a possible loss of vehicle control. As an added safety feature, your vehicle has been equipped with a tire pressure monitoring system (TPMS) that illuminates a low tire pressure warning light (T) when one or more of your tires is significantly under-inflated. Refer to the Tires, Wheels and Loading chapter in the Owner's Guide for further information.

FUSES If the vehicle's electrical components are not operating, a fuse may have blown. The fuse panel is located below the instrument panel on the driver's side; remove the cover to view the fuses. Additional fuses are located in

the power distribution box in the engine compartment. For more information regarding changing fuses, refer to the Roadside Emergencies chapter of your Owner's Guide.

FUEL PUMP SHUT-OFF SWITCH

The fuel pump shut-off switch stops the electric fuel pump from sending fuel to your engine when your vehicle has sustained a substantial jolt. The switch is located in the passenger's footwell, in the upper right corner. For more information regarding the fuel pump shut-off switch, refer to the Roadside Emergencies chapter of your Owner's Guide.

LOCATION OF SPARE TIRE AND TOOLS The spare tire and jack are located in the trunk below the carpeted floor panel. The necessary tools are contained in the tool bag. For complete details on how to change your tire, refer to the Roadside Emergencies chapter in your Owner's Guide.

ROADSIDE ASSISTANCE During your Ford Fusion's warranty period, the assurance and support of a 24-hour emergency roadside assistance program is included. Roadside assistance includes such services as fuel delivery, tire changes, jump starts, help when you are locked out of your vehicle, and towing. To receive roadside assistance in the United States, call (800) 241-3673. In Canada, call (800) 665-2006.

FEATURES

MOON ROOF

(if equipped)
The moon roof is equipped with a one-touch, express opening, closing, and venting feature. To open the moon roof, press and release the rear portion of the control. To close the moon roof, press and release the front portion of the control. To stop motion at any time during the one-touch operation, press the control a second time.



INTEGRATED KEYHEAD / KEYFOB TRANSMITTER

Your vehicle comes equipped with two specially programmed Integrated Keyhead Transmitters (IKTs). IKTs are both a programmed ignition key and a remote keyless entry transmitter.



Press once to unlock the driver's door. The interior lamps will illuminate. Press twice to unlock all the doors. Press once to lock all the doors and activate the perimeter alarm system (if equipped).

Press twice to confirm all the doors and trunk are closed. The horn will chirp and the turn signal lamps will flash once if all the doors and the trunk are closed. Press and release to activate the panic alarm. (A short press and release can be used to deactivate the panic alarm.) Press twice within 3 seconds to open the trunk. Ensure that you keep the IKT adhesive security label in a safe place for future reference. Press twice within 3 seconds to activate the car finder feature; your horn will chirp and your turn signal lamps will flash. It is recommended that this method be used to locate your vehicle, rather than using the panic alarm.

SECURILOCK™

The SecuriLock™ passive anti-theft system is an engine immobilization system. This system is designed to help prevent the engine from being started unless a coded Integrated Keyhead Transmitter (IKT) programmed to your vehicle is used. Using the wrong type of coded key may lead to a "no start" condition. The anti-theft indicator in the instrument cluster will flash to indicate the SecuriLock system is functioning and as a theft deterrent when the ignition is turned off.

AUTOLOCK/AUTO UNLOCK

(if equipped)
Autolock automatically locks all vehicle doors when all the doors are closed, the ignition is in the RUN position, you shift into any gear that puts the vehicle into motion, and the vehicle is moving above 12 mph (20 km/h). Auto unlock automatically unlocks all the doors when the vehicle has been traveling above 12 mph (20 km/h), comes to a complete stop, and the driver door is opened within 10 minutes of the ignition being turned off. **Note:** For instructions on disabling autolock, please refer to your Owner's Guide or see your authorized dealer.

BELT-MINDER®

The Belt-Minder® is a supplemental warning system which intermittently chimes to alert the driver and passenger if their safety belts are not fastened. For further information, please refer to your Owner's Guide.

REAR SEAT RELEASE

Both rear seats can be folded down for additional cargo space. Pull the release handles located inside the trunk to fold down the seats.

VISORS

Your vehicle may have a slide on rod feature that provides additional sunlight coverage. Rotate the visor towards the side window and extend it rearward. **Note:** The visor must be retracted before moving it back into the normal position.



1. TUNE/DISC SELECTOR: Press and release to manually advance up/down the radio frequency or to access the next/previous disc. Also used to make selections within the MENU function.

2. TEXT/SCAN: Press and hold for a brief sampling of radio stations or CD tracks. Press again to stop. In CD/MP3 mode, press TEXT to display track title, artist name and disc title.

3. MENU: Press to toggle through:
TO SET THE CLOCK (if not equipped with an in-dash clock): Press MENU until SET HOUR and SET MINUTES is displayed. Press to set the time.

OCCUPANCY MODE*: Use to select and optimize sound for ALL SEATS, DRIVERS SEAT or REAR SEATS.

SPEED SENSITIVE VOLUME: Radio volume automatically changes slightly with vehicle speed to compensate for road and wind noise. Recommended level is 1-3. SPEED OFF turns the feature off and level 7 is the maximum setting.

RBDS - Radio Broadcast Data System (if equipped): In FM mode, this feature allows you to search for certain categories of music. For more information, please refer to your Owner's Guide.

TRACK/FOLDER MODE: Available on MP3 discs in CD mode only. Press to toggle between Track and Folder mode. In track mode, press SEEK to scroll through all tracks on the disc. In folder mode, press SEEK to scroll through all tracks within the selected folder.

Please refer to your Owner's Guide for information regarding the Autoselect and Compression Menu features.

4. : If your vehicle is equipped with SYNC (late availability), press to access SYNC PHONE features. For further information please refer to your SYNC supplement. If your vehicle is not equipped with SYNC, the display will read NO PHONE.

SATELLITE RADIO CONTROLS (if equipped)
5. AUX: Press repeatedly to cycle through SAT1, SAT2, SAT3 (satellite radio mode if equipped), LINE IN (auxiliary audio mode) and SYNC (late availability - if equipped). Once Satellite Radio mode is activated you may use the following functions:
Press MENU until CATEGORY MODE appears in the display. Press to select from various categories of music (country, rock, etc.) and press and hold or TEXT/SCAN to search for channels playing that specific category of music.

Press to access the previous/next channels. Press and release TEXT/SCAN to display the current song title. Press again to scroll through the current song title, artist, channel category and the SIRIUS long channel name. Press and hold for a brief sampling of the next channels. Press again to stop. Satellite radio is available only with a valid SIRIUS radio subscription. Check with your authorized dealer for availability. If your vehicle is equipped with SYNC, please refer to the SYNC supplement for further information.

6. SHUFFLE: Press SHUFFLE to engage shuffle mode. CD tracks will begin to randomly shuffle after the current track. Press SEEK to begin shuffle mode right away. Press SHUFFLE again to disengage.

7. FLOOR: Distributes air through the front and rear floor ducts.

8. DEFROST/FLOOR: Distributes outside air through the windshield defroster and demister vents. Can be used to clear thin ice or fog from the windshield.

9. MAX COOLING: Press Panel , A/C , recirculation control , set the temperature to 60°F (16°C) and set the blower to the highest setting.



1. AUTO: Press to activate automatic temperature control. The system will automatically determine fan speed, airflow location, A/C (on or off) and outside or recirculated air, to heat or cool the vehicle to reach the desired temperature. Press again to deactivate.

2. DEFROST: Distributes outside air through the windshield defroster and demister vents. Can be used to clear thin ice or fog from the windshield.

3. REAR WINDOW DEFROSTER: Press to clear the rear window of thin ice and fog. Press again to deactivate. The defroster will turn off automatically after 10 minutes. If your vehicle is equipped with both a rear defroster and heated mirrors, the same button will activate both.

4. EXT: Press to display the outside air temperature. Press again to display cabin temperature settings.

MANUAL OVERRIDE CONTROLS: Allows you to manually determine where airflow is directed. To return to fully automatic control, press AUTO.

5. PANEL: Distributes air through the instrument panel and center console registers (if equipped).

6. PANEL/FLOOR: Distributes air through the instrument panel, center console registers and the front and rear seat floor ducts.

7. FLOOR: Distributes air through the front and rear floor ducts.

8. DEFROST/FLOOR: Distributes air through the windshield defroster ducts, demister outlets and the front and rear floor ducts.

9. MAX COOLING: Press Panel , A/C , recirculation control , set the temperature to 60°F (16°C) and set the blower to the highest setting.

10. RECIRCULATION CONTROL: Press to recirculate cabin air. Recirculated air may reduce the amount of time needed to cool down the interior of the vehicle and may also help reduce undesirable outside odors from reaching the interior of the vehicle. To reduce window fogging, do not drive with the recirculated air engaged and A/C off.

DRIVER/PASSENGER HEATED SEATS: (if equipped) Press once for high heat (two lights), twice for low heat (one light) and a third time to deactivate (no lights).

FORD FUSION QUICK REFERENCE GUIDE 2008



THE NEW DEFINITION OF QUALITY



Welcome to the new definition of quality – bold styling and great driving dynamics combined. Ford Fusion's sleek and athletic lines assure heads will turn; just as the dynamic powertrain assures a powerful yet effortless drive. From the sensuous, modern interior to the available V6 engine that lies beneath the hood, every component has been designed with you in mind. Sporty, comfortable and efficient, the Ford Fusion has it all. This Quick Reference Guide will help you quickly get to know the features of your new Ford Fusion. For more detailed information, refer to your Owner's Guide. Use extreme caution with any feature or device that may take your attention off the road. Your primary concern is safe operation of your vehicle. Only use non-essential features or devices when it is safe to do so.



INSTRUMENT PANEL

1. POWER OUTSIDE MIRRORS

Rotate the control clockwise to adjust the right mirror. Rotate the control counterclockwise to adjust the left mirror. Move the control in the direction you wish to tilt the mirror. Return the control to the center position to lock the mirrors in place.



2. HEADLAMPS, FOG LAMPS (if equipped) & PANEL DIMMER CONTROL

Turn the control one position to the right P^F to turn on the parking lamps, instrument panel lamps, license plate lamps and tail lamps. Turn the control to the position to turn on the headlamps. Turn the control to the position to activate the autolamp feature (if equipped), which automatically turns the exterior lamps on and off, based on available daylight. The system also keeps the lights on for a short time after the ignition is turned off. Pull the control out to activate the fog lamps (if equipped). The fog lamp indicator light will illuminate. The fog lamps will not operate when the control is turned off or when the high beams are on. Use the panel dimmer control to adjust the level of brightness on the instrument panel during parking lamp and headlamp operation. Move the control to the full upright position, past the detent, to turn on the interior lamps.



3. STEERING WHEEL CONTROLS (if equipped)

Your steering wheel controls allow you to set and adjust vehicle speed, as well as make adjustments in your audio and climate control systems. The appearance of your vehicle's speed control switches may vary according to your option package. To set the speed control, press and release ON. Accelerate to the desired speed. Press and release SET (+). The speed control indicator light will illuminate in the cluster. Remove your foot from the accelerator. Once set, press and release (-) SET (+) to decrease or increase the speed in small increments. Or, press and hold until you reach the desired speed. To disengage speed control but not erase the previous set speed, tap the brake pedal or clutch pedal (if equipped). Press RESUME to turn back on at previous speed. To disengage and erase the speed, press OFF.



Press – TEMP + to decrease/increase the cabin temperature.

Press – FAN + to decrease/increase fan speed.


Press – VOL + to decrease/increase audio volume.

Press MEDIA to select AM, FM1, FM2, CD or LINE IN (Auxiliary Input Jack).

Press to access the previous/next preset station or CD track.

4. TILT/TELESCOPIC STEERING WHEEL LEVER

Push the lever down to unlock the steering column. Move the steering wheel up or down and in or out to find the desired position. While holding the steering wheel in place, pull the lever up to lock the steering column.

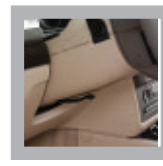

5. MESSAGE CENTER (if equipped)

The message center displays important vehicle information through a constant monitoring of vehicle systems. The message center displays features such as trip odometer, compass (if equipped), distance to empty, average fuel economy, average speed and a language selector. The message center also provides vehicle system checks and will notify you of potential vehicle problems with a display of system warnings. For further information, please refer to your Owner's Guide.



INFO: Press to scroll through the following displays: Odometer, Trip Odometer A or B, Distance to Empty, Average Fuel Economy, Average Speed, Compass (if equipped), and Trip elapsed time 1 or 2.

RESET: Press and hold to select and reset functions shown in the Info (Information) and Setup Menu.
SETUP: Press to scroll through: System Check, Units (English/Metric), Language, (English, Spanish, or French), Easy entry/exit seat (if equipped) and Reverse Sensing System (Park Assist) (if equipped).

6. PASSENGER AIRBAG OFF

Your vehicle has a safety feature that automatically knows when to turn off the passenger airbag based on the occupant's size and weight. When the system senses no weight or light to medium weight (such as a heavy binder or suitcase), in the front passenger seat, the PASS AIRBAG OFF indicator lamp (located above the radio) will illuminate, signifying the passenger airbag is turned off.

7. GLOVE BOX CD STORAGE

Your vehicle is equipped with a special area for your CD storage. It is located inside the glove box, to the right of the main bin.

AUXILIARY POWER POINTS

The auxiliary power points are located on the instrument panel and in the center console utility compartment. **Note:** Do not use the power point over the capacity of 12VDC/180W.




USB PORT (if equipped)

Your vehicle may be equipped with a USB port inside your center console. This feature allows you to plug in media playing devices, memory sticks, and also to charge devices. For more detailed information, please refer to the SYNC supplement.

AUXILIARY INPUT JACK

Your vehicle is equipped with an Auxiliary Input Jack located inside the console bin. This allows you to plug and play auxiliary audio devices. Press the AUX button until LINE IN appears. When LINE IN appears in the display, plug in your auxiliary audio device. For more detailed information, please refer to your Owner's Guide.

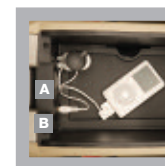

AMBIENT LIGHTING (if equipped)

Ambient Lighting provides colored background lighting to the 4 footwells, 2 cupholders and the storage bin. An ambient lighting control switch is provided on the center console. Pressing this switch cycles thru and selects one of seven possible colors or may also be used to turn ambient lighting off. Ambient Lighting turns on whenever the ignition switch is turned to the ON or Accessory position. Ambient Lighting stays on after the ignition is turned off, turning off after a door is opened or 10 minutes has elapsed.



1. Service Engine Soon Light

The Service Engine Soon light illuminates briefly when the ignition is turned on. If it remains on or is blinking after the engine is started, the On Board Diagnostics System (OBD-II) has detected a malfunction. Drive in a moderate fashion and have your vehicle serviced immediately by an authorized dealer.

2. Anti-lock Brake System (ABS) Warning Light

(if equipped) The ABS light illuminates briefly when the ignition is turned on. If the ABS light remains on or flashes after the engine is started, have the system serviced immediately by your authorized dealer. Normal braking (without ABS) will still be functional unless the brake system warning light is also illuminated. **Note:** It is normal to feel a pedal pulsation or hear a slight noise when the ABS system is activated.

3. Airbag Readiness Light

The airbag readiness light illuminates briefly when the ignition is turned on. If this light remains on or continues to flash after the engine is started, the supplemental restraint system has detected a malfunction. If a malfunction is detected, a chime will also sound. Have the system serviced immediately by an authorized dealer.

4. Brake System Warning Light

The brake system warning light illuminates briefly when the ignition is turned on. This light will remain on when the parking brake is applied and the ignition is on. If this light remains on after releasing the parking brake, this indicates a low brake fluid level or a brake system malfunction. Have the brake system inspected immediately by an authorized dealer.

5. Check Fuel Cap Light

This light illuminates when the fuel cap may not be properly installed. If you continue to drive with this light illuminated, the Service Engine Soon light may come on.

6. Throttle Control / Transmission Light

This light illuminates when a powertrain or AWD (if equipped) malfunction has been detected. Contact an authorized dealer as soon as possible.

7. Traction Control™ Light

(if equipped) This light illuminates when the Traction Control™ is active. If the light remains on, have the system serviced immediately by an authorized dealer.