


HUSSMANN®



ISLA **IM-H & IM-HHL** **Multi-Deck Display** Hot Merchandisers

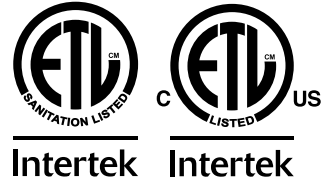

Installation & ***Operation Manual*** Shipped with Technical Data Sheets

P/N 3033499_D



BEFORE YOU BEGIN

Read these instructions completely and carefully.



ANSI Z535.5 DEFINITIONS

- **DANGER** – Indicate[s] a hazardous situation which, if not avoided, will result in death or serious injury.
- **WARNING** – Indicate[s] a hazardous situation which, if not avoided, could result in death or serious injury.
- **CAUTION** – Indicate[s] a hazardous situation which, if not avoided, could result in minor or moderate injury.
- **NOTICE** – Not related to personal injury – Indicates[s] situations, which if not avoided, could result in damage to equipment.

The information contained in this document is the property of Hussmann Corporation and shall not be used in whole or in part without written permission.

WARNING

Proper Field Wiring and Grounding Required!
Failure to follow code could result in death or serious injury. All field wiring **MUST** be performed by qualified personnel. Improperly installed and grounded field wiring poses **FIRE** and **ELECTROCUTION** hazards. To avoid these hazards, you **MUST** follow requirements for field wiring installation and grounding as described in NEC and your local/state electrical codes.

WARNING

PERSONAL PROTECTION EQUIPMENT (PPE)

Only qualified personnel should install and service this equipment. Personal Protection Equipment (PPE) is required whenever installing or servicing this equipment. Always wear appropriate PPE as required by OSHA regulations, as well as all other federal, state and local codes. PPE may include, but is not limited to, safety glasses, gloves, protective boots or shoes, long pants, and a long-sleeve shirt. Observe all precautions on tags, stickers, labels and literature attached to this equipment.

CAUTION

This manual was written in accordance with originally prescribed equipment that is subject to change. Hussmann reserves the right to change all or part of the equipment for future stores such as, but not limited to, controllers and electrical specifications.

WARNING

— LOCK OUT / TAG OUT —

To avoid serious injury or death from electrical shock, always disconnect the electrical power at the main disconnect when servicing or replacing any electrical component. This includes, but is not limited to, such items as controllers, electrical panels, condensers, lights, fans, and heaters.

Table of Contents

1. General Instructions.....	iv
Installation Tool List.....	v
Cross Sections, Plan views, Data Sheets.....	vi
2. Installation.....	1
Unloading Cases From Trailer.....	1
Removing Shipping Skid And/Or Crate.....	1
HUSSMANN and HATCO Serial Plate Locations.....	1
Environmental Location.....	2
Uncrating.....	2
Exterior Loading.....	2
Setting and Joining.....	2
Leveling.....	2
ISLA Body Panel Removal and Installation.....	3
ISLA Lifting and Transport Instructions.....	5
3. Electrical.....	8
Wiring Color Code.....	8
Electrical Circuit Identification.....	8
Field Wiring and Serial Plate Amperage.....	8
Ballast Location.....	8
Shelf Connectors / Recptacle / Junction Box.....	9
4. Operation.....	10
Startup Instructions.....	10
Holding Temperature Guide.....	10
Holding Temperature Guidelines.....	10
Instruction sheet for Heated Shelves.....	11
5. Maintenance.....	12
General.....	12
General Cleaning Directions.....	12
Cleaning Instructions.....	12
Stainless Steel Cleaning and Care.....	12
6. Electrical Wiring Diagrams.....	13
7. Troubleshooting Guide.....	2-1
8. Hatco Limited Warranty.....	2-3
9. Hussmann Warranty.....	2-4
10. Service Record.....	2-5

IMPORTANT
KEEP THIS DOCUMENT IN YOUR STORE FOR FUTURE REFERENCE

Quality that sets industry standards!

HUSSMANN[®]

12999 St. Charles Rock Road • Bridgeton, MO 63044-2483

U.S. & Canada 1-800-922-1919 • Mexico 1-800-890-2900

www.hussmann.com

© 2021 Hussmann Corporation

1. General Instructions

IMPORTANT

KEEP THIS DOCUMENT IN YOUR STORE FOR FUTURE REFERENCE

HUSSMANN®

13770 Ramona Avenue
Chino, California 91710
(909) 628-8942 FAX
(909) 590-4910

12999 St. Charles Rock Road
Bridgeton, MO 63044-2483
U.S. & Canada
1-800-922-1919

This Booklet Contains Information on: *ISLA ADVANTAGE HOT MULTI-DECK CASES*. Self Service Hot cases designed to fit within a line-up of multi-deck self service cases or at the end of a line-up.

Shipping Damage

All equipment should be thoroughly examined for shipping damage before and during unloading.

This equipment has been carefully inspected at our factory and the carrier has assumed responsibility for safe arrival. If damaged, either apparent or concealed, claim must be made to the carrier.

Apparent Loss or Damage

If there is an *obvious loss or damage*, it must be noted on the freight bill or express receipt and signed by the carrier's agent; otherwise, carrier may refuse claim. The carrier will supply necessary claim forms.

Concealed Loss or Damage

When loss or damage *is not apparent until after equipment is uncrated*, a claim for concealed damage is made. Make request in writing to carrier for inspection within 15 days, and retain all packaging. The carrier will supply inspection report and required claim forms.

Shortages

Check your shipment for any possible shortages of material. If a shortage should exist and is found to be the responsibility of Hussmann, *notify Hussmann*. If such a shortage involves the carrier, *notify the carrier immediately*, and request an inspection. Hussmann will acknowledge shortages within ten days from receipt of equipment.

Hussmann Product Control

The serial number and shipping date of all equipment has been recorded in Hussmann's files for warranty and replacement part purposes. All correspondence pertaining to warranty or parts ordering must include the serial number of each piece of equipment involved, in order to provide the customer with the correct parts.

Keep this booklet with the case at all times for future reference.

General Instructions Cont'd

REVISION HISTORY

REVISION D
New Format; added case model H-HHL

Original Issue



INSTALLATION TOOL LIST



UNLOADING FROM TRAILER:

Lever Bar
*(also known as a Mule, Johnson Bar, J-bar, Lever Dolly,
and pry lever)*
Moving Dolly



SETTING CASE LINE-UP:

Level, 4 ft suggested
Ratchet
1/4 in. Socket
5/16 in. Socket
1/2 in. Socket
Battery Drill/Screw Gun
Caulking Gun
10 in. Adjustable Crescent Wrench



This warning does not mean that Hussmann products will cause cancer or reproductive harm, or is in violation of any product-safety standards or requirements. As clarified by the California State government, Proposition 65 can be considered more of a ‘right to know’ law than a pure product safety law. When used as designed, Hussmann believes that our products are not harmful. We provide the Proposition 65 warning to stay in compliance with California State law. It is your responsibility to provide accurate Proposition 65 warning labels to your customers when necessary. For more information on Proposition 65, please visit the California State government website.

CROSS SECTIONS, PLAN VIEWS, DATA SHEET (IM-H)




SELF SERVICE MULTI-DECK HOT CASE


HUSSMANN - IM - 0(3, 4, 5) - (X*)(3, 4, 5, 6) - H (CHINO)

IM-H



IM-03-H
Self service hot module

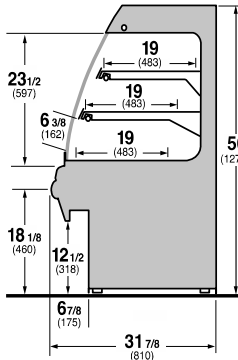


IM-04-H
Hot Multi-Deck

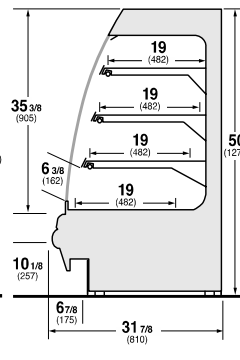


IM-05-H
Hot Multi-Deck

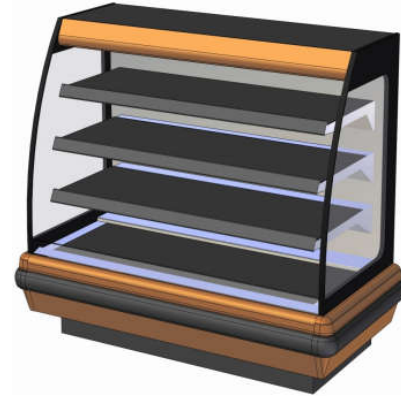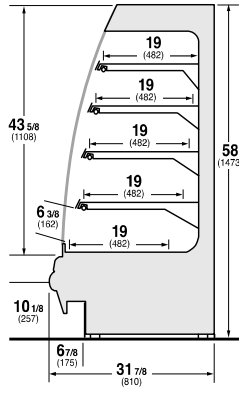

IM-C5-H Center Module | **IM-45-H** C-Series Match

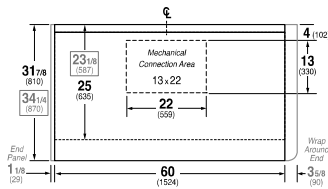

IM-E5-H End Module

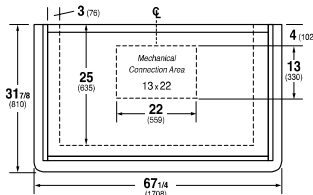

ELECTRICAL DATA:

208 VOLT MODELS *	VOLTS	PH	HZ	TOTAL HOT LEVELS ***	WATTS	AMPS	WIRES **	CANOPY LIGHTS		SHELF LIGHTS		OPTIONAL LEDGE LIGHTS		TOTAL LIGHTS		
								AMPS	WATTS	#ROWS	AMPS	WATTS	AMPS	WATTS	AMPS	WATTS
IM-03-X3-H208	208	1	60	3	1789	8.6	4	0.19	21	2	0.38	42	N/A	N/A	0.57	63
IM-03-X4-H208	208	1	60	3	2517	12.1	4	0.26	28	2	0.52	56	N/A	N/A	0.78	84
IM-03-X5-H208	208	1	60	3	3224	15.5	4	0.32	35	2	0.52	56	N/A	N/A	0.84	91
IM-03-X6-H208	208	1	60	3	3890	18.7	4	0.38	42	2	0.66	70	N/A	N/A	1.04	112
IM-03-X8-H208	208	1	60	3	5013	24.1	4	0.52	56	2	0.76	84	N/A	N/A	1.28	140
IM-04-X3-H208	208	1	60	4	2371	11.4	4	0.19	21	3	0.57	63	N/A	N/A	0.76	84
IM-04-X4-H208	208	1	60	4	3328	16	4	0.26	28	3	0.78	84	N/A	N/A	1.04	112
IM-04-X5-H208	208	1	60	4	4306	20.7	4	0.32	35	3	0.96	105	N/A	N/A	1.28	140
IM-04-X6-H208	208	1	60	4	5200	25	4	0.38	42	3	1.14	126	N/A	N/A	1.52	168
IM-04-X8-H208	208	1	60	4	6323	30.4	4	0.52	56	3	1.14	126	N/A	N/A	1.66	182
IM-05-X3-H208	208	1	60	5	2954	14.2	4	0.19	21	4	0.76	84	N/A	N/A	0.95	105
IM-05-X4-H208	208	1	60	5	4160	20	4	0.26	28	4	1.04	112	N/A	N/A	1.30	140
IM-05-X5-H208	208	1	60	5	5366	25.8	4	0.32	35	4	1.28	140	N/A	N/A	1.60	175
IM-05-X6-H208	208	1	60	5	6490	31.2	4	0.38	42	4	1.52	168	N/A	N/A	1.90	210
IM-05-X8-H208	208	1	60	5	8320	40	4	0.52	56	4	2.08	224	N/A	N/A	2.60	280

240 VOLT MODELS *	VOLTS	PH	HZ	TOTAL HOT LEVELS ***	WATTS	AMPS	WIRES **	CANOPY LIGHTS		SHELF LIGHTS		OPTIONAL LEDGE LIGHTS		TOTAL LIGHTS		
								AMPS	WATTS	#ROWS	AMPS	WATTS	AMPS	WATTS	AMPS	WATTS
IM-03-X3-H240	240	1	60	3	1800	7.5	4	0.19	21	2	0.38	42	N/A	N/A	0.57	63
IM-03-X4-H240	240	1	60	3	2528	10.5	4	0.26	28	2	0.52	56	N/A	N/A	0.78	84
IM-03-X5-H240	240	1	60	3	3216	13.4	4	0.32	35	2	0.64	70	N/A	N/A	0.96	105
IM-03-X6-H240	240	1	60	3	3888	16.2	4	0.38	42	2	0.76	84	N/A	N/A	1.14	126
IM-04-X3-H240	240	1	60	4	2376	9.9	4	0.19	21	3	0.57	63	N/A	N/A	0.76	84
IM-04-X4-H240	240	1	60	4	3336	13.9	4	0.26	28	3	0.78	84	N/A	N/A	1.04	112
IM-04-X5-H240	240	1	60	4	4296	17.9	4	0.32	35	3	0.96	105	N/A	N/A	1.28	140
IM-04-X6-H240	240	1	60	4	5208	21.7	4	0.38	42	3	1.14	126	N/A	N/A	1.52	168
IM-05-X3-H240	240	1	60	5	2952	12.3	4	0.19	21	4	0.76	84	N/A	N/A	0.95	105
IM-05-X4-H240	240	1	60	5	4176	17.4	4	0.26	28	4	1.04	112	N/A	N/A	1.30	140
IM-05-X5-H240	240	1	60	5	5376	22.4	4	0.32	35	4	1.28	140	N/A	N/A	1.60	175
IM-05-X6-H240	240	1	60	5	6480	27	4	0.38	42	4	1.52	168	N/A	N/A	1.90	210
IM-05-X8-H240	240	1	60	5	8352	34.8	4	0.52	56	4	2.08	224	N/A	N/A	2.60	280

* X = C, E, I C = CENTER, E = END, I = INLINE

** INCLUDES GROUND WIRE

*** TOTAL HEATED LEVELS = # ROWS OF SHELVES + BOTTOM WARMING SURFACE

LEGEND			
N/A -	NOT AVAILABLE		
TBD -	TO BE DETERMINED		
SBO -	SUPPLIED BY OTHERS		
EXTERNAL END PANEL WIDTH KEY			
# OF END PNLS	END PNL WIDTH (IN.)	TRIPLE ADDED LENGTH (IN.)	
1	1.125	1.125	
2	1.125	2.25	

MODULE NOMENCLATURE KEY:	
IM =	ISLA MODULE
*** 03 =	3 HEATED LEVELS, 50" HIGH W/ +8" BASE
*** 04 =	4 HEATED LEVELS, 50" HIGH
*** 05 =	5 HEATED LEVELS, 58" HIGH
* C, E, I =	CENTER, END or INLINE CASE
(#) =	(MODULE LENGTH IN FEET)
H =	HOT SELF SERVICE MULTIDECK
EXAMPLE	IM-04-E5-H = ISLA MODULE, 50" HIGH, END 5" WIDE, HOT SELF-SERVICE MULTI-DECK

OPTIONS/NOTES:




- NOTE: CASE WIDTH INCLUDES END PANELS WITH OPTIONAL INTERIOR END PANELS
- NOTE: CASES MUST BE GROUNDED
- NOTE: LED LIGHTS ARE NOT AVAILABLE ON HOT CASES AT THIS TIME.
- NOTE: FOR TOTAL ELECTRICAL LOADS ADD LIGHT AMPS HOT LEVEL AMPS.

CROSS SECTIONS, PLAN VIEWS, DATA SHEET IM-HHL



SELF SERVICE MULTI-DECK HOT CASE
HUSSMANN - IM05H_HL

IM-HHL

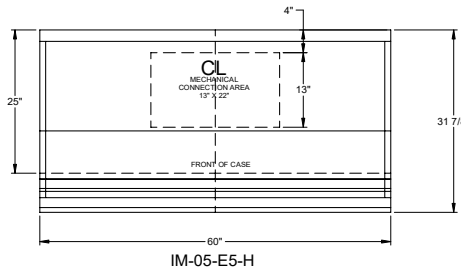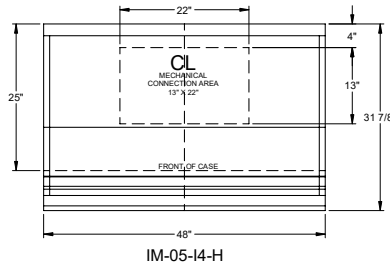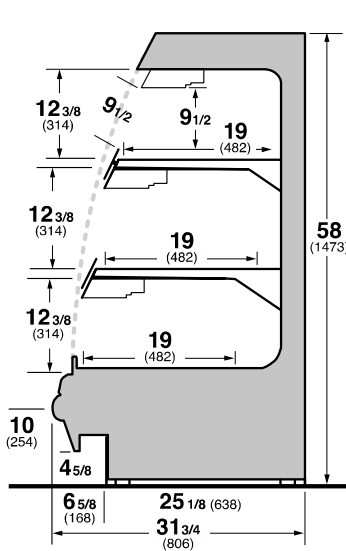


Hot Heat Lamp Case

110V Incandescent Bulbs

208V Hot Surfaces Plate

208V Field Connection

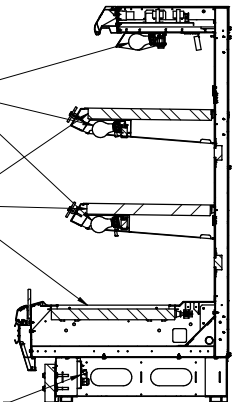

ELECTRICAL DATA:

208 VOLT MODELS *	VOLTS	PH	HZ	TOTAL HOT LEVELS ***	WATTS	AMPS	WIRES **	CANOPY LIGHTS		SHELF LIGHTS		OPTIONAL LEDGE LIGHTS		TOTAL LIGHTS		
								AMPS	WATTS	# ROWS	AMPS	WATTS	AMPS	WATTS	AMPS	WATTS
IM-05-X4-H-HL	208	1	60	3	2371	11.4	4	5.0	600	2	10.0	1200	N/A	N/A	15.0	1800
IM-05-X5-H-HL	208	1	60	3	3058	14.7	4	6.7	800	2	13.3	1600	N/A	N/A	20.0	2400
IM-05-X6-H-HL	208	1	60	3	3682	17.7	4	8.3	1000	2	16.7	2000	N/A	N/A	25.0	3000
IM-05-X8-H-HL ^x	208	1	60	3	2371	11.4	4	5.0	600	2	10.0	1200	N/A	N/A	15.0	1800

LEGEND			
N/A -	NOT AVAILABLE		
TBD -	TO BE DETERMINED		
SBO -	SUPPLIED BY OTHERS		
EXTERNAL END PANEL WIDTH KEY			
# OF END PNLS	END PNL WIDTH (IN.)	TOTAL ADDED LENGTH (IN.)	
1	1.125	1.125	
2	1.125	2.25	

208 VOLT MODELS *	L1 (A)	L2 (A)	NUMBER OF CIRCUITS
IM-05-X4-H-HL	26.4	11.4	1
IM-05-X5-H-HL	28.0	21.4	1
IM-05-X6-H-HL	34.8	26.0	1
IM-05-X8-H-HL	26.4	11.4	2

MODULE NOMENCLATURE KEY:	
IM =	ISLA MODULE
C, E, I =	CENTER, END or INLINE CASE
(#) =	(MODULE LENGTH IN FEET)
H-HL =	HOT SELF SERVICE MULTIDECK with HEAT LAMPS
EXAMPLE	IM-05-E5-H-HL = ISLA MODULE, 58" HIGH, END 5' WIDE, HOT SELF-SERVICE MULTI-DECK with HEAT LAMPS

^x VALUES ARE PER CIRCUIT / CASE HAS 2 CIRCUITS
^{*} X = C, E, I C = CENTER, E = END, I = INLINE
^{**} INCLUDES GROUND WIRE
^{***} TOTAL HEATED LEVELS = # ROWS OF SHELVES + BOTTOM WARMING SURFACE

OPTIONS/NOTES:

- NOTE: CASE WIDTH INCLUDES END PANELS WITH OPTIONAL INTERIOR END PANELS
- NOTE: CASES MUST BE GROUNDED
- NOTE: LED LIGHTS ARE NOT AVAILABLE ON HOT CASES AT THIS TIME.
- NOTE: FOR TOTAL ELECTRICAL LOADS ADD LIGHT AMPS AND HOT LEVEL AMPS.

2. Installation

NOTE: READ ENTIRE INSTALLATION SECTION PRIOR TO BEGINNING INSTALL

UNLOADING CASES FROM TRAILER

To protect the case and its base from damage and make positioning the case easier, each merchandiser can be shipped differently, depending on the original order request. Your case(s) could be on a skid, rails, crated and skidded, or just blanket wrapped.

Improper handling may cause damage to the merchandiser when unloading. To avoid damage:

1. Do not drag the merchandiser out of the trailer. Use a Johnson bar (mule, aka J-bar), a dolly or a forklift.
2. Use one or two dollies depending on length of the case to remove the merchandiser from the trailer.
3. Use one to two dollies to relocate the merchandisers to the lineup.

NOTE:

When lifting case, be sure to lift case from a point on *case body*. Improper lifting may damage factory-installed end panels.

See Following Diagramed Pages

REMOVING SHIPPING SKID AND/OR CRATE

DO NOT TILT or LAY MERCHANDISER ON ITS SIDE.

1. Check floor where cases are to be set to see if it is a level area. Determine the highest part of the floor.
2. If the case is crated, unscrew/remove nails from **one (1) of the walls** of the crate, leaving three (3) sides and the top of the crate.
3. Then unscrew/remove the nails from around the base of the crate (frame), releasing it from the skid.

HUSSMANN CORPORATION • BRIDGETON, MO 63044-2483 U.S.A.

4. CAREFULLY remove/slide away the remaining 3 walls and top of the crate. (body panels should be on the case, but if they are not, carefully remove and set aside in safe place so as not to be damaged/scratched)
5. Remove any braces/L-brackets attaching the merchandiser to the skid.
6. Remove the merchandiser from skid, by lifting only at base of case, using the case's rails!
7. Once the case is removed from the skid, the merchandiser must be lifted **—NOT PUSHED—** to reposition.



HUSSMANN AND HATCO SERIAL PLATE LOCATIONS

DOCUMENT ALL SERIAL NUMBERS PRIOR TO HEATING!

Depending what type of case ordered (with or without rear doors on the back of the case), the Hussmann serial plate is either located:

1. (no rear on back) the top FRONT left-hand interior rear wall
2. (with rear loading doors) in the lower left corner on the BACK of the case.

Make note of the case's serial number in the area provided at the end of this guide.

HATCO serial numbers for each of the surface warmers are located under each warmer.

Document the serial numbers in the space provided at the end of this guide.

EXTERIOR INFORMATION

Do **NOT** walk on top of or inside of merchandisers or damage to the merchandisers and serious personal injury could occur. **They are not structurally designed to support excessive external loading such as the weight of a person.**

Do not place flammable materials or objects on top of the merchandiser.

Hot Merchandiser
ISLA IM-H & IM-HHL

Installation (Cont'd)

ENVIRONMENTAL LOCATION

These merchandisers have been designed for use only in air conditioned stores where temperature and humidity are maintained at or below 75°F and 55% relative humidity. DO NOT allow air conditioning, electric fans, ovens, open doors or windows (etc.) to create air currents around the merchandiser, as this will impair its correct operation.

UNCRATING

Place the fixture as close to its permanent position as possible. Remove the top of the crate. Detach the walls from each other and remove from the skid. Unbolt the case from the skid. The fixture can now be lifted off the crate skid. Lift only at base of stand! (see following pages for details)

EXTERIOR LOADING

These models have not been structurally designed to support excessive external loading. Do not walk on their tops; This could cause serious personal injury and damage to the fixture.

SETTING AND JOINING

The sectional construction of these models enable them to be joined in line to give the effect of one continuous display. A joint trim kit is supplied with each joint.



**ATTENTION
INSTALLER**

It is the contractor's responsibility to install case(s) according to local construction and health codes.

LEVELING

IMPORTANT! IT IS IMPERATIVE THAT CASES BE LEVELED FROM FRONT TO BACK AND SIDE TO SIDE PRIOR TO JOINING. A LEVEL CASE IS NECESSARY TO INSURE PROPER OPERATION,

WATER DRAINAGE, GLASS ALIGNMENT AND OPERATION OF THE HINGES SUPPORTING THE GLASS. LEVELING THE CASE CORRECTLY WILL SOLVE MOST HINGE OPERATION PROBLEMS.

- Note:**
- A. To avoid removing concrete flooring, begin lineup leveling from the highest point of the store floor.
 - B. When wedges are involved in a lineup, set them first.



TO AVOID REMOVING CONCRETE FLOORING, BEGIN LINEUP LEVELING FROM THE HIGHEST POINT OF THE STORE FLOOR.

Levelling/Joining Instructions

Check floor where cases are to be set to see if it's level. Determine where the highest part of the floor is. Cases will be shimmed off this point. Using case blueprints, measure off and mark on floor the exact dimensions of the case footprint. Snap chalk line for front and back position of base rail. Mark location of each joint front and back. Use a transit to find the highest point along both lines. Mark the difference, and place the appropriate number of shims.

FLOORS ARE NOT LEVEL!!!

When working with two or more merchandisers to be joined, the whole lineup must be leveled on the same plane, left to right and front to back. This means that the entire lineup must be brought up to the level of the highest case in the lineup.

Along the lines previously marked, find the highest point of the floor by:

- Walking the floor and noticing any dips or mounds;
- Using a string level; and
- Using a transit.

Installation (Cont'd)

ISLA BODY PANEL REMOVAL AND INSTALLATION


Transportation:

All Lower and Bottom Body panels on the ISLA should be removed for extended transportation (jacking, lifting, crating, etc.)

Service:


For most service applications (electrical), only the Bottom Body panels need removal. Removing both panels may be more convenient.

Note: The Bumper and Price Tag Extrusion should only be serviced by a trained installation professional. Incorrect servicing will result in damage.

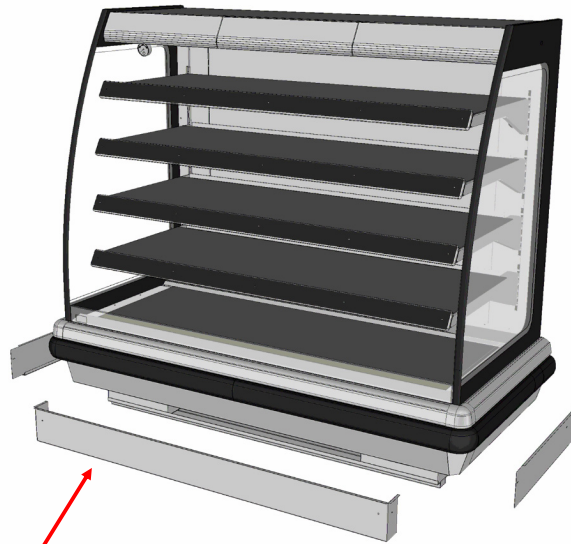


Close-offs are shipped loose and must be assembled by installer.

Installation (Cont'd)

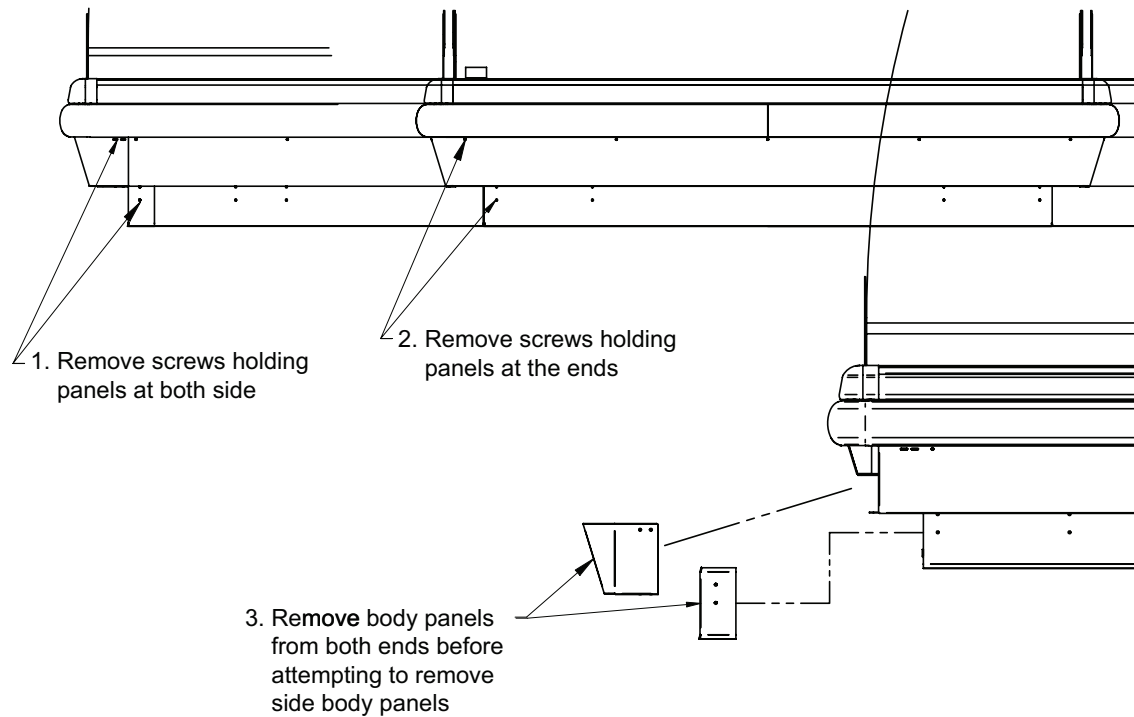


Note: The Lower and Bottom body panels can be removed independent of each other

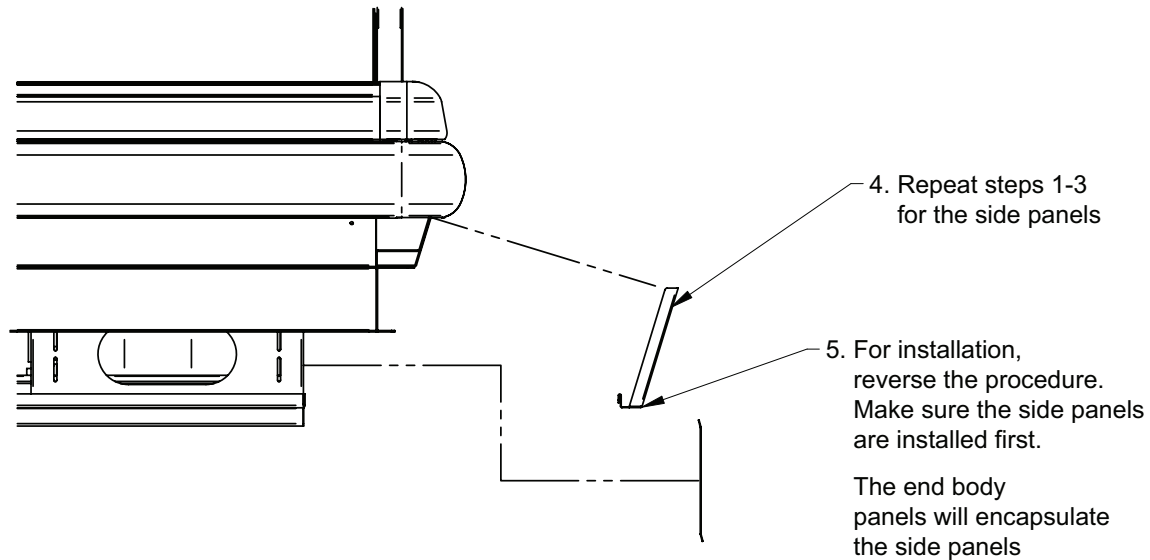

Note that lower side of the lower body panels must be properly placed around mounting surface to ensure proper fit.

Installation (Cont'd)

ISLA LIFTING AND TRANSPORT INSTRUCTIONS

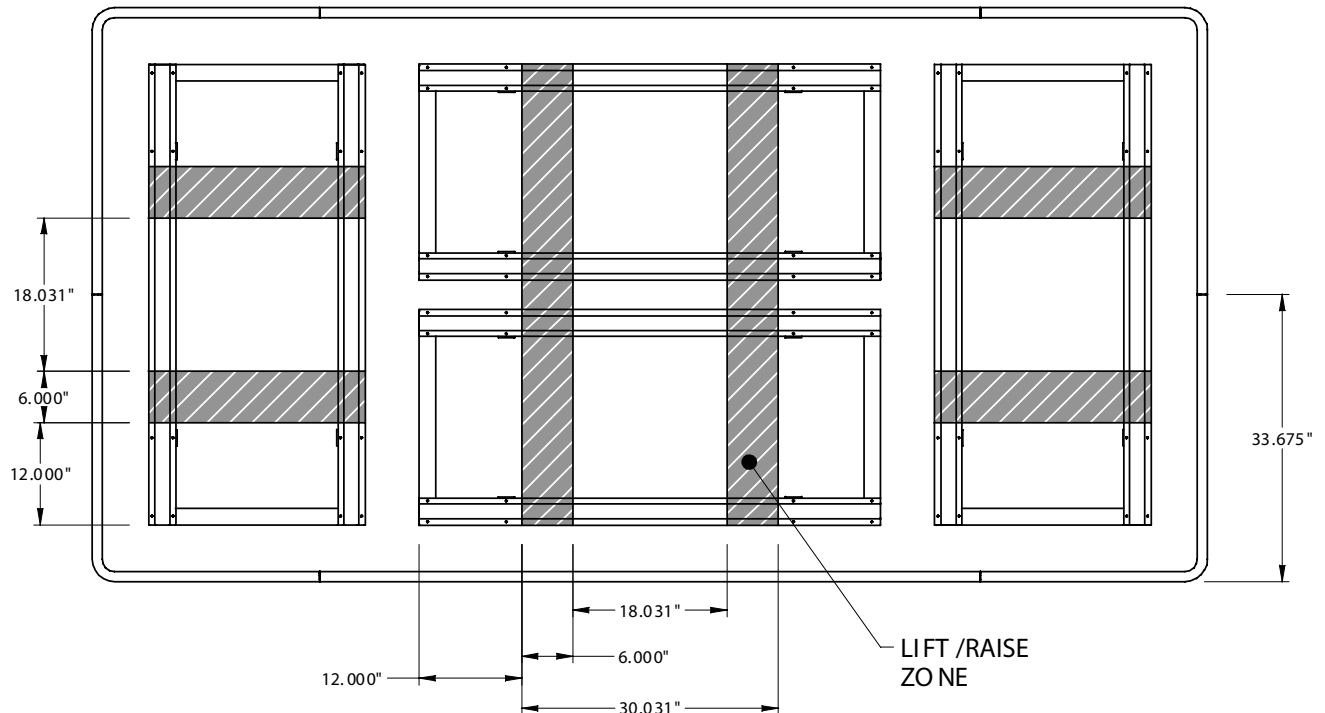


1. The ISLA can be lifted by a forklift only at the specified location in the diagram




Improper placement of forks may damage items under the case. Use a spotter when placing forks. Make sure that electrical, etc. items will not be damaged. Use J-Bars or Jacks if Forks can not be used safely

2. Remove close-offs and lower body panels before lifting with a forklift. Serious damage will occur if the body panels are not removed.
 - Remove the end case lower and bottom panels first
 - Then remove the side case lower and bottom panels
 - A Phillips head screwdriver/drill is needed for lower and bottom panel removal
3. Make sure that fork spacing and width will not damage electrical lines
4. Be sure that the forks are long enough to support beyond the center of the case. Check for proper balance before moving. A minimum fork length of 36" is recommended for 68" wide cases
5. The ISLA can be raised at one end with a forklift to allow the placement of rollers or dollies. See figure on page next page for J-bar and jacking instructions
6. Never drag or push the ISLA by ANY COMPONENT including ANY GLASS COMPONENT. This will result in damage to the base, and possibly damage to other components
7. Evenly support the entire base structure on rollers or dollies before attempting to move.

Installation (Cont'd)

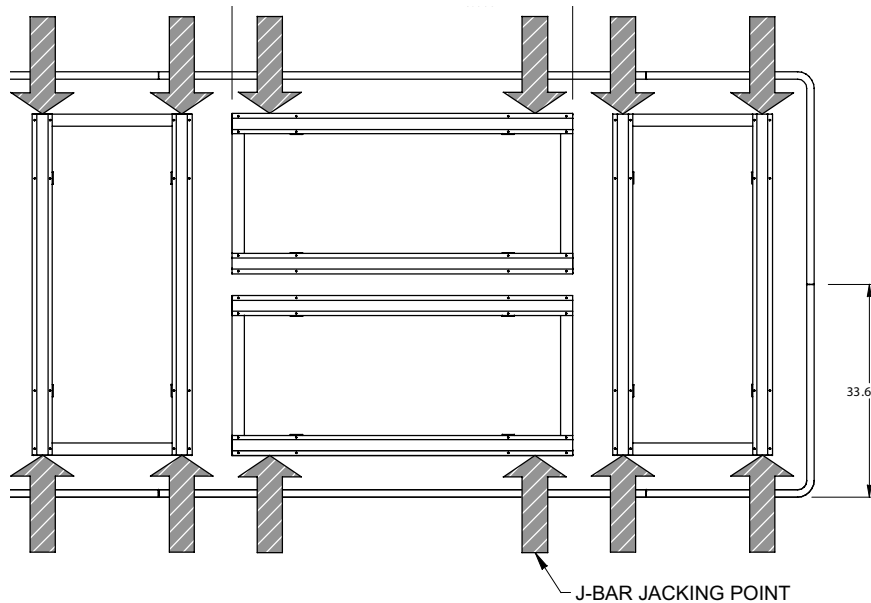

8. If using J-Bars, use the specified jacking points to raise the case
- Raise one side of the case first.
 - Use as many J-Bars as possible to lift from the base channels
 - A minimum of 2 J-Bars is required
 - Place Dollies and chock wheels before lifting the other side. Be sure that the dollies are evenly spaced to carry to weight of the case

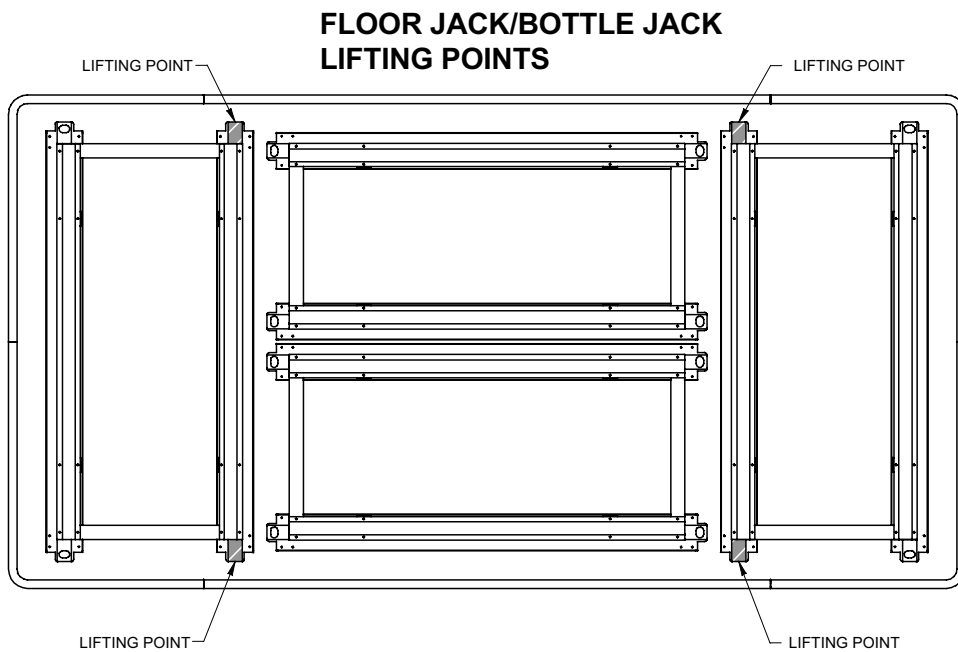

9. If using Floor-jacks or Bottle-jacks, use the recommended lifting points located at the underside of the case
- These points will be visible channels
 - Lift simultaneously to place dollies or rolle


Installation (Cont'd)



1. Do Not Push, Pull, Adjust, or Manipulate the ISLA case by any glass component.
 - Doing so will result in severe damage to such components
 - Glass Breakage may result in serious injury
 - See lifting and transport instructions for proper moving technique
2. Never stand on the ISLA Top, Deck, or any Shelves for any reason.

These surfaces are not steps and are not designed to support such loads.

 - Misusing these surfaces as steps will result in damage to the case
 - Misusing these surfaces as steps may result in serious injury to the user
 - These surfaces are intended for the storage and merchandising of food products
 - Use a ladder or designed structure to work above the case

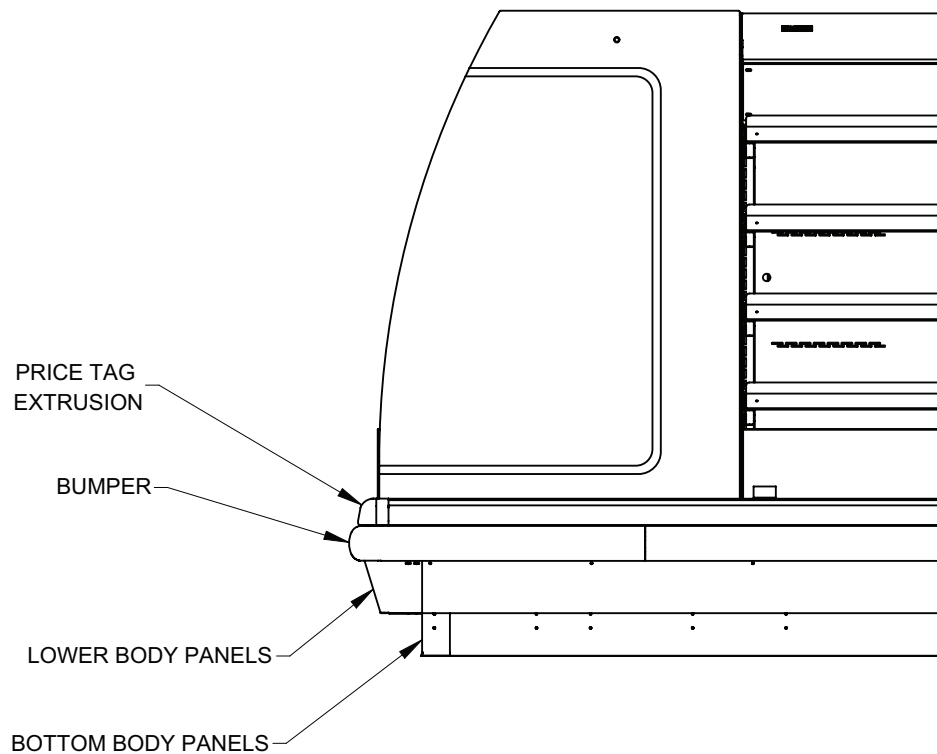


3. Electrical

WIRING COLOR CODE

<i>Standard Case Wire Color Code</i>	
<u>Color Description</u>	<u>Color</u>
■ Ground	Green
■ Anti-Sweat	Purple
■ Lights	Orange
■ Receptacles	Yellow
■ T-Stat/Solenoid 230VAC	Red/Black
■ T-Stat/Solenoid 115VAC	White/Black
■ T-Stat/Solenoid 24VAC	Red/White
■ Fan Motors	Brown
Blue Condensing Unit	

Use Copper Conductors Only
430-01-0338 R101003

CASE MUST BE GROUNDED



DANGER

**BEFORE SERVICING
ALWAYS DISCONNECT ELECTRICAL
POWER AT THE MAIN DISCONNECT
WHEN SERVICING OR REPLACING ANY
ELECTRICAL COMPONENT.**

This includes (but not limited to) Heaters and Lights.

ELECTRICAL CIRCUIT IDENTIFICATION

Standard lighting for all models will be full length fluorescent lamps located within the case. The switch controlling the lights is located at the top right of the case.

FIELD WIRING AND SERIAL PLATE AMPERAGE

Field Wiring must be sized for component amperes printed on the serial plate. Actual ampere draw may be less than specified. Most component amperes are listed in the "Wiring Diagram" section, but always check the serial plate.

BALLAST LOCATION

Ballasts are located within the access panel that runs the length of the top of the case

Electrical (Cont'd)


Shelf Connectors

LIGHT RECEPTACLE (LEFT SIDE OF CASE)




Junction Box Location


BOTTOM FRONT CENTER

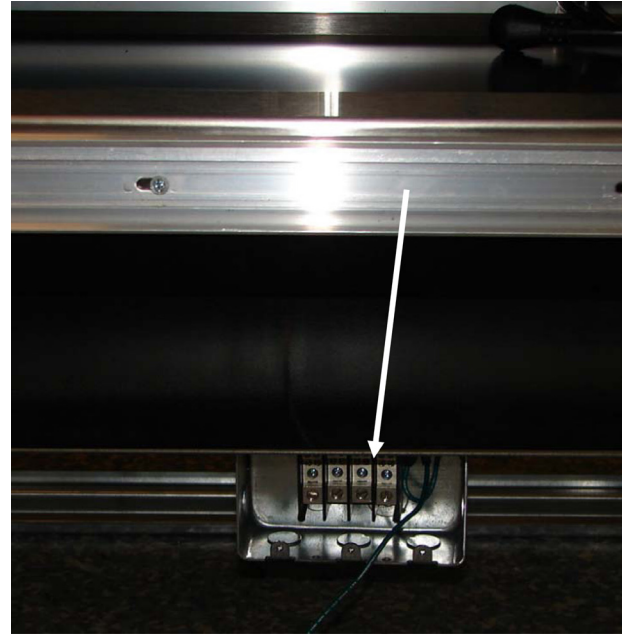

POWER/SENSOR RECEPTACLES
(RIGHT SIDE OF CASE)

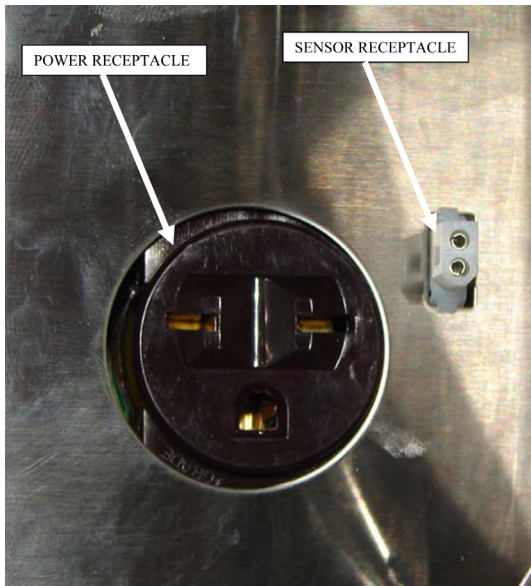

CONTROLLER AND FUSE TRAY
SHOWN IN MAINTENANCE POSITION

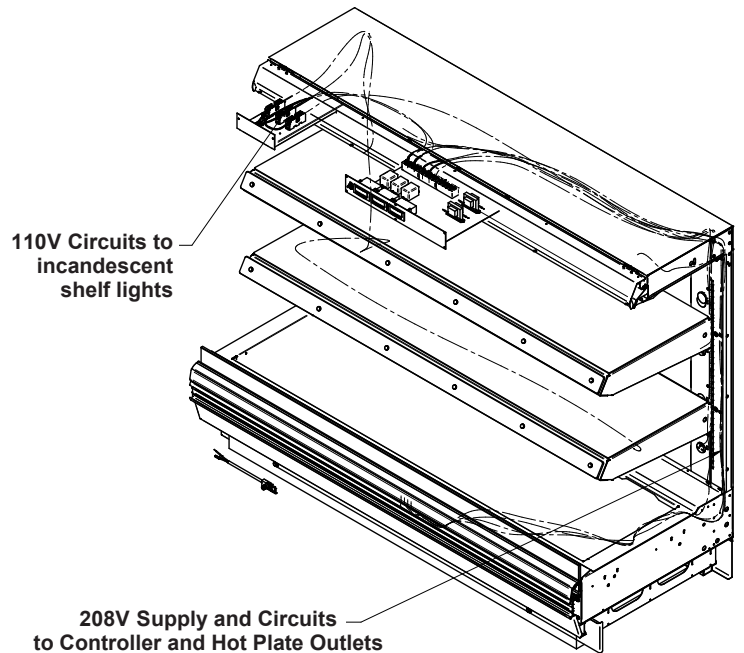

4. Operation

STARTUP INSTRUCTIONS

1. Turn Power to ON. For heat lamp cases, each row of lamps needs to be turned on using the lamp switch (right side of case).
2. Preheat merchandiser for 10 minutes before loading.
3. Load fully cooked / heated foods only (internal product temperatures > 160°F). **Case is not designed to heat food.**
4. Use only approved hot food containers in direct contact with shelves; Do NOT stack containers.
5. Check internal product temperature periodically, using a pocket food thermometer.
6. Adjust *SHELF-Setpoint as needed to maintain ideal Internal Product Temperatures:
 - (1) Press SET key,
 - (2) Press UP ARROW / DOWN ARROW keys to change *SHELFSetpoint,
 - (3) Press SET key again.
 - When increasing *SHELF-temperatures, heat food in a separate cooking/warming oven, then reload.

NOTES:

- * **Controller temperature indicates SHELF-temperature only (not Internal product temperature).**
- **Shelves are pre-set to 185°F, suitable for many foods in approved containers. Do not overheat as containers may melt.**
- **Refer to Instruction Manual for detailed operating instructions.**
- **Refer to NSF- and local- regulations for internal product temperature requirements.**
- **SERVICE: Review the Trouble Shooting Guide in this manual. For heated component failures, contact HATCO Parts and Service at 800-558-0607.**

Operation

- Food must be preheated BEFORE loading; this case MUST NOT be used to cook or heat product.
- Check Internal Product Temperatures (IPTs) periodically with a portable food thermometer
- Do not stack containers.
- Be careful not to overheat as containers may melt.
- When restocking, rotate food products: oldest foods should be placed in front and served first.
- Wipe spills immediately to maintain product freshness, minimize odors, reduce end-of-day cleanup (See Maintenance Section).

Adjustment

- Use a pocket food thermometer regularly to check internal product temperatures.
- Before adjusting shelf temperatures, ensure only pre-heated foods are being loaded into the case.
- Shelves are pre-set to 185°F, suitable for many food and container types.
- Adjust SHELF-Setpoint as needed to maintain ideal Internal Product Temperatures:

- (1) Press SET key,
 - (2) Press UP ARROW / DOWN ARROW keys to change *SHELF-Setpoint,
 - (3) Press SET key again.
 - (4) When increasing SHELF-temperatures, heat food in a separate cooking/warming oven, then reload.
- Temperature controls should be adjusted to the lowest possible setting that will maintain proper internal product temperature.
 - See troubleshooting guide if, after adjustment, pre-heated product does not maintain regulatory temperature.

HOLDING TEMPERATURE GUIDE

- Food must be preheated **BEFORE** loading the case; the case must not be used to heat product.
- Always consult local health and sanitation regulations for internal product temperature and holding requirements.
- Holding Temperatures listed below are internal product temperatures, and are guidelines only.

HOLDING TEMPERATURE GUIDELINES * Internal Product Temperatures (IPT)	
MEAT	*IPT
STEAKS - Broiled/Fried	140° - 160°F
RIBS - Beef or Pork	160°F
VEAL	160° - 175°F
HAM	160° - 175°F
PORK	160° - 175°F
CHICKEN / POULTRY	160° - 175°F
TURKEY	160° - 175°F
FISH/SEAFOOD	
FISH - Baked/Fried	160° - 175°F
LOBSTER	160° - 175°F
SHRIMP - Fried	160° - 175°F
MISCELLANEOUS	
CASSEROLES	160° - 175°F
PASTA	160° - 180°F
PIZZA	160° - 180°F
POTATOES	180°F
PLATED MEALS	140° - 165°F
VEGETABLES	160° - 175°F

Operation Cont'd

INSTRUCTION SHEET FOR HEATED SHELVES

Use the instructions below to operate the controls for a unit with multiple heated shelves. The controls are located in a remote mounted control panel and consist of a Power ON/OFF switch and three, four, or five digital temperature controllers, depending on the number of heated shelves in the unit.

Operation

Use the following instructions to operate the controls on a multi-heated shelf control panel.

1. Move the Power ON/OFF switch to the ON position.
 - The digital temperature controllers will energize and the current temperature of each shelf will appear on the corresponding display.
 - The phrase "out 1" will appear in the upper left corner of each display to show that the shelves are in heat mode.



BURN HAZARD: Some exterior surfaces on unit will get hot. Use caution when touching these areas.

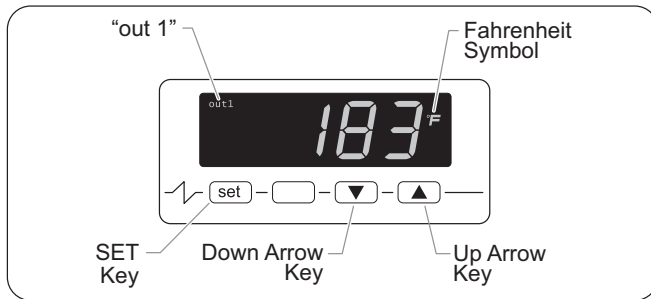


Figure 1. Digital Temperature Controller

2. On each digital temperature controller, press and release the **set** key to verify the setpoint temperatures.
 - The setpoint temperature will be shown for 15 seconds. After 15 seconds, the display will revert to the current temperature of the corresponding shelf. To change a setpoint temperature, refer to the "Changing the Setpoint Temperature" procedure.

NOTE: Once a setpoint temperature is changed, the new setpoint temperature will remain in memory until it is changed again.

3. Allow the heated shelves 10 minutes to reach operating temperature before loading preheated food product.

Changing the Setpoint Temperature

Use the following procedure to change the setpoint temperature on a digital temperature controller.

1. Press and release the **set** key. The current setpoint temperature will be shown on the display and "out 1" will flash in the upper left corner.
2. Press the **▲** key or **▼** key within 15 seconds to change the setpoint temperature. If no key is pressed within 15 seconds, the display will revert to the current temperature of the unit.
3. Press the **set** key or wait 15 seconds to lock in the new setpoint temperature.

Locking/Unlocking a Digital Temperature Controller


The keys on a digital temperature controller can be locked to prevent unauthorized changes to the settings.

To lock the keys of a digital temperature controller:

- Press and hold both the **set** key and **▼** key at the same time for over two seconds. The message "Loc" will appear on the display.

To unlock the keys of the digital temperature controller:

- Press and hold both the **set** key and **▼** key at the same time until the message "UnL" appears on the display.

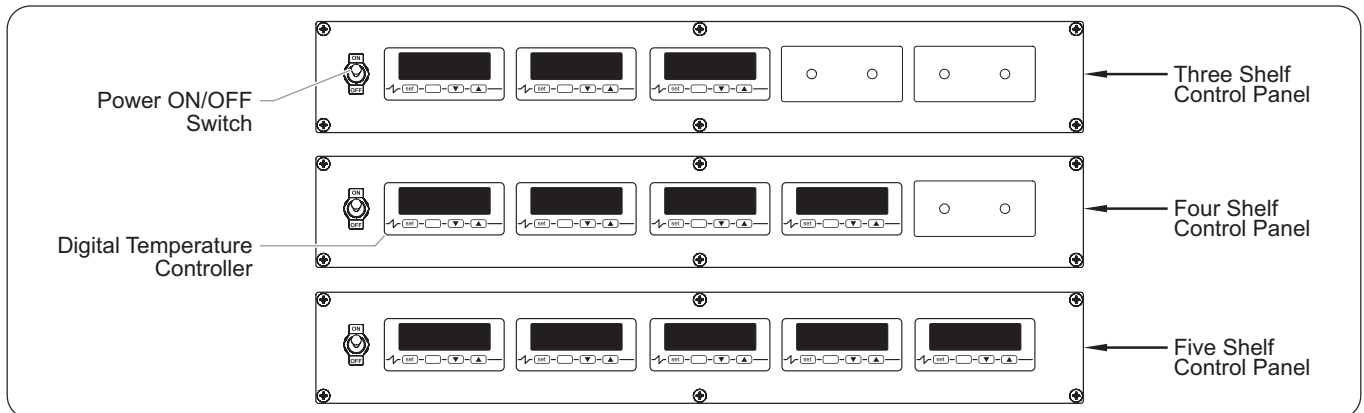

Controller temperature indicates *SHELF-temperature only (not product temperature)

5. Maintenance

GENERAL

The Hatco surface warmers are designed for maximum durability and performance with minimum maintenance.



ELECTRIC SHOCK HAZARD:

Turn the power switch **OFF**, unplug the power cord, and allow the unit to cool before performing any maintenance or cleaning. **DO NOT** submerge or saturate with water. Unit is not waterproof. Do not operate if unit has been submerged or saturated with water.

GENERAL CLEANING DIRECTIONS

To preserve the finish of the Hatco surface warmer, it is recommended that the surfaces **BE CLEANED A MINIMUM OF ONCE A DAY** - or per your company recommendations -which is typically more often than once a day.

NOTICE

Use non-abrasive cleaners only. Abrasive cleaners could scratch the finish of the unit, marring its appearance and making it susceptible to soil accumulation.

CLEANING INSTRUCTIONS

1. Turn temperature control knobs to **OFF** position.
2. **ALLOW SURFACES TO COOL BEFORE HANDLING.**
3. Using a soft cloth, clean with a **non-abrasive, food zone** safe cleaner. A mixture of 50% water and 50% white vinegar is recommended. Do not use flavored vinegar.
5. Difficult to reach areas should be cleaned with a small nylon brush and vinegar/water mixture.
4. **ALWAYS** Rinse with clean water and immediately dry after cleaning.
5. Clean frequently and regularly.
6. Remove surface spills immediately with a damp cloth.

STAINLESS STEEL CLEANING AND CARE

There are three basic things which can break down your stainless steel's passivity layer and allow corrosion.

AVOID the following:

1. Mechanical Abrasion

Mechanical abrasion means those things that will scratch the steel's surface. Steel pads, wire brushes, abrasive cleaners, and scrapers are prime examples.

2. Water

Water comes out of our tap in varying degrees of hardness. Depending on what part of the country you live in, you may have hard or soft water. Hard water may leave spots. Also, when heated, hard water leaves deposits behind that if left to sit, will break down the passive layer and rust your stainless steel. Never leave water on stainless steel surfaces.

Other deposits from food preparation and service must be properly removed.

3. Chlorides

Chlorides are found nearly everywhere. They are in water, food and table salt. One of the worst perpetrators of chlorides can come from household and industrial cleaners.

Don't Despair! Here are a few steps that can help prevent stainless steel rust.

1. Use the Proper Tools

When cleaning your stainless steel products, take care to use non-abrasive tools. Soft clothes and plastic scouring pads will NOT harm the steel's passive layer.

Again, we recommend using a mixture of 50% water and 50% white vinegar (do not use flavored vinegar) and a soft cloth. Rinse with water and immediately dry with soft cloth.

2. Clean With the Polish Lines

Some stainless steels come with visible polishing lines or "grain". When visible lines are present, you should **ALWAYS** wipe in a motion that is parallel to them. When the grain cannot be seen, play it safe and use a soft cloth or plastic scouring pad.

3. Use Alkaline or Non-Chloride Cleaners

While many traditional cleaners are loaded with chlorides, the industry is providing an ever increasing choice of non-chloride cleaners. If you are not sure of your cleaner's chloride content, contact your cleaner supplier. If they tell you that your present cleaner contains chlorides, ask for an alternative. Also, avoid cleaners containing 'quaternary salts' as they also can attack stainless steel & cause pitting and rusting.

continued on next page...

Maintenance (Cont'd)

continued from previous page....

6. RINSE, RINSE, RINSE

If chlorinated cleaners are used you must rinse, rinse, rinse and wipe dry immediately. The sooner you wipe off standing water, especially when it contains cleaning agents, the better. After wiping the equipment down, allow it to air dry, as oxygen helps maintain the stainless steel's passivity film.

7. Never Use Hydrochloric Acid (Muriatic Acid) on Stainless Steel

CAUTION

CLEANING PRECAUTIONS

When cleaning:

- Do not use high pressure water hoses
- Do not introduce water faster than waste outlet can drain
- NEVER INTRODUCE WATER ON SELF CONTAINED UNIT WITH AN EVAPORATOR FAN
- NEVER USE A CLEANING OR SANITIZING SOLUTION THAT HAS AN OIL BASE (these will dissolve the butyl sealants) or an AMMONIA BASE (this will corrode the copper components of the case)
- TO PRESERVE THE ATTRACTIVE FINISH:
- DO USE WATER AND A MILD DETERGENT FOR THE EXTERIOR ONLY
- DO NOT USE A CHLORINATED CLEANER ON ANY SURFACE
- DO NOT USE ABRASIVES OR STEEL WOOL SCOURING PADS (these will mar the finish)



CAUTION

Fluorescent Lamps contain mercury vapor. Mercury exposure at high levels can harm the brain, heart, kidneys, lungs and immune system of people of all ages. Do not break or puncture fluorescent lamps. Dispose of, or store, all fluorescent lamps in accordance with Federal (40 CFR 273), State and local hazardous waste requirements. Refer to <http://www.epa.gov/mercury/about.htm>


Fluorescent Lamp Disposal:

The United States Environmental Protection Agency has information regarding environmentally-safe fluorescent lamp waste management programs.


The HHL incandescent display lamps have a food safety shatter-resistant coating. The lamps must be replaced with like fixtures. Contact Hussmann Performance Parts for replacement: 855.HUSSPRT (855.487.7778) <https://parts.hussmann.com/>

6. Electrical Wiring Diagrams

ISLA HOT	IM-03	IM-03-13-H 208V/240V	3'	W6600037
		IM-03-4-H 208V	4'	W6600014
		IM-03-14-H (With 30 AMP cord)	4'	W6600011
		IM-03-5-H	5'	W6600028
		IM-03-6-H 240V	6'	W6600013
		IM-03-6-H 208V	6'	W6600009
		IM-03-8-H	8'	W6600039
	IM-04	IM-04-13-H	4'	W6600061
		IM-04-C4-H	4'	W6600001
		IM-04-4-H (With 30 AMP cord)	4'	W6600007
		IM-04-15-H 3-PHASE	5'	W6600053
		IM-04-E5-H 230/1/60	5'	W6600005
	IM-05	IM-05-13-H	3'	W6600036
		IM-05-E5-H	5'	W6600002
		IM-05-C4-H	4'	W6600004
		IM-05-C4-H (With 30 AMP cord)	4'	W6600006
		IM-05-C4-H 3-PHASE	4'	W6600045
	IM-04	IM-04-16-H	6'	W6600012
	IM-05	IM-05-C6-H	6'	W6600003

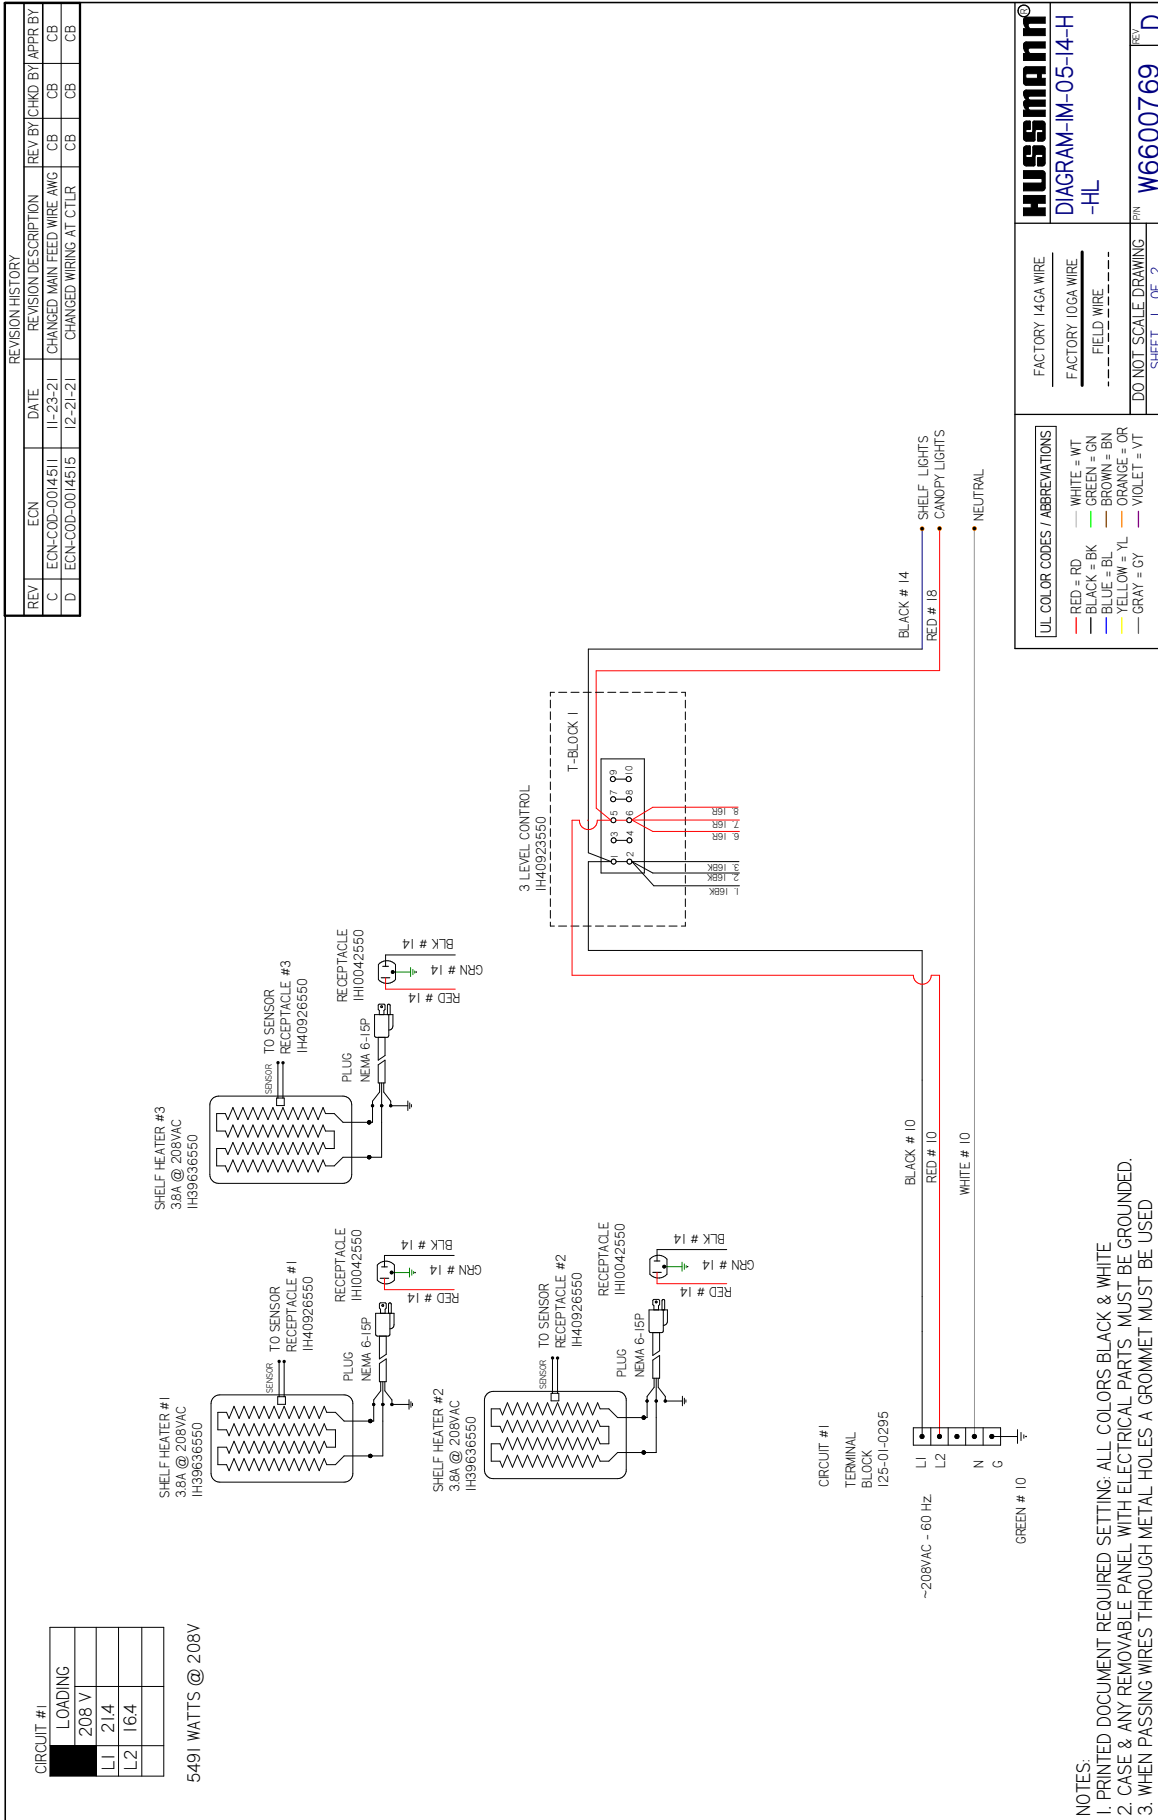


REV	ECN	DATE	REVISION DESCRIPTION	REV BY	CHKD BY	APPR BY
E	ECN-COD-0014513	12-8-21	REVISED LIGHT WIRE GAUGE	CB	CB	CB
F	ECN-COD-0014515	12-21-21	CHANGED WIRING AT CTRLR	CB	CB	CB

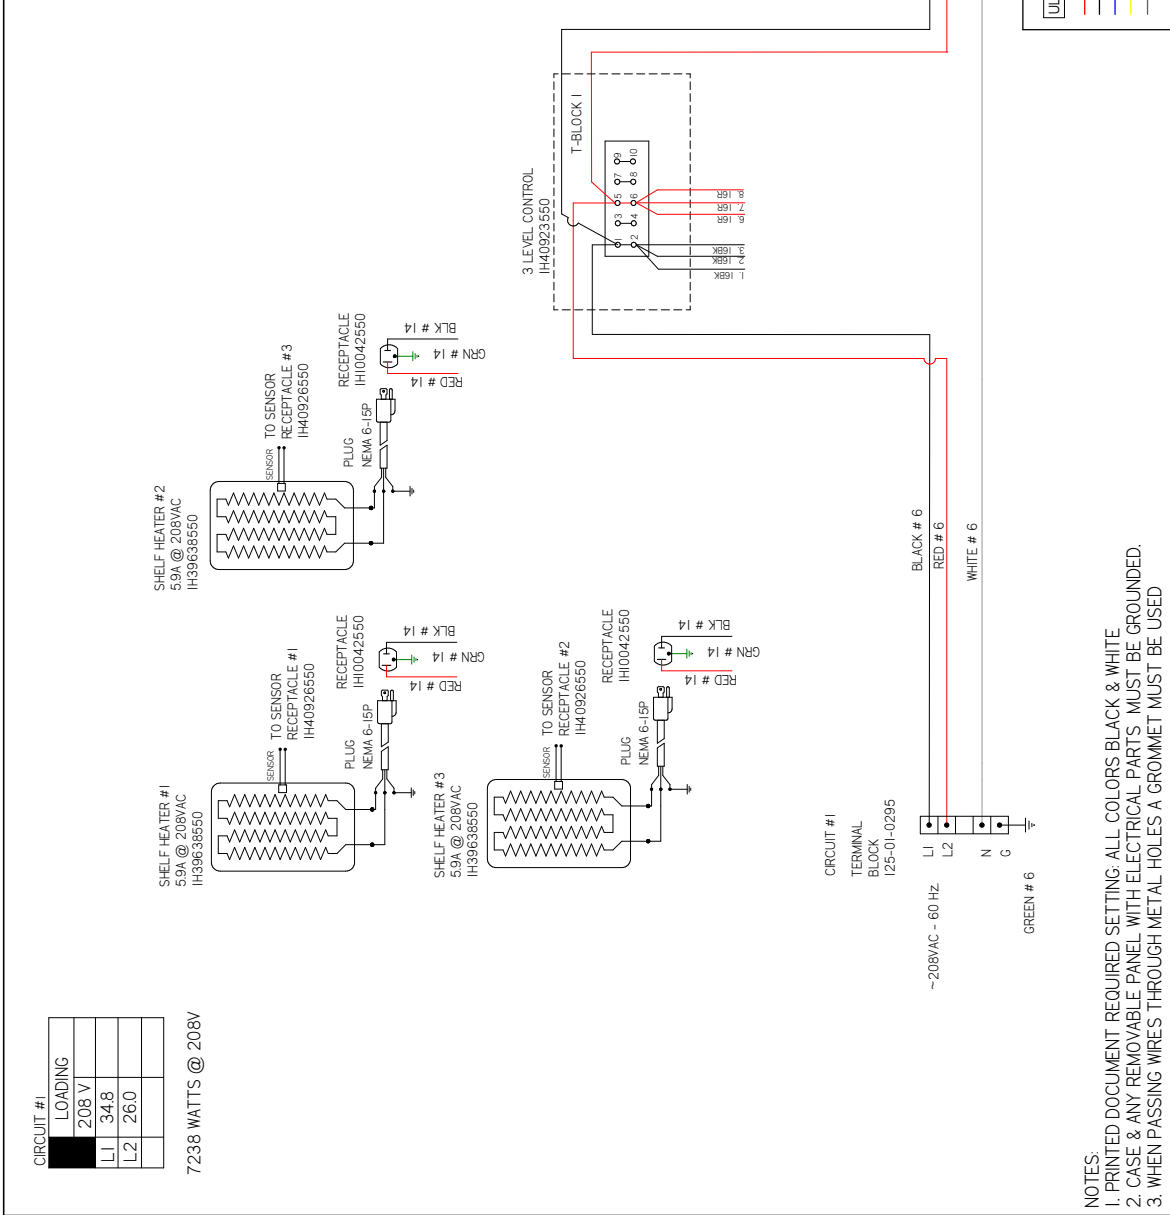

REV	ECN	DATE	REVISION DESCRIPTION	REV BY	CHKD BY	APPR BY
C	ECN-COD-001451I	11-23-21	CHANGED MAIN FEED WIRE AWG	CB	CB	CB
D	ECN-COD-001451S	12-21-21	CHANGED WIRING AT CTLR	CB	CB	CB

CIRCUIT #1	LOADING
	208 V
L1	21.4
L2	16.4

5491 WATTS @ 208V

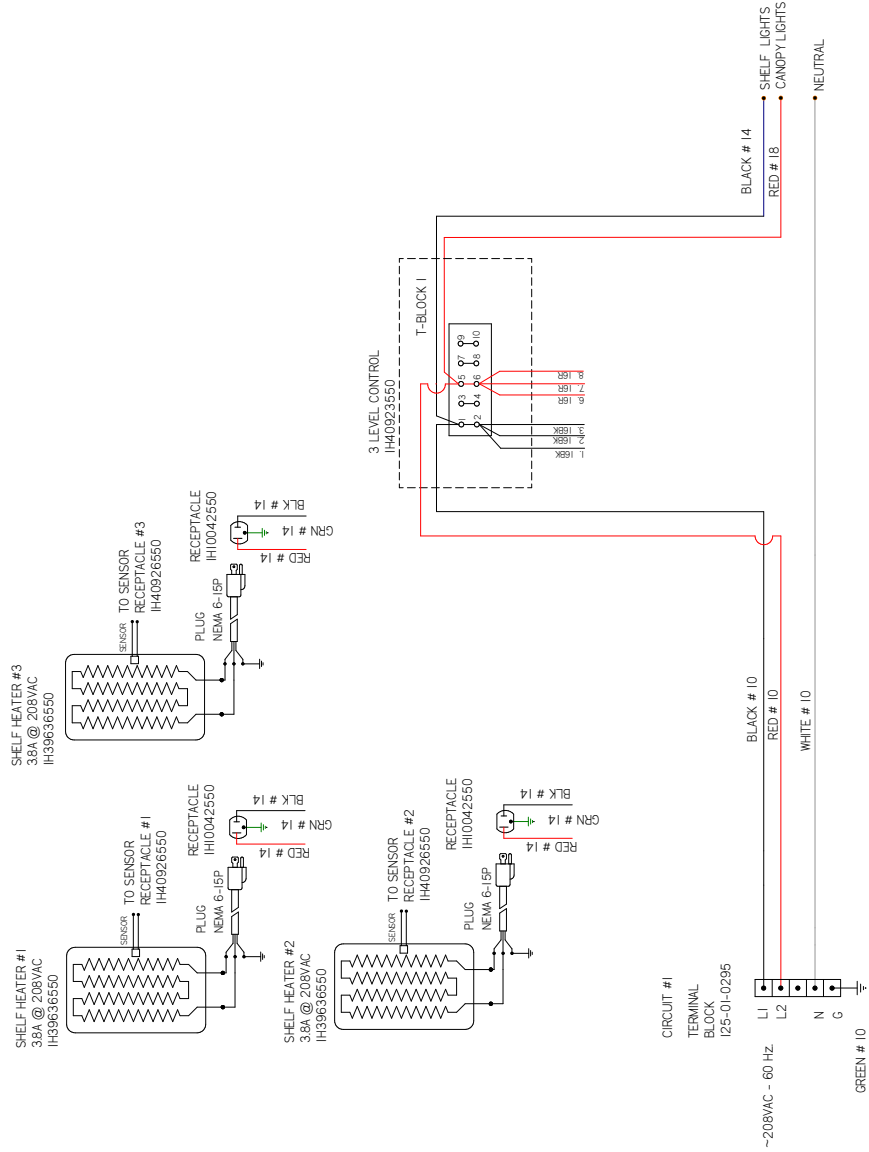

UL COLOR CODES / ABBREVIATIONS
RED = RD
BLACK = BK
BLUE = BL
YELLOW = YL
GRAY = GY
WHITE = WT
GREEN = GN
BROWN = BN
ORANGE = OR
VIOLET = VT

FACTORY 14GA WIRE
FACTORY 10GA WIRE
FIELD WIRE
DO NOT SCALE DRAWING
SHEET 1 OF 4

HUSSMANN
 DIAGRAM-IM-05-18-H
 -HL

R/H SIDE OF CASE

NOTES:
 1. PRINTED DOCUMENT REQUIRED SETTING ALL COLORS BLACK & WHITE
 2. CASE & ANY REMOVABLE PANEL WITH ELECTRICAL PARTS MUST BE GROUNDED.
 3. WHEN PASSING WIRES THROUGH METAL HOLES A GROMMET MUST BE USED

CIRCUIT #1

LOADING	208 V	240V
L1	6.4	7.3
L2	6.0	6.9


NOTE: CASE MUST BE GROUNDED

CIRCUIT #1 CONTINUED

**1331W @ 208VAC
1752W @ 240VAC**


HEATER RECEPTACLE WIRING CONTROL PANEL

RECEPT #1 RECEPT #2 RECEPT #3

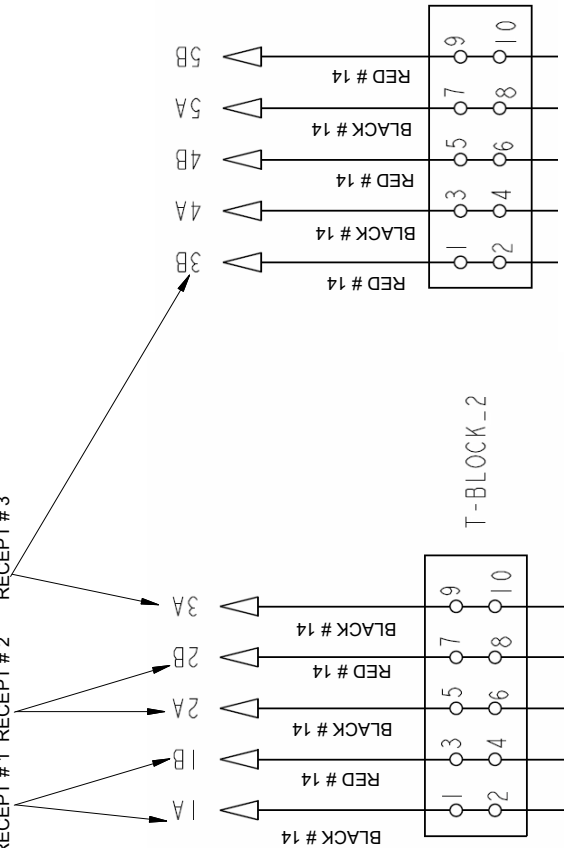

SENSOR RECEPTACLE WIRING CONTROL PANEL

SENSOR RECEPTACLES TO BE WIRED TO PIN # 10 AND 11 AS SHOWN TO RESPECTIVE CONTROL

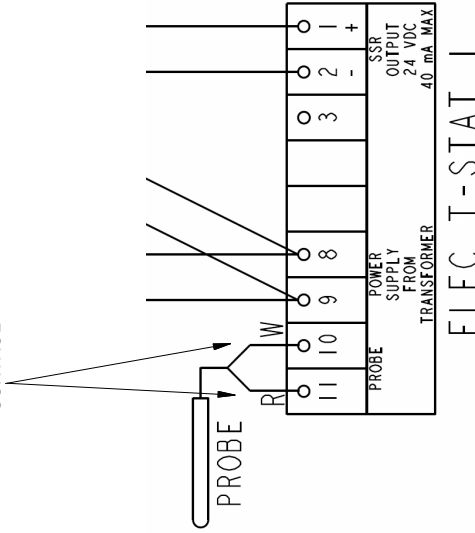

HUSSMANN
Hussmann Corporation, Inc.
13770 Ramona Avenue
Chino, CA 91710
(909)-590-4910 Lic.#: 644406

REVISIONS:

#	DESCRIPTION
A	CN#634531
B	RESET TO REV-B


DATE:	6/28/12
BY:	CB
PRODUCTION ORDER #:	
FILE LOCATION:	CB

DRAWN BY:	CRAIG BOOREY
CHECKED BY:	
DATE:	6/28/12

PROJECT TITLE:	ISLA HOT
DRAWING TITLE:	IM-03-13-H 240V


DRAWING #:	W6600037
PAGE	2 OF 3

CONTROL PANEL WIRING FOR UP TO 5 HEATED DECKS

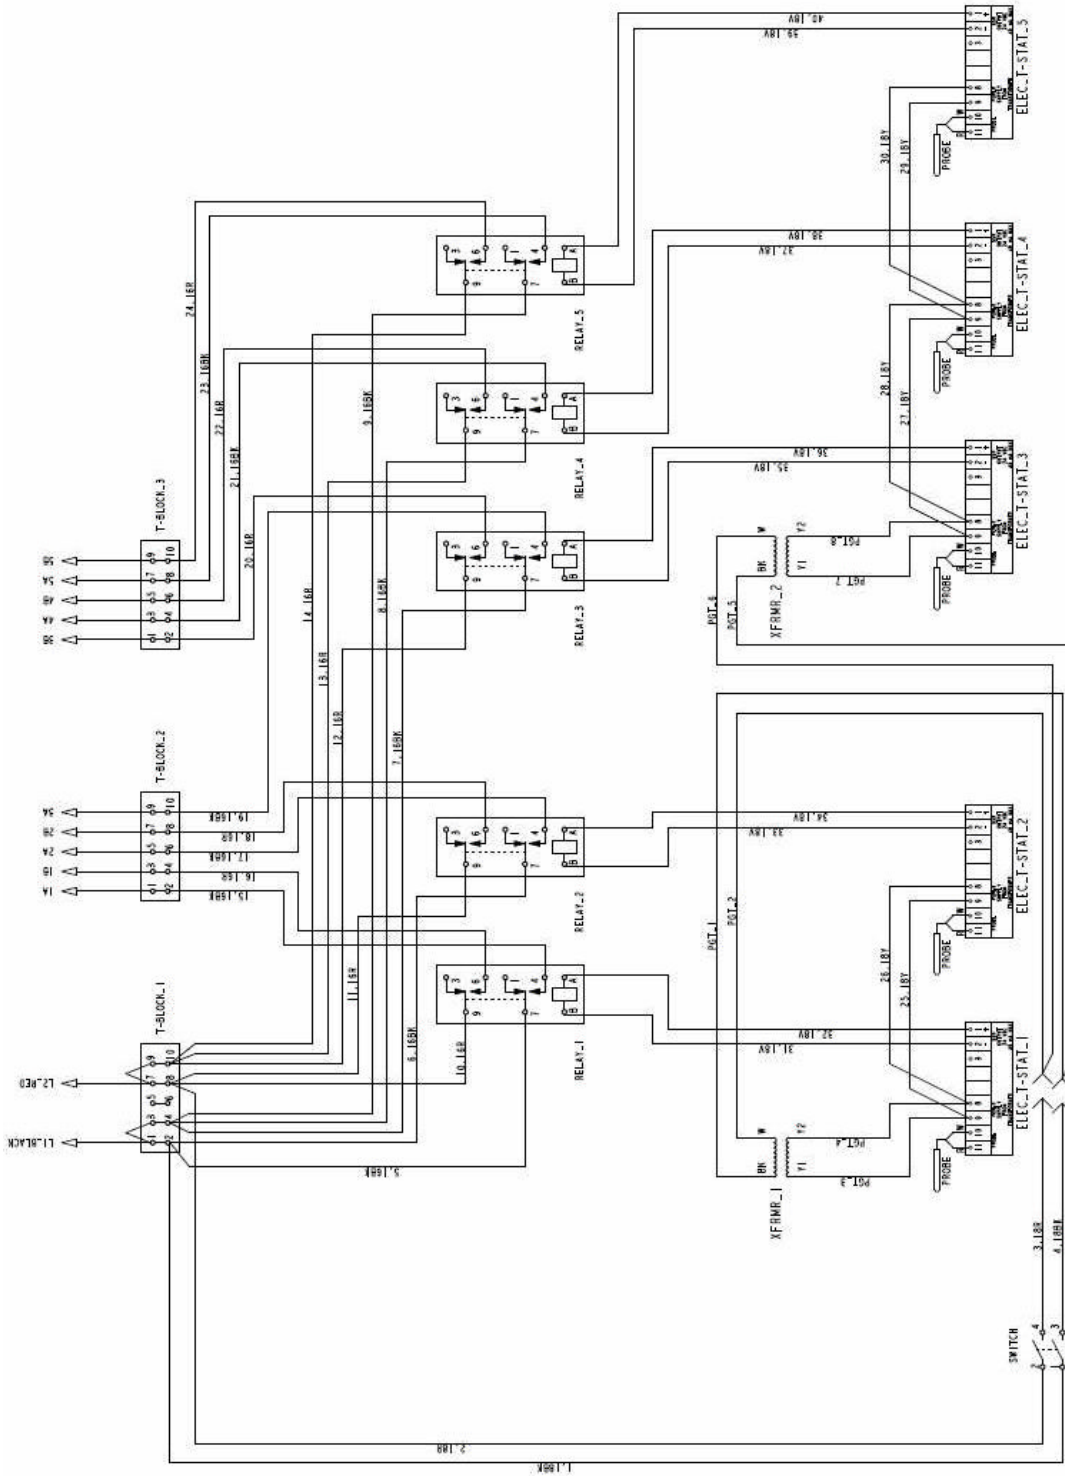

CIRCUIT # 1
CONTINUED

REVISIONS: # DESCRIPTION: A CN#634531 B RESET TO REV-B		DRAWN BY: CRAIG BOOREY CHECKED BY: CB DATE: 6/28/12 PRODUCTION ORDER #: 8/15/12 FILE LOCATION:		PROJECT TITLE: ISLA HOT DRAWING TITLE: IM-03-13-H 240V		DRAWING #: W6600037 PAGE 3 OF 3	
--	--	--	--	---	--	------------------------------------	--

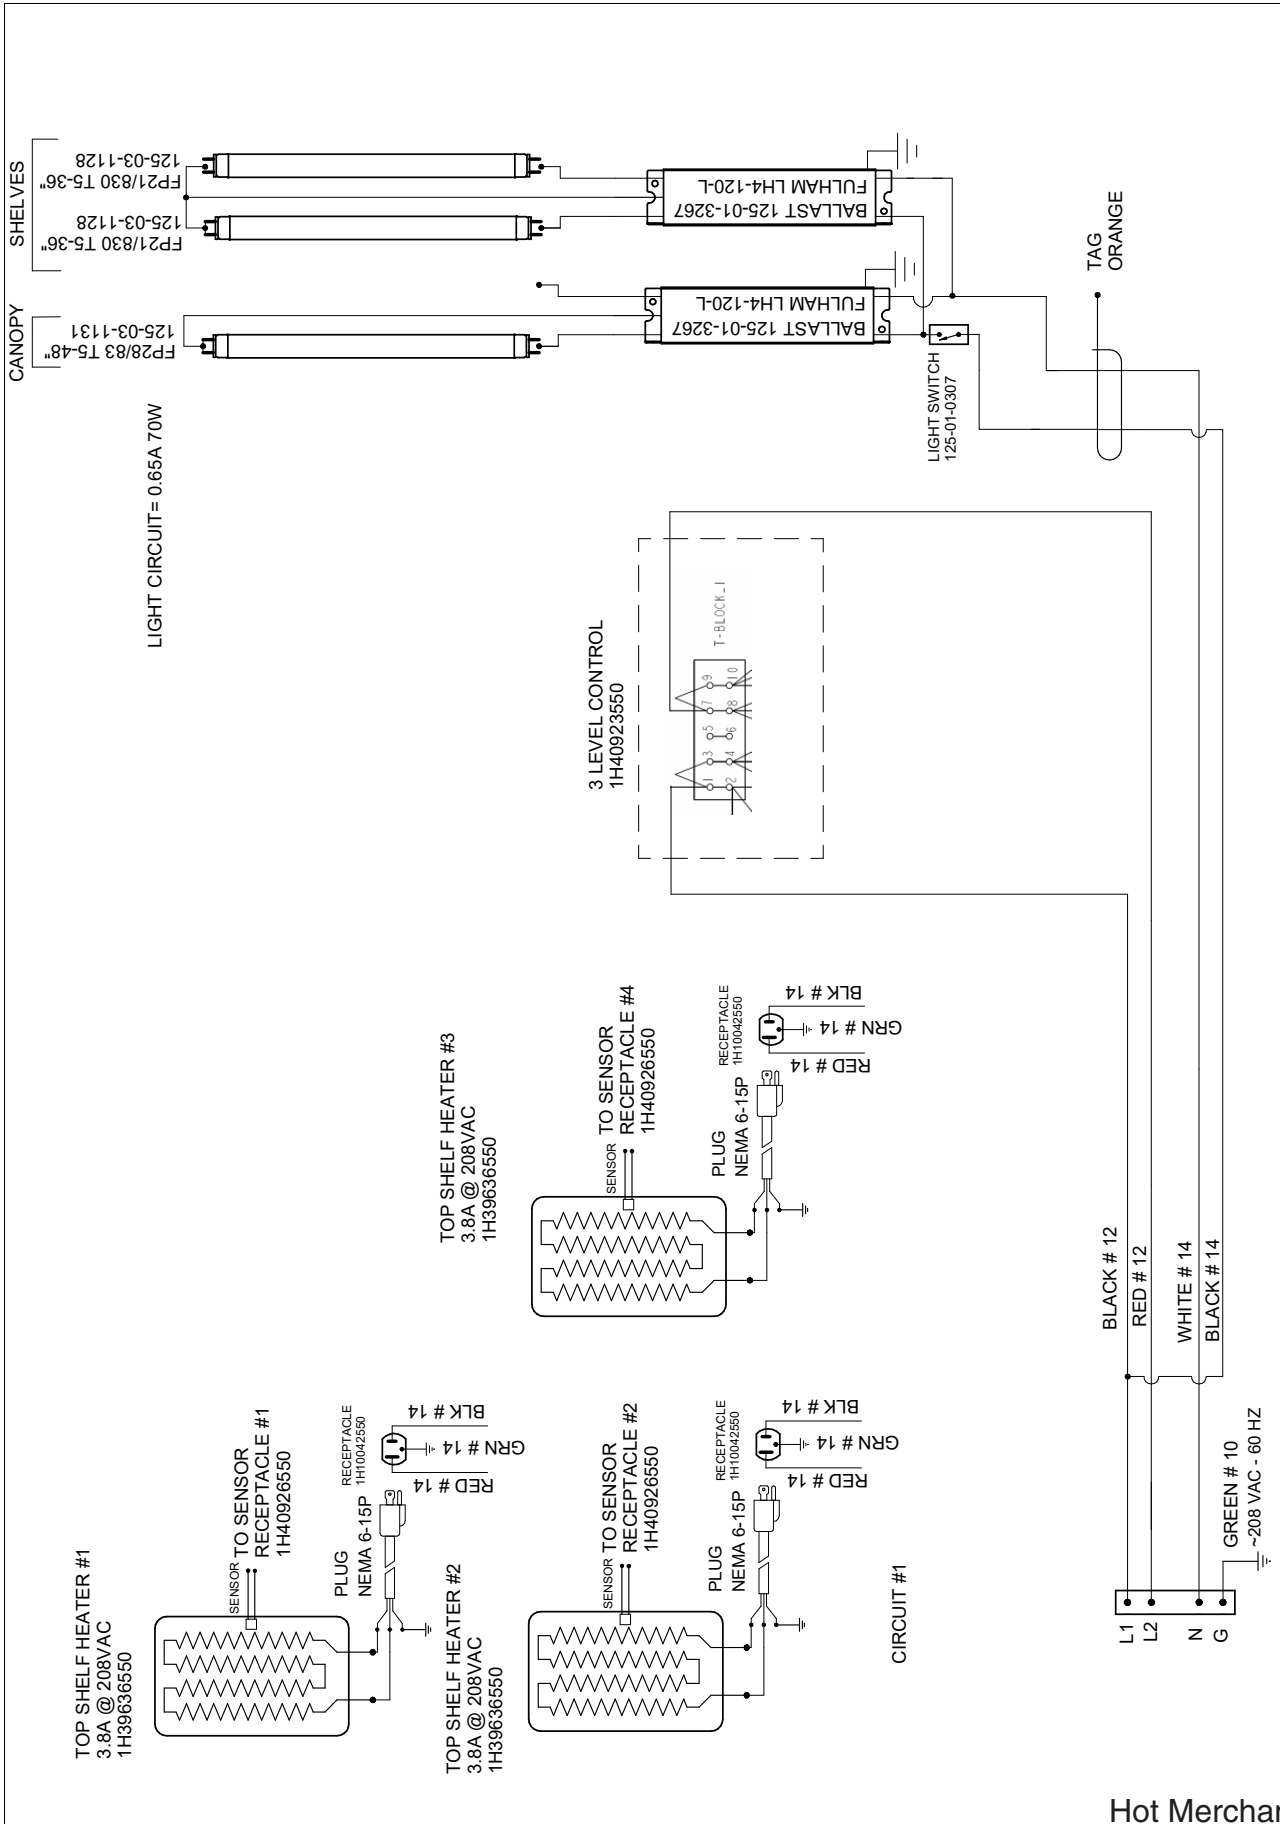

DRAWN BY: MATT GRAMITA		PROJECT TITLE: ISLA HOT		DRAWING #: W6600014	
CHECKED BY:	DATE: 11/30/11	PRODUCTION ORDER #:		DRAWING TITLE:	
FILE LOCATION:		IM-03-4-H 208V		PAGE 1 OF 3	
REVISIONS: # DESCRIPTION:					

CIRCUIT #1	LOADING
	208 V
L1	12.1
L2	11.4

CIRCUIT #1
CONTINUED


2441W @ 208VAC

**HEATER RECEPTACLE WIRING
CONTROL PANEL**

**NOTE: CASE MUST
BE GROUNDED**
RECEPT #1 MID SHELF
TOP SHELF


RECEPT #2
BOTTOM DECK

RECEPT #3
BOTTOM DECK

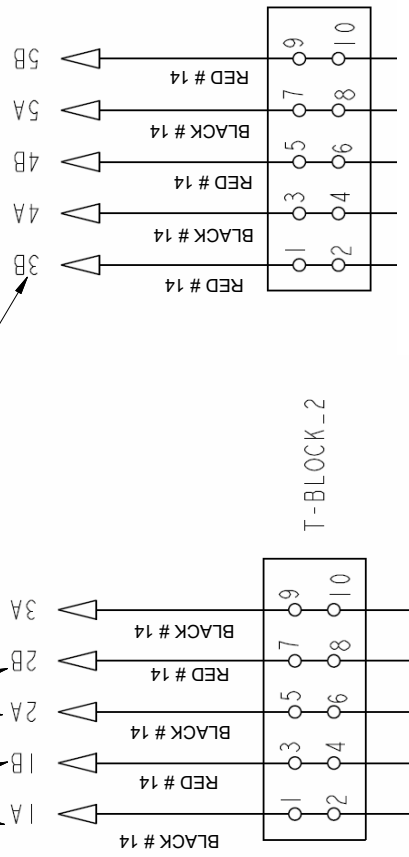

**SENSOR RECEPTACLE WIRING
CONTROL PANEL**

SENSOR RECEPTACLES TO BE WIRED
TO PIN # 10 AND 11 AS SHOWN TO RESPECTIVE
CONTROL

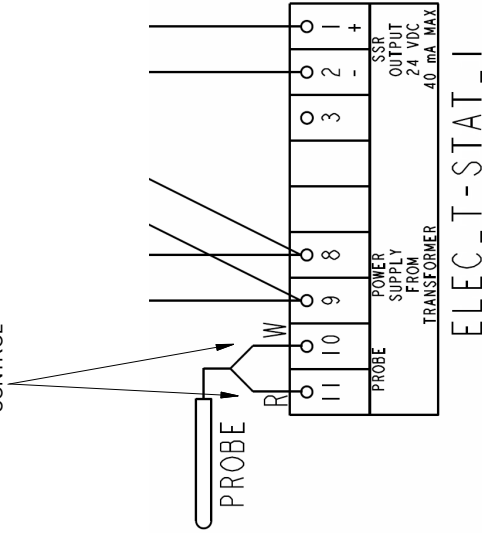

HUSSMANN
Hussmann Corporation, Intl.
13770 Ramona Avenue
Chino, CA 91710
(909)-590-4910 Lic. # 644406

REVISIONS:
DESCRIPTION:


DATE: BY: MATT GRAMITA
CHECKED BY: DATE: 11/30/11
PRODUCTION ORDER #:
FILE LOCATION:

PROJECT TITLE: ISLA HOT
DRAWING TITLE: IM-03-4-H 208V

DRAWING # W6600014
PAGE 2 OF 3

CIRCUIT # 1
CONTINUED

CONTROL PANEL WIRING FOR UP TO 5 SHELVES

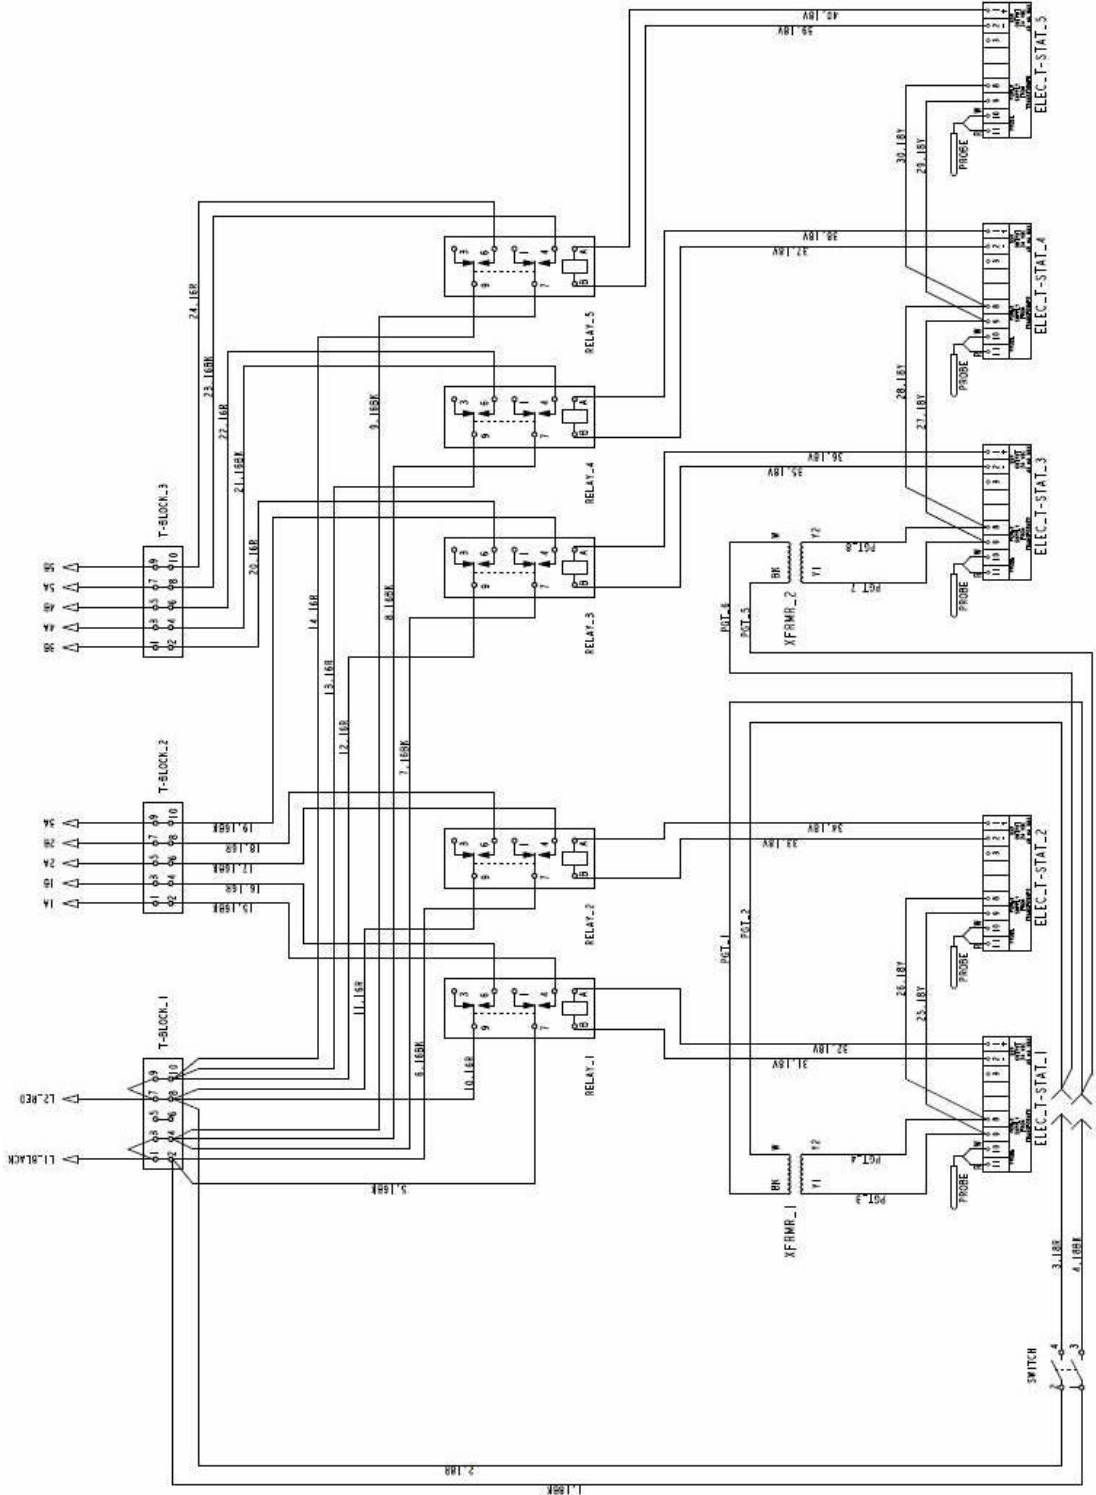


REVISIONS:
DESCRIPTION:


DRAWN BY: MATT GRAMTA
CHECKED BY:
PRODUCTION ORDER #:
DATE: 11/30/11
FILE LOCATION:

PROJECT TITLE: ISLA HOT
DRAWING TITLE:
IM-03-4-H 208V

DRAWING #: W6600014

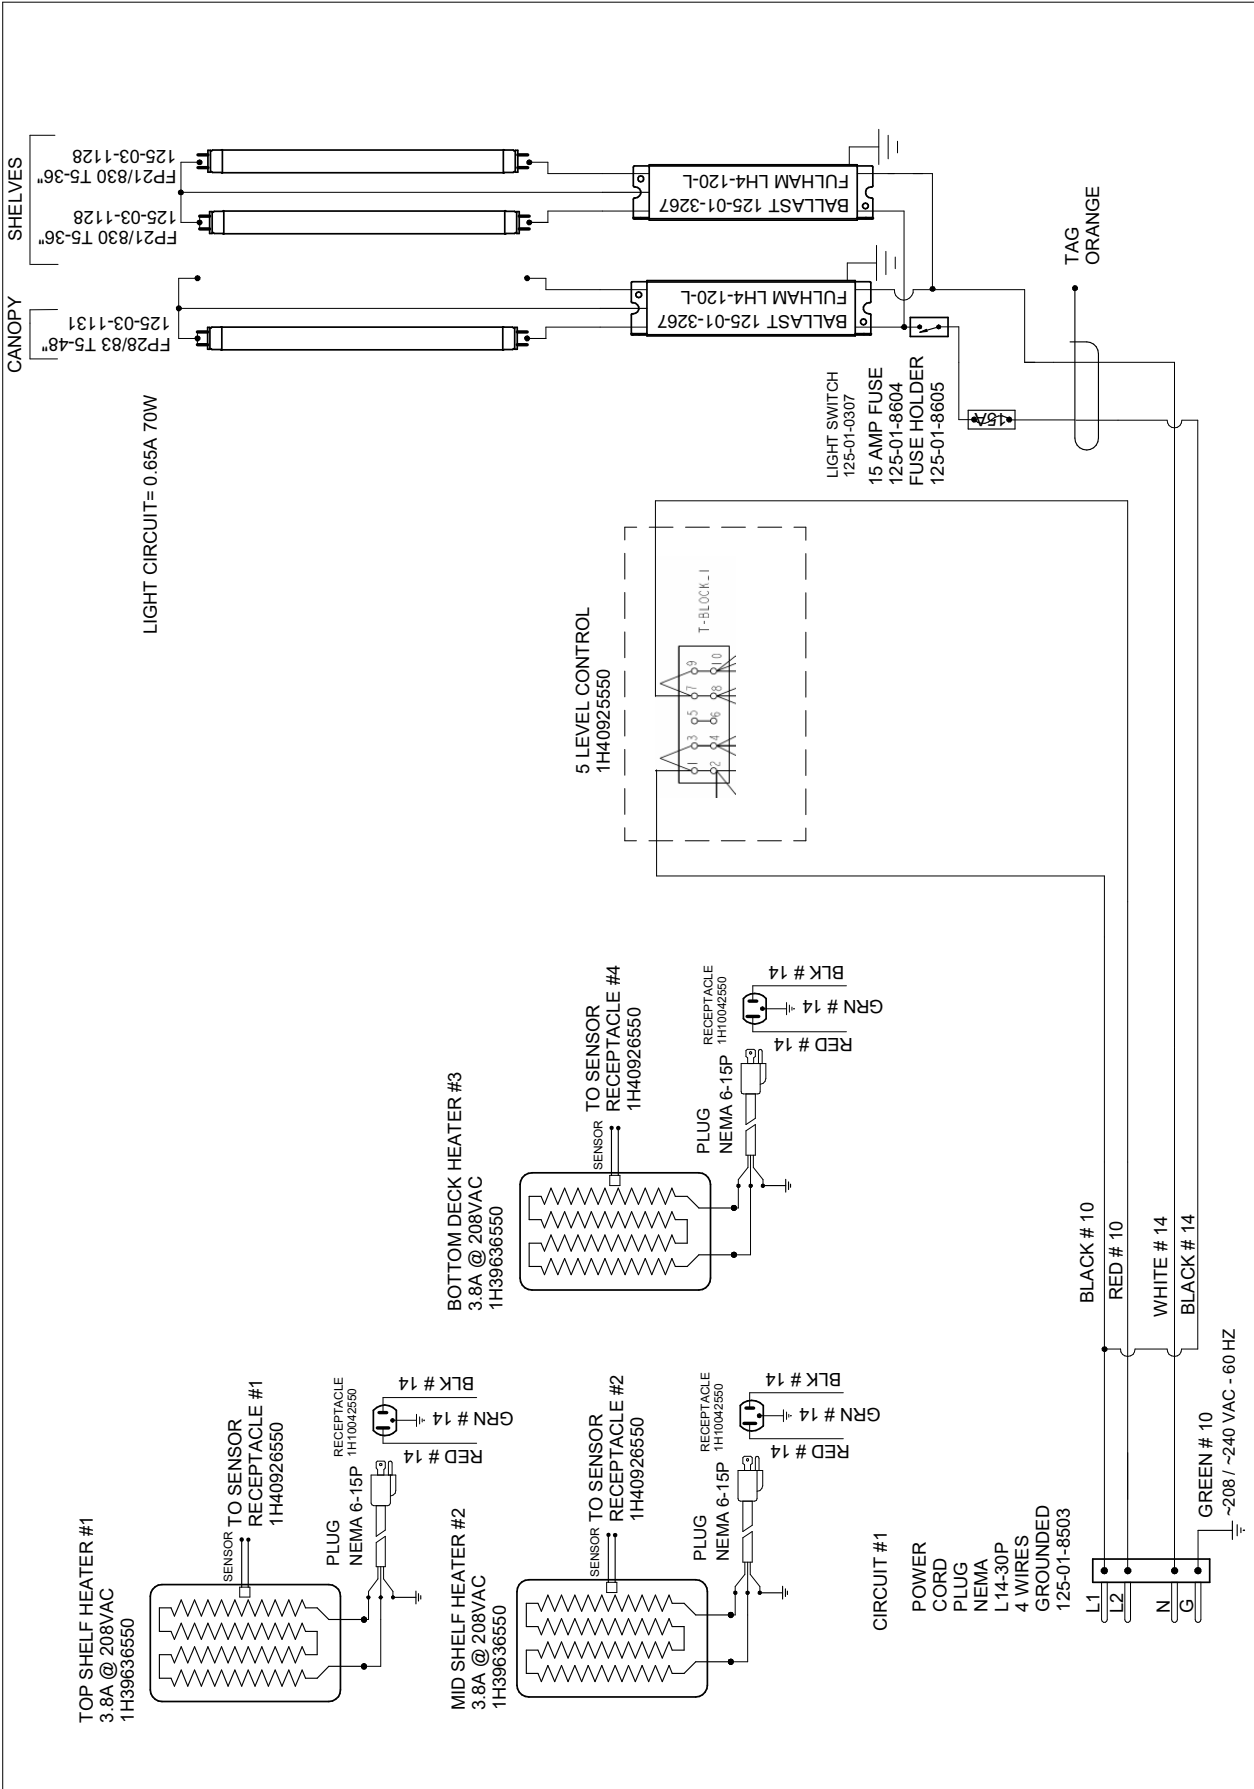

DRAWN BY: CRAIG BOOREY		PROJECT TITLE: ISLA HOT		DRAWING #: W6600011	
DATE:	BY:	DATE: 7/19/11	PRODUCTION ORDER #:		
#:		DESCRIPTION:		DRAWING TITLE: IM-03-4-H w/ 30 AMP CORD	
		FILE LOCATION:		PAGE 1 OF 3	

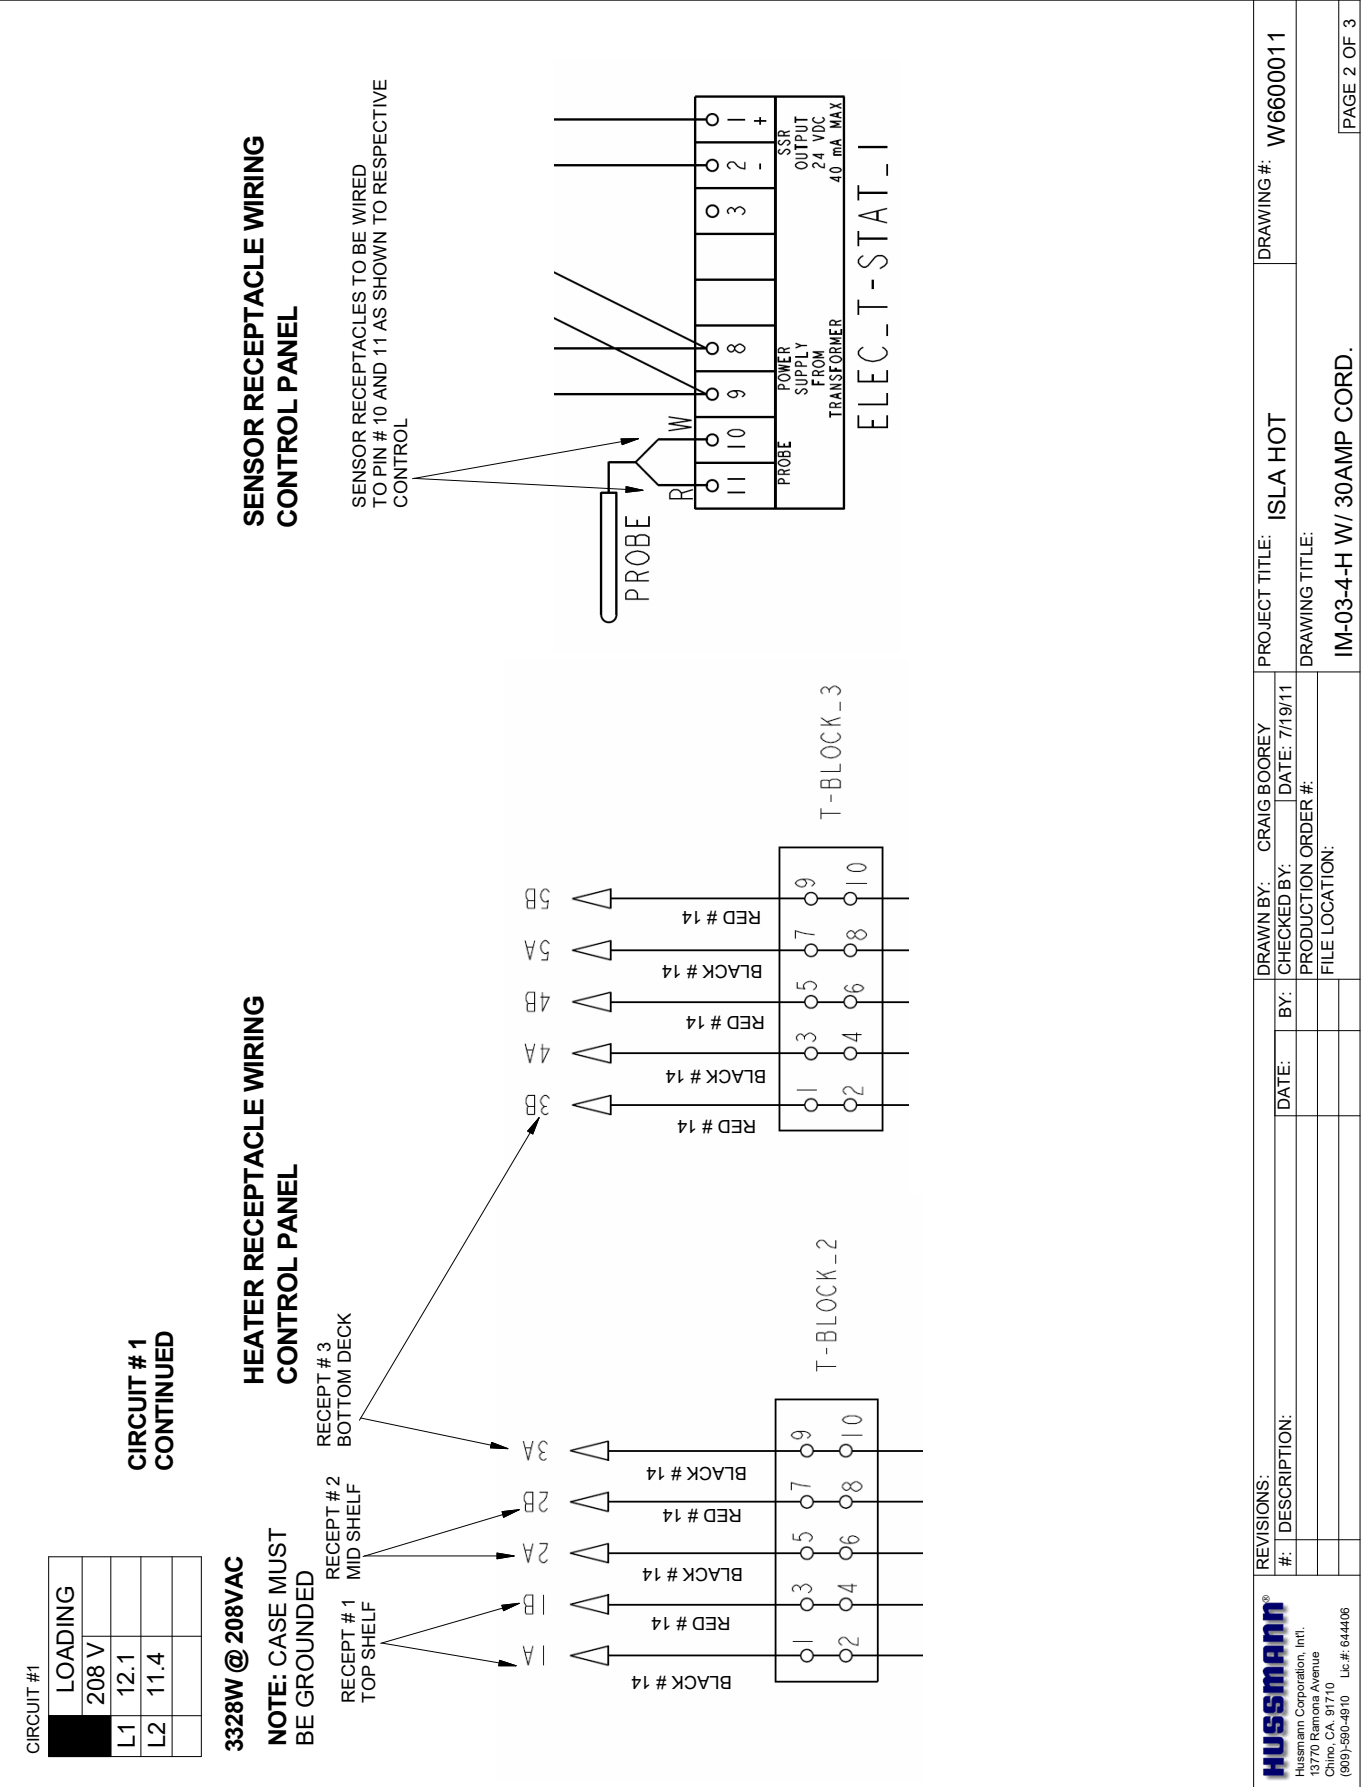


REVISIONS:	DRAWN BY: CRAIG BOOREY	PROJECT TITLE: ISLA HOT	DRAWING #: W6600011
#:	BY:	DATE:	DATE: 7/19/11
DESCRIPTION:	PRODUCTION ORDER #:	DRAWING TITLE:	IM-03-4-H W/ 30AMP CORD.
	FILE LOCATION:		PAGE 2 OF 3


HUSSMANN[®]
 Hussmann Corporation, Intl.
 13770 Riva Avenue
 Chino, CA 91710
 (909) 590-4810 Lic.# 644406

CIRCUIT # 1
CONTINUED

CONTROL PANEL WIRING FOR UP TO 5 SHELVES

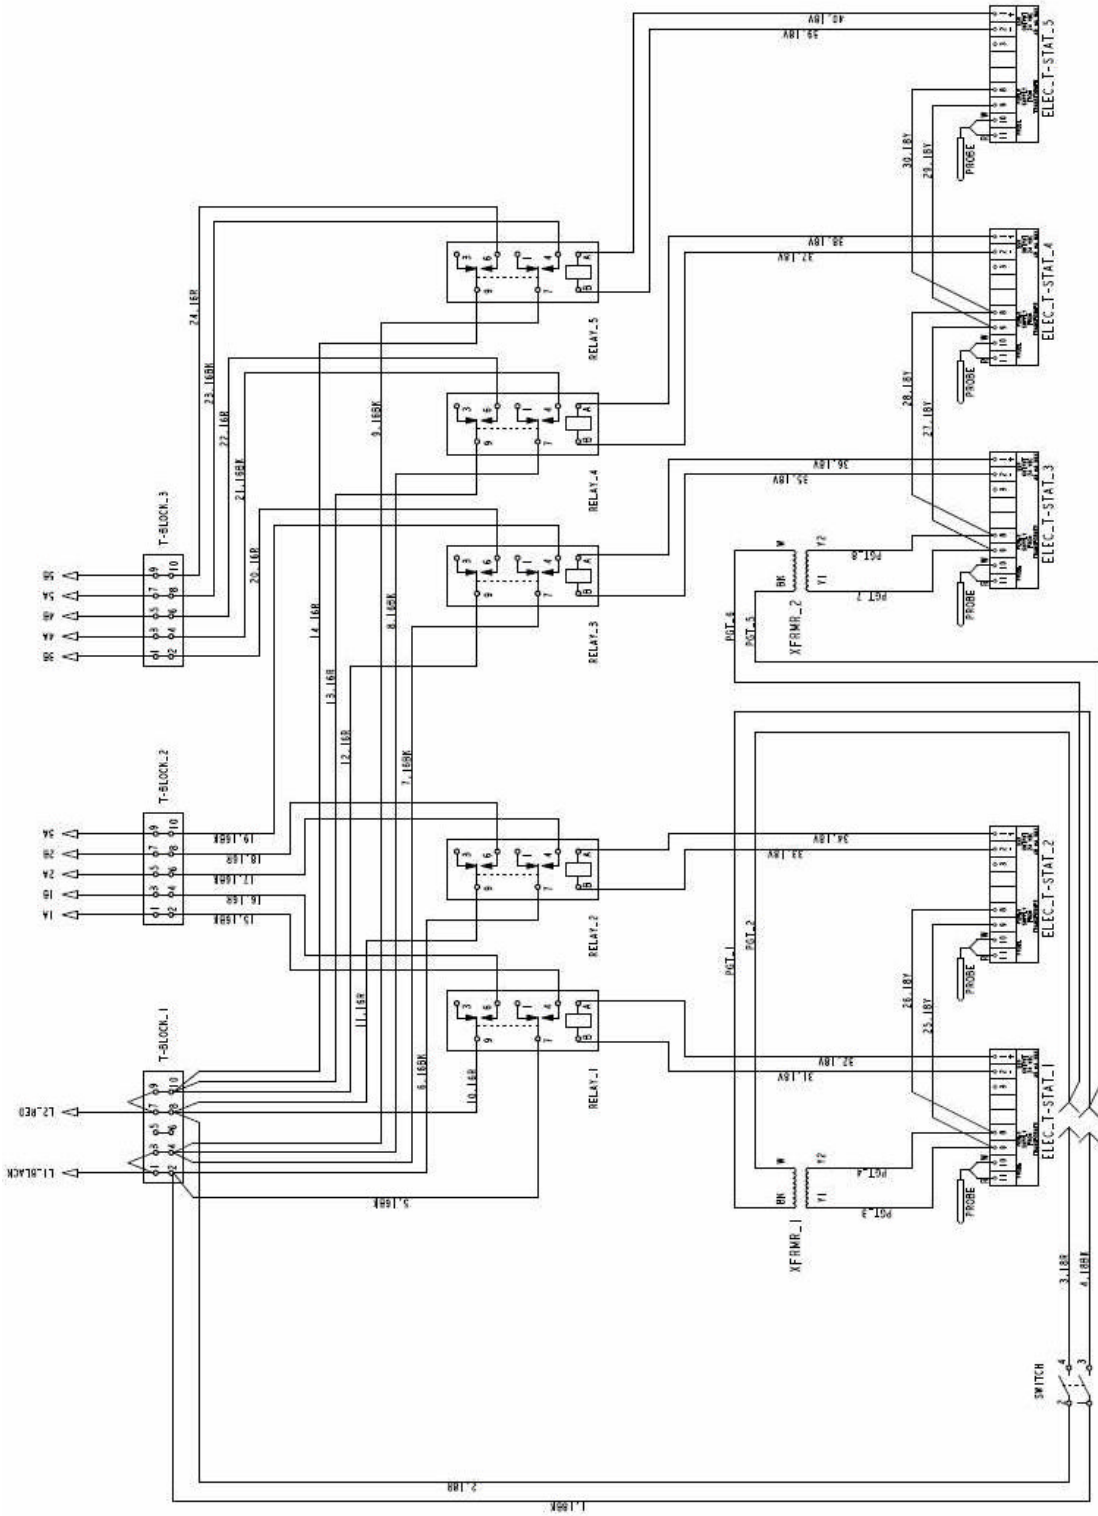

HUSSMANN Hussmann Corporation, Intl. 13770 Ramona Avenue Chino, CA. 91710 (909) 590-4910 Lic.#: 644406	REVISIONS: # DESCRIPTION:	DRAWN BY: CRAIG BOOREY CHECKED BY: DATE: 7/19/11 PRODUCTION ORDER #: FILE LOCATION:	PROJECT TITLE: ISLA HOT DRAWING TITLE: IM-03-4-H W/ 30 AMP CORD.	DRAWING #: W6600011 PAGE 3 OF 3

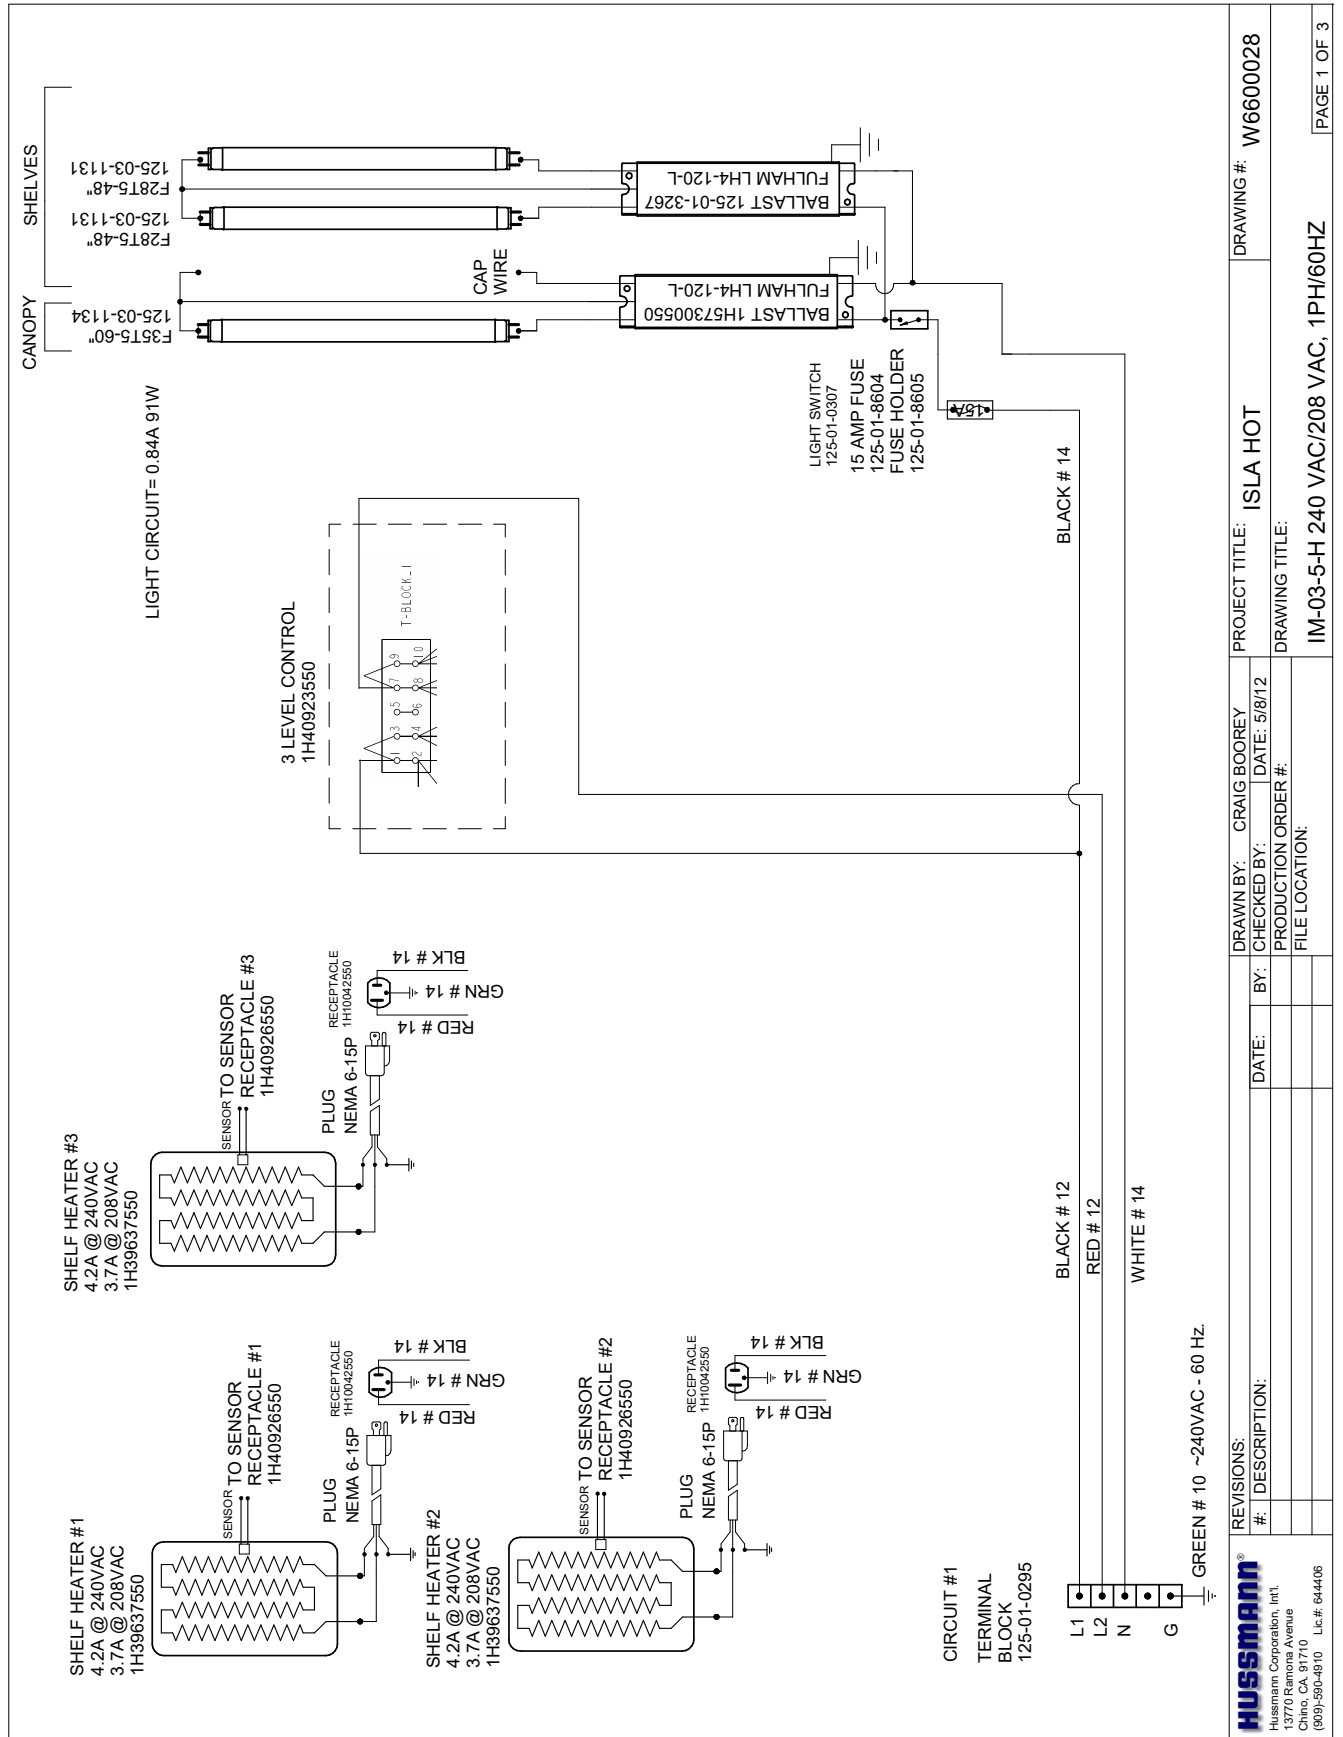


CIRCUIT #1	LOADING
	208 V 240V
L1	11.6 13.4
L2	10.9 12.6

**CIRCUIT # 1
CONTINUED**


**2413W @ 208VAC
3216W @ 240VAC**
NOTE: CASE MUST
BE GROUNDED

**HEATER RECEPTACLE WIRING
CONTROL PANEL**

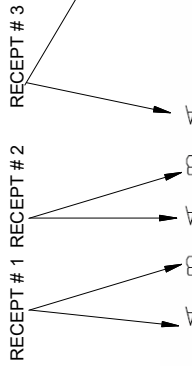

**SENSOR RECEPTACLE WIRING
CONTROL PANEL**

SENSOR RECEPTACLES TO BE WIRED
TO PIN # 10 AND 11 AS SHOWN TO RESPECTIVE
CONTROL

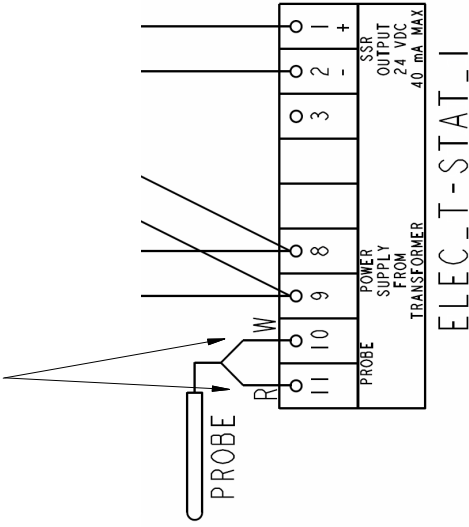

HUSSMANN®
Hussmann Corporation, Inc.
13770 W. Alameda Avenue
Chico, CA 95710
(909)-590-4910 Lic# 644406

REVISIONS:
DESCRIPTION:

DRAWN BY: CRAIG BOOREY
BY: CHECKED BY: DATE: 5/8/12
PRODUCTION ORDER #:
FILE LOCATION:

PROJECT TITLE: ISLA HOT

DRAWING #: W6600028


DRAWING TITLE:

IM-03-E5-H 240 VAC, 208VAC 1PH/60HZ


PAGE 2 OF 3

CIRCUIT #1
CONTINUED


CONTROL PANEL WIRING FOR UP TO 5 LEVELS

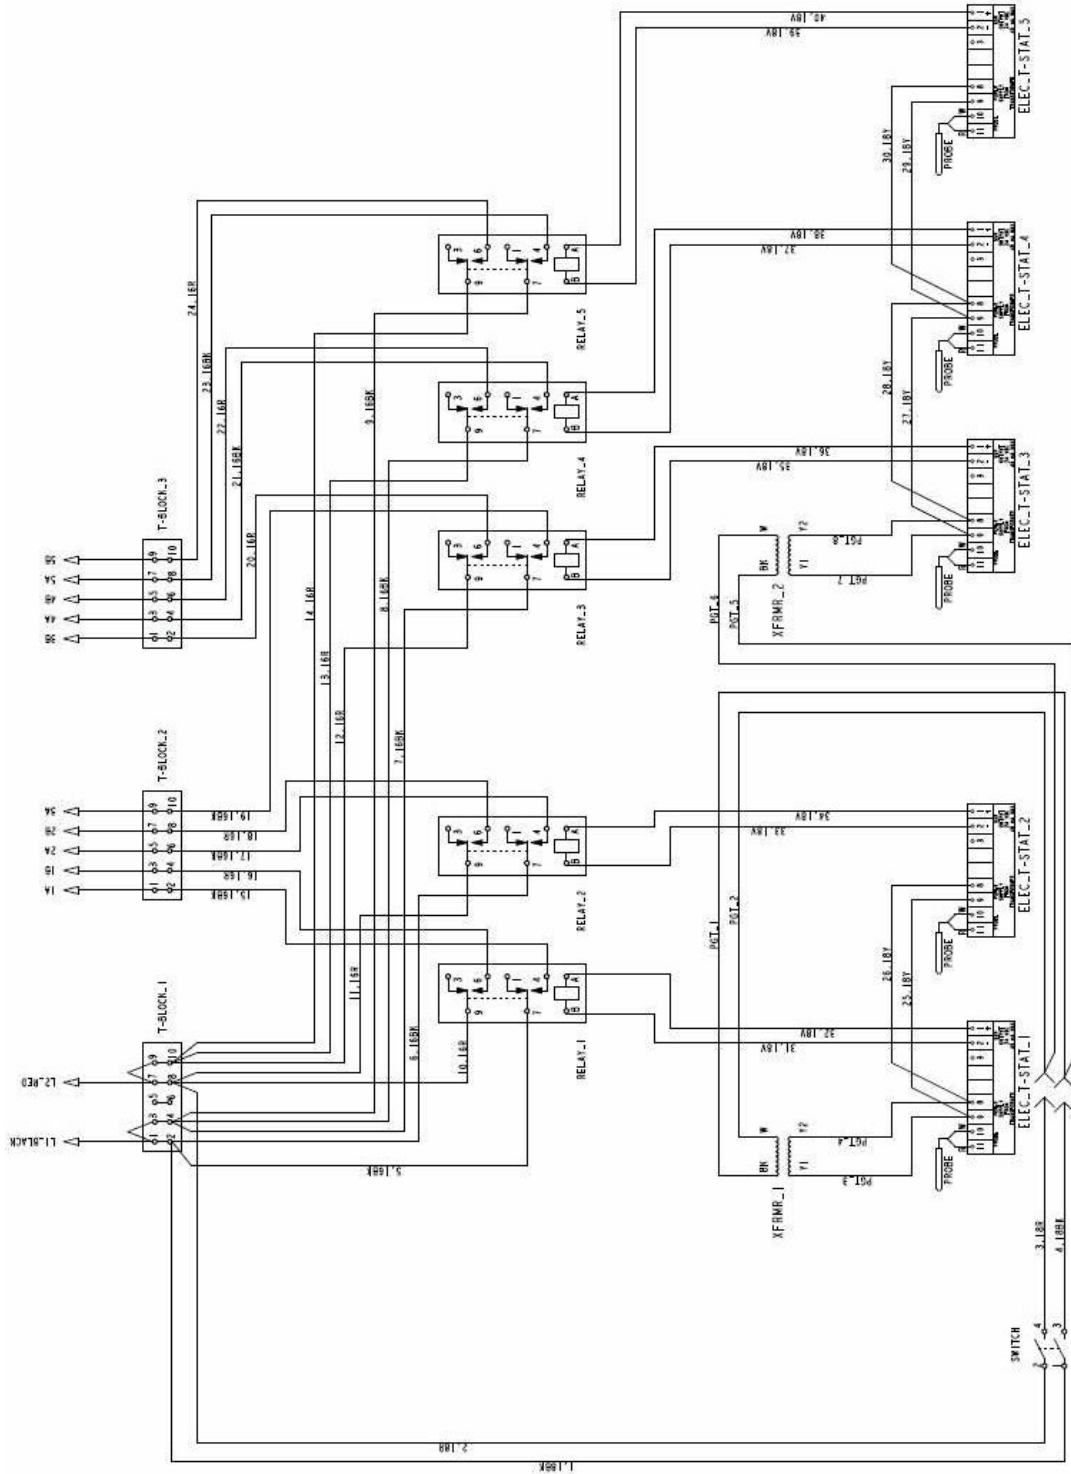


DRAWN BY: CRAIG BOOREY		PROJECT TITLE: ISLA HOT		DRAWING #: W6600028	
CHECKED BY:	DATE: 5/8/12	DRAWING TITLE:		IM-03-E5-H 240 VAC, 208 VAC 1PH/60HZ	
PRODUCTION ORDER #:	FILE LOCATION:				
REVISIONS: # DESCRIPTION:					
Hussmann Corporation, Inc. 13770 Ramona Avenue Chula Vista, CA 92017-1710 (619) 590-4910 Lic #: 644406					

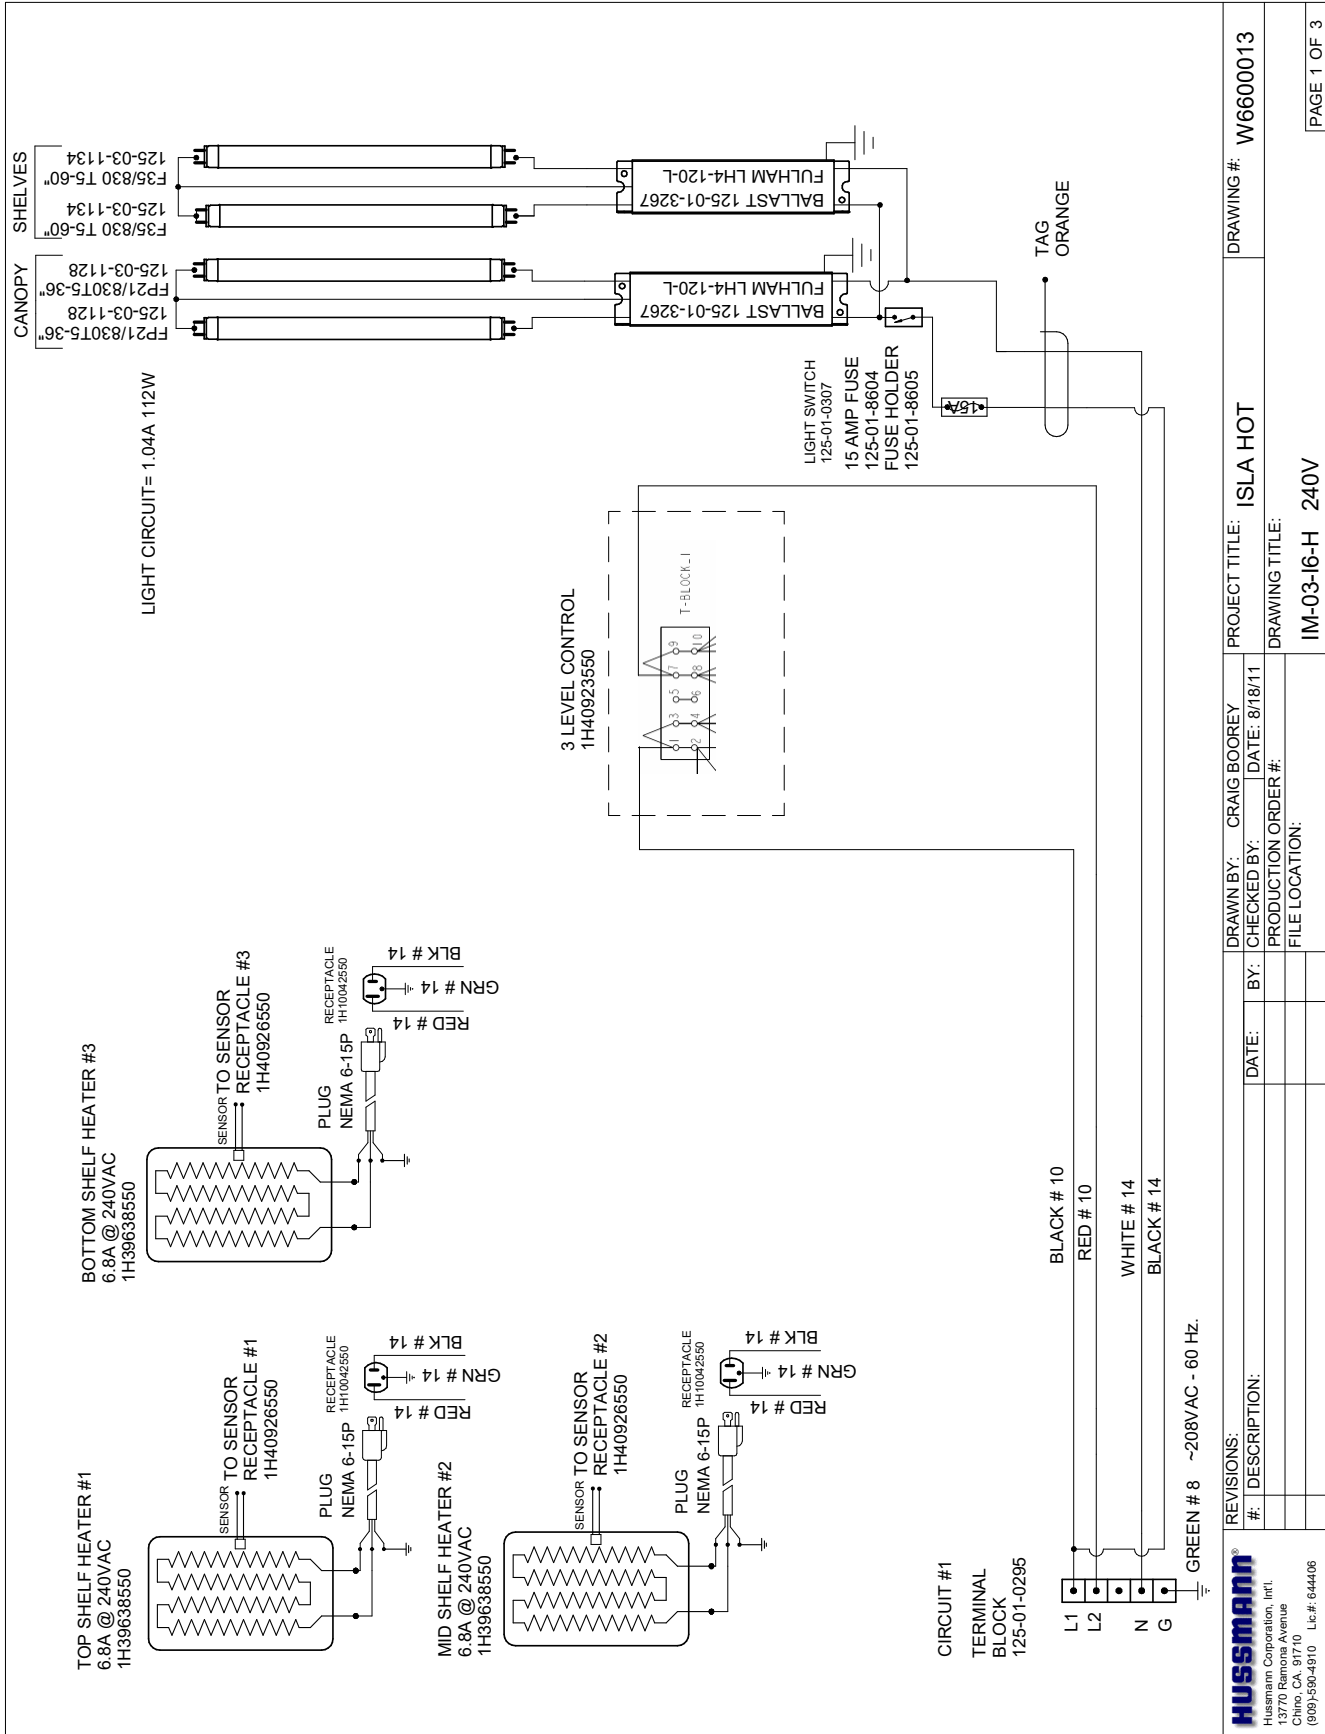

DRAWN BY: CRAIG BOOREY		PROJECT TITLE: ISLA HOT		DRAWING #: W6600013	
DATE:	BY: CHECKED BY:	DATE: 8/18/11	DRAWING TITLE: IM-03-I6-H 240V		
# DESCRIPTION:		FILE LOCATION:			
 Husmann Corporation, Inc. 7070 Hollister Avenue Chico, CA 95726 (916) 550-4810 Lic.# 644406		PAGE 1 OF 3			

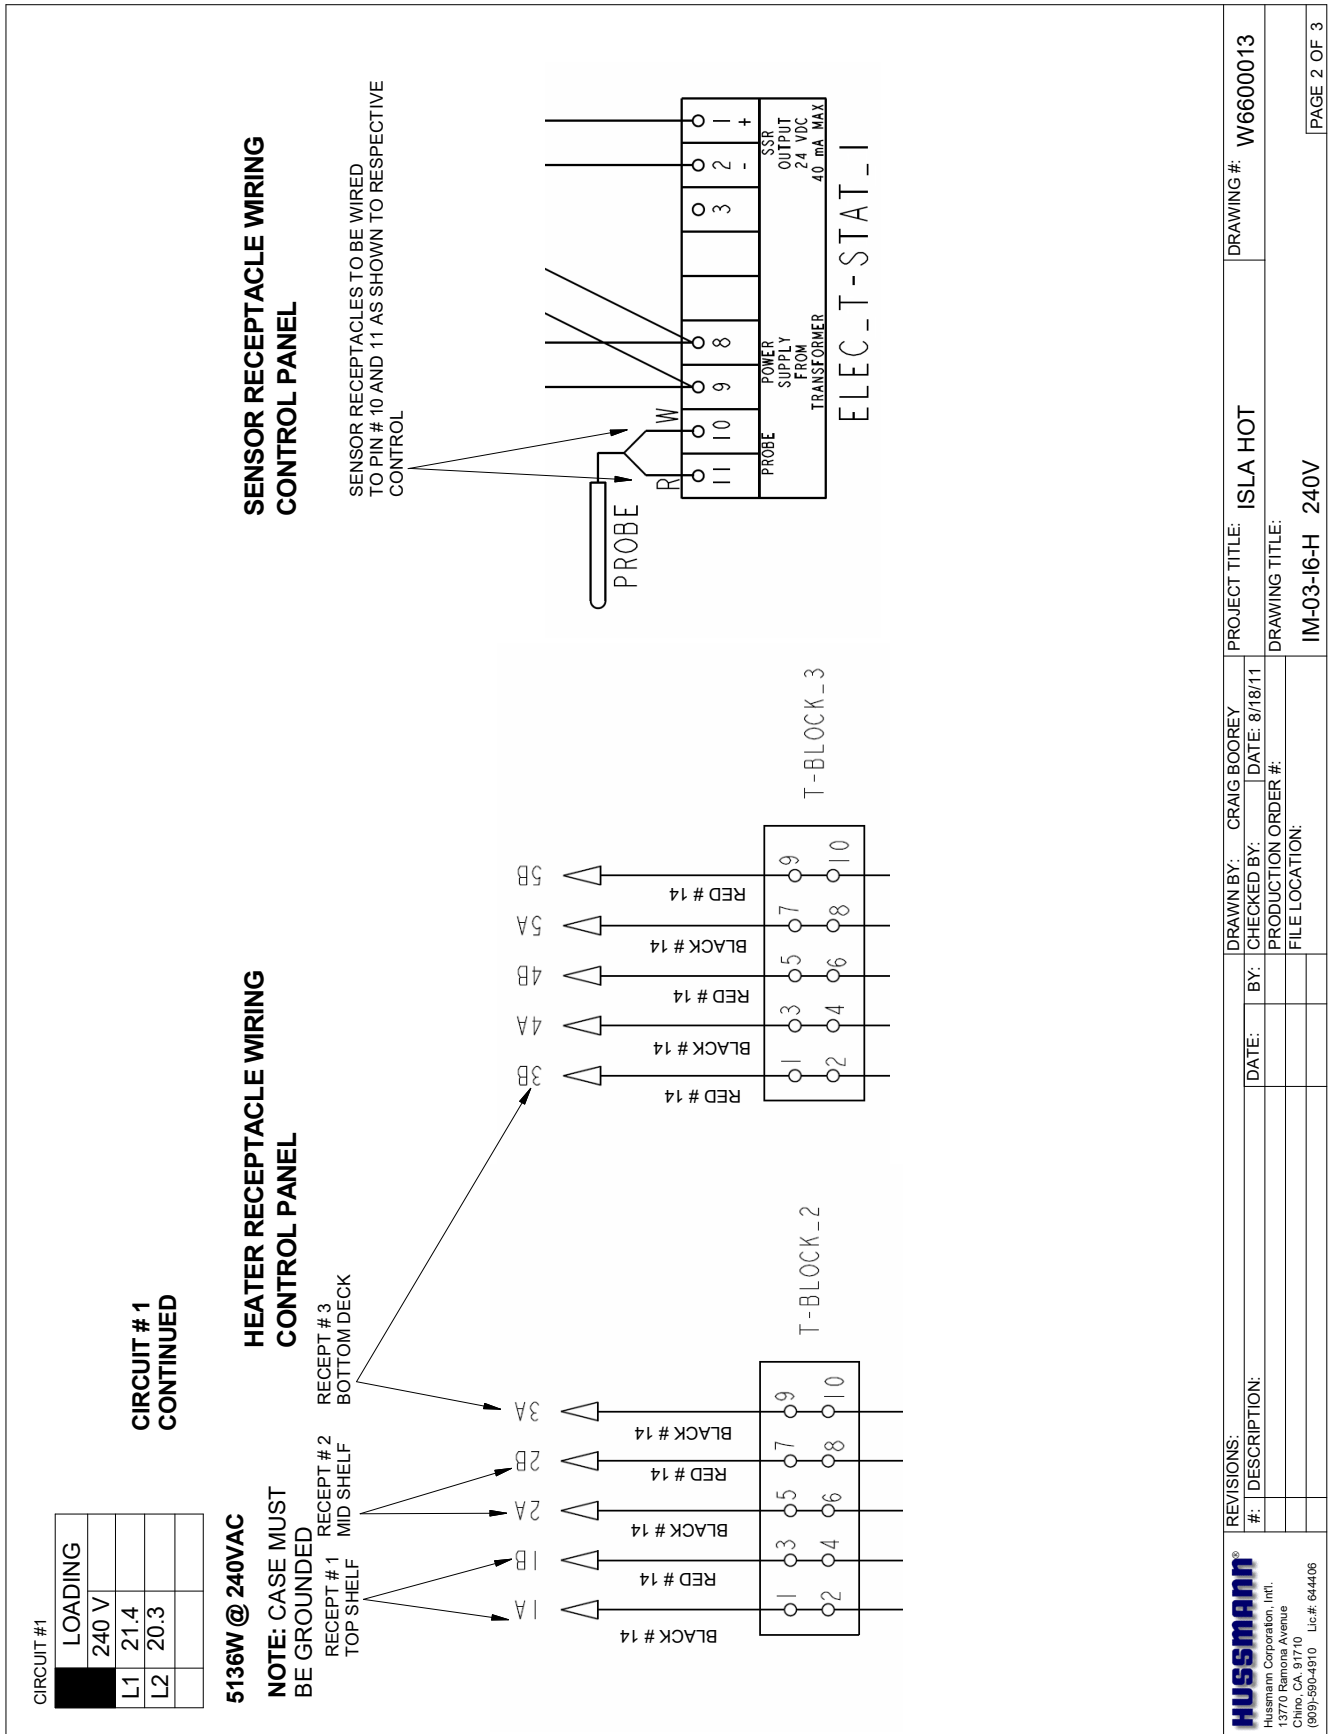


CONTROL PANEL WIRING FOR 2-5 SHELVES

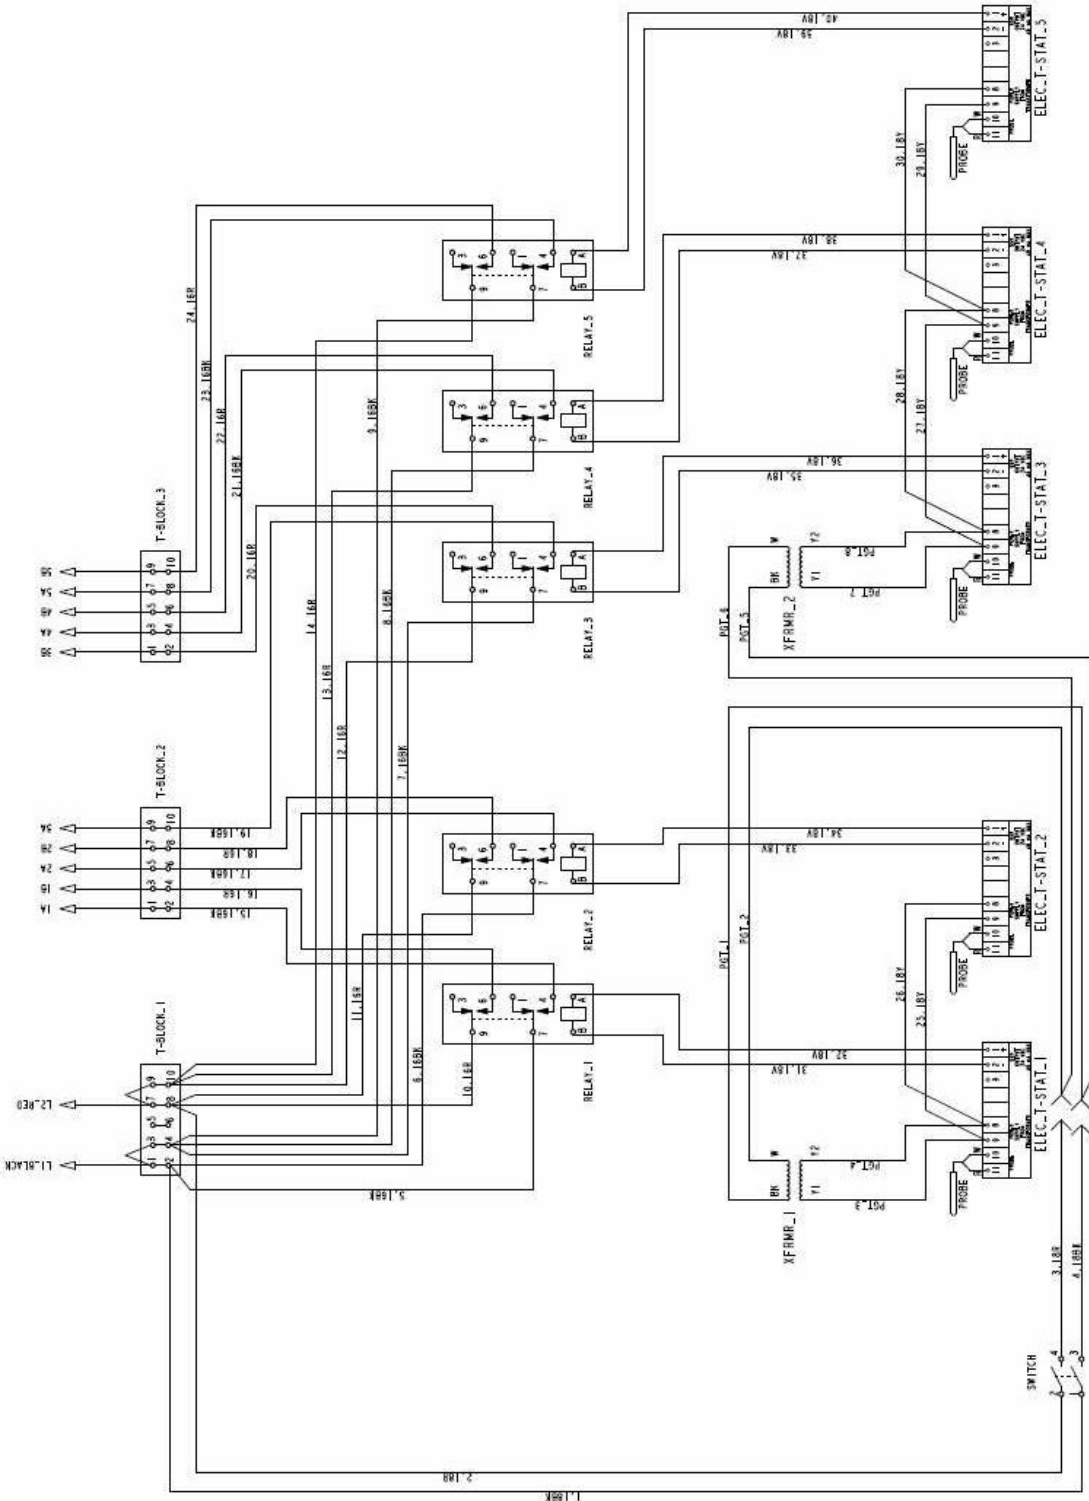

CIRCUIT # 1
CONTINUED

REVISIONS: # DESCRIPTION:	DRAWN BY: CRAIG BOOREY CHECKED BY:	PROJECT TITLE: ISLA HOT DRAWING TITLE: IM-03-16-H 240V	DRAWING #: W6600013
	DATE:	PRODUCTION ORDER #:	FILE LOCATION:
# DESCRIPTION:	DATE:	PROJECT TITLE: ISLA HOT DRAWING TITLE: IM-03-16-H 240V	DRAWING #: W6600013
# DESCRIPTION:	DATE:	PROJECT TITLE: ISLA HOT DRAWING TITLE: IM-03-16-H 240V	DRAWING #: W6600013

HUSSMANN
 Hussmann Corporation, Inc.
 13770 Riverbank Avenue
 Chino, CA 91710
 (909) 590-4910 Lic. # 644406

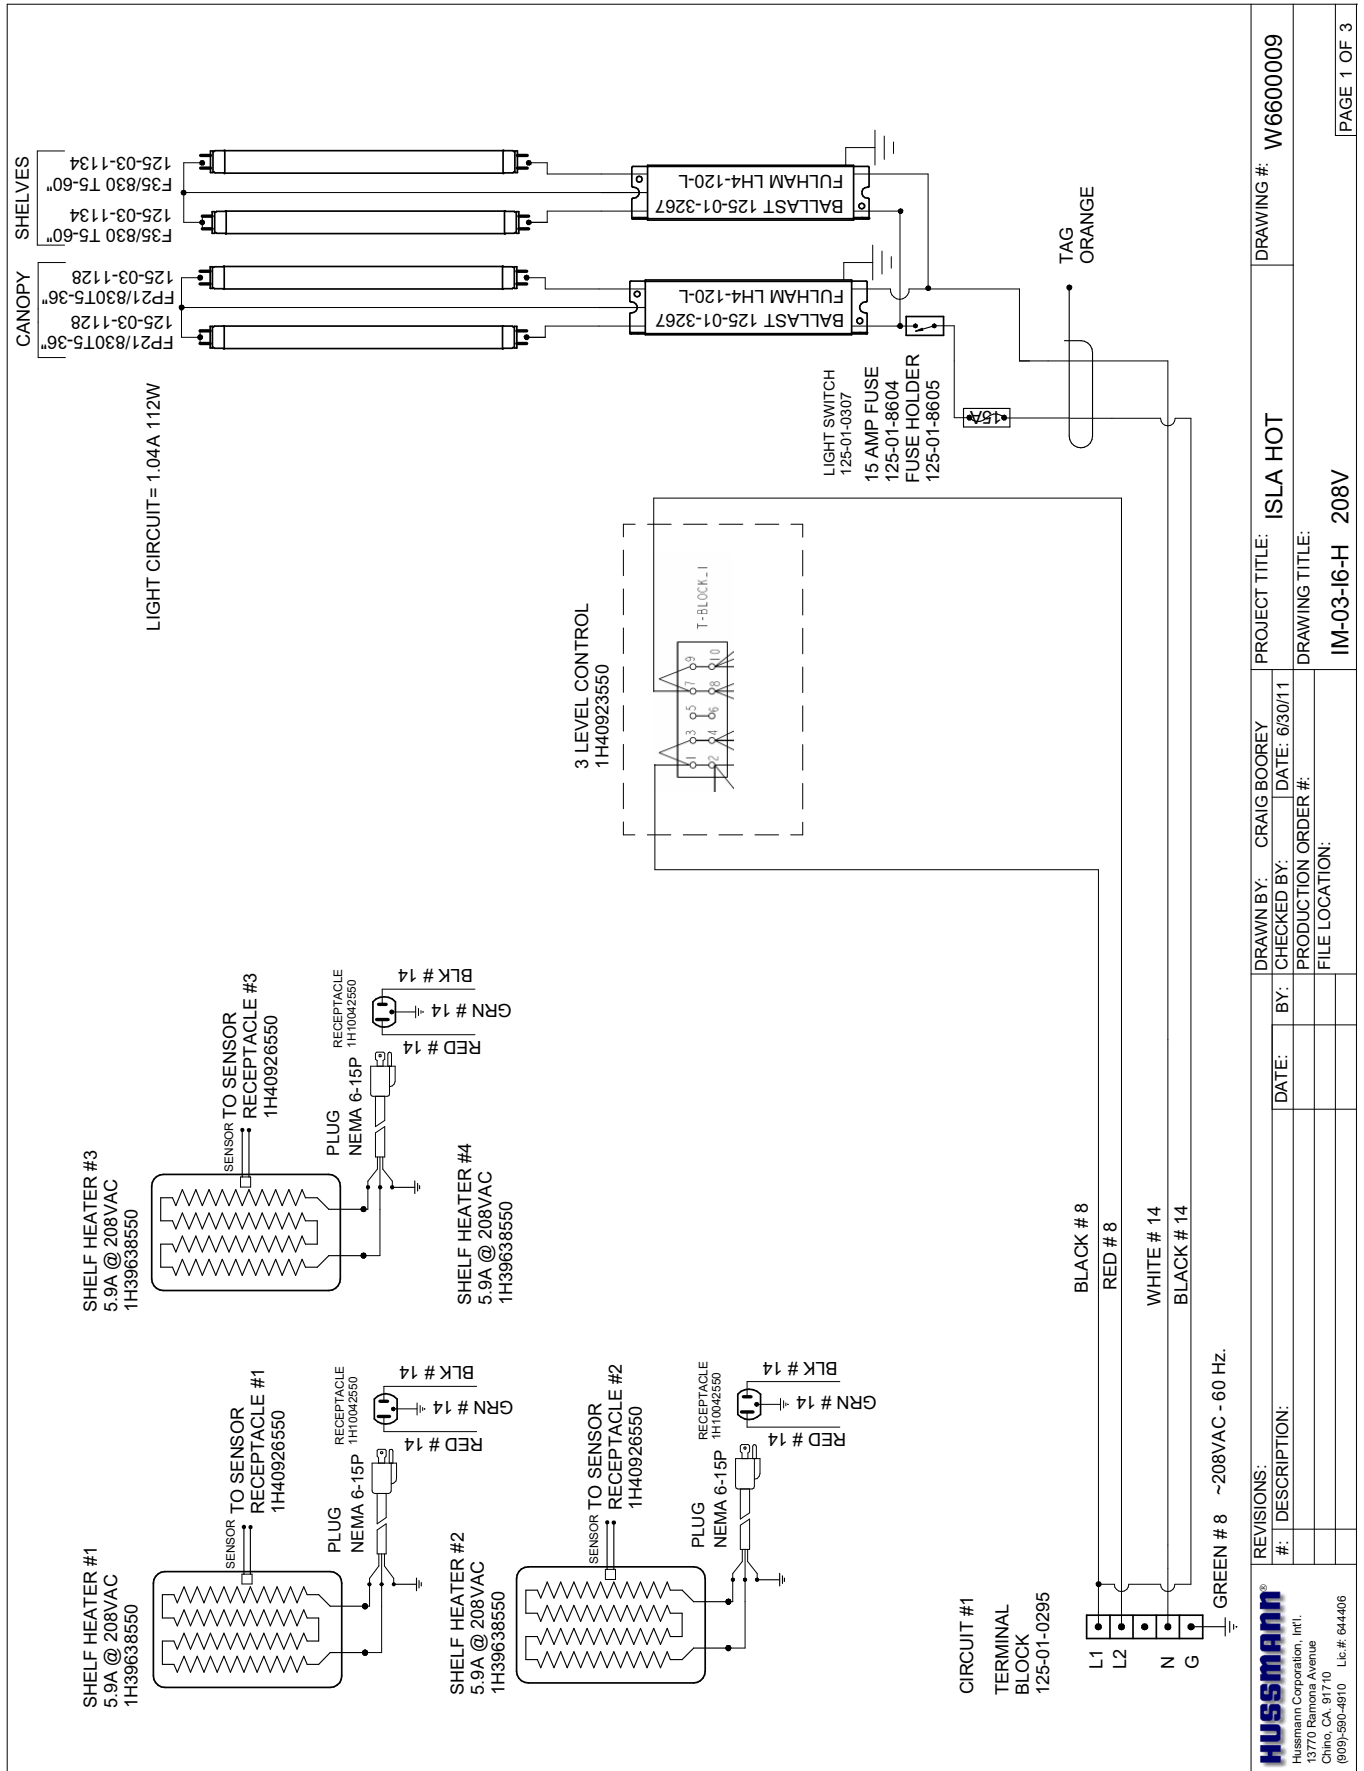

DRAWING #:		W6600009	
PROJECT TITLE:		ISLA HOT	
DRAWING TITLE:		IM-03-16-H 208V	
DRAWN BY:		CRAIG BOOREY	
CHECKED BY:		DATE: 6/30/11	
PRODUCTION ORDER #:		FILE LOCATION:	
REVISIONS:			
#:	DESCRIPTION:		

HUSSMANN®
Hussmann Corporation, Intl.
13770 Rummel Avenue
Chino, CA 91710
(909)-590-4910 Lic.#: 644406


CIRCUIT #1	
LOADING	
208 V	
L1 18.7	
L2 17.7	

CIRCUIT #1
CONTINUED

3890W @ 208VAC


NOTE: CASE MUST
BE GROUNDED

HEATER RECEPTACLE WIRING
CONTROL PANEL

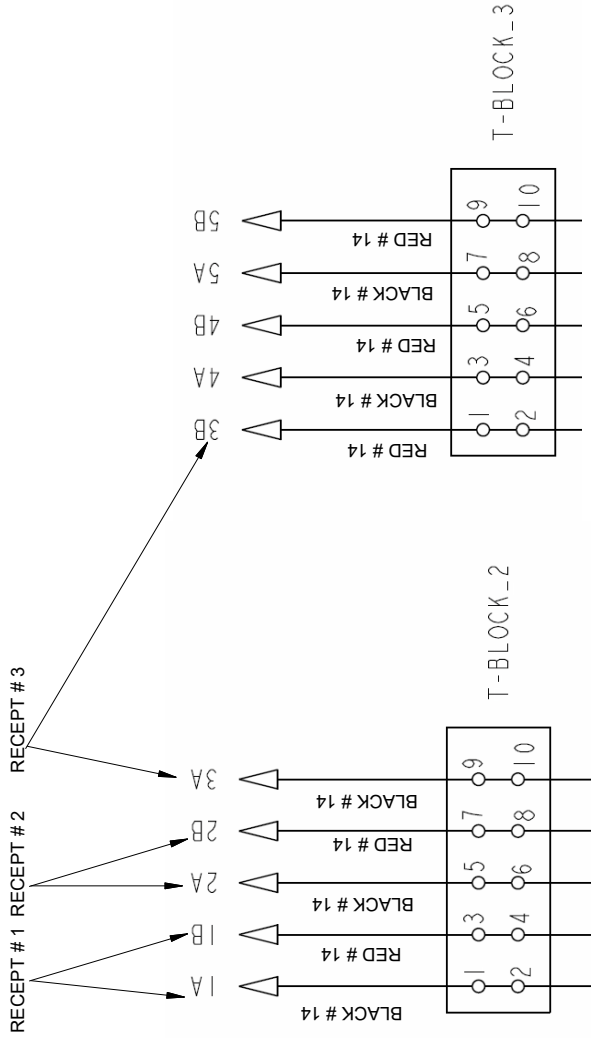

SENSOR RECEPTACLE WIRING
CONTROL PANEL

SENSOR RECEPTACLES TO BE WIRED
TO PIN # 10 AND 11 AS SHOWN TO RESPECTIVE
CONTROL

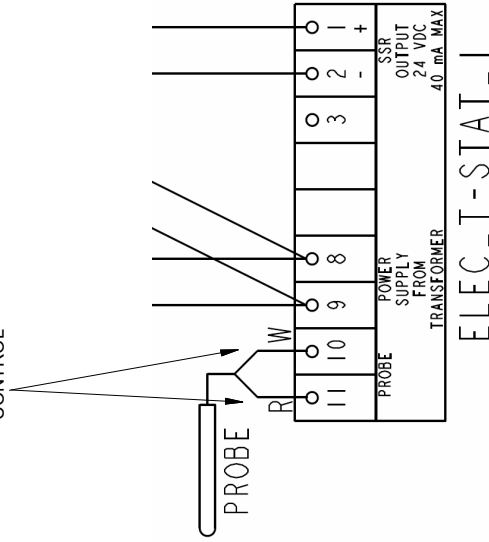

HUSSMANN
Hussmann Corporation, Int'l.
13770 Ramona Avenue
Chino, CA 91710
(909)-590-4910 Lic.#: 644406

REVISIONS:
DESCRIPTION:


DRAWN BY: CRAIG BOOREY
CHECKED BY:
DATE: 6/30/11
PRODUCTION ORDER #:
FILE LOCATION:

PROJECT TITLE: ISLA HOT
DRAWING TITLE: IM-03-I6-H 208V


DRAWING #: W6600009

CIRCUIT # 1
CONTINUED

CONTROL PANEL WIRING FOR 2-5 SHELVES

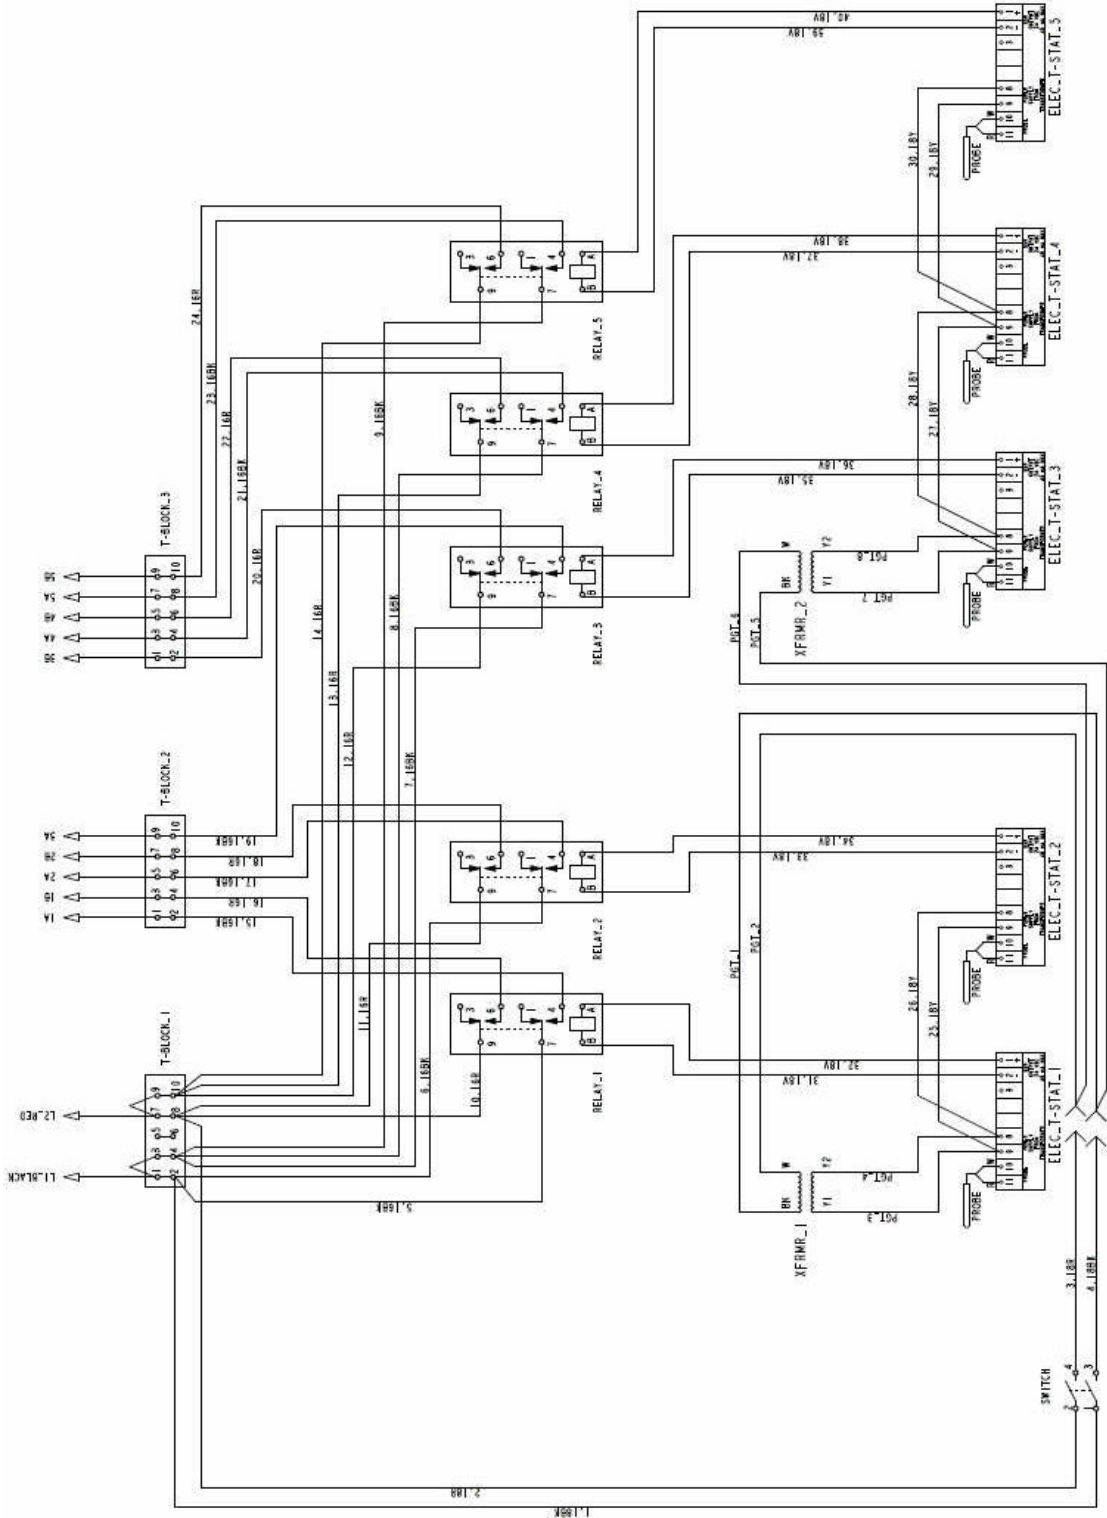

REVISIONS: #:	DESCRIPTION:	DATE:	BY:	DRAWN BY: CRAIG BOOREY	PROJECT TITLE: ISLA HOT	DRAWING #: W6600009
				CHECKED BY:		
				PRODUCTION ORDER #:		
				FILE LOCATION:	IM-03-16-H 208V	PAGE 3 OF 3

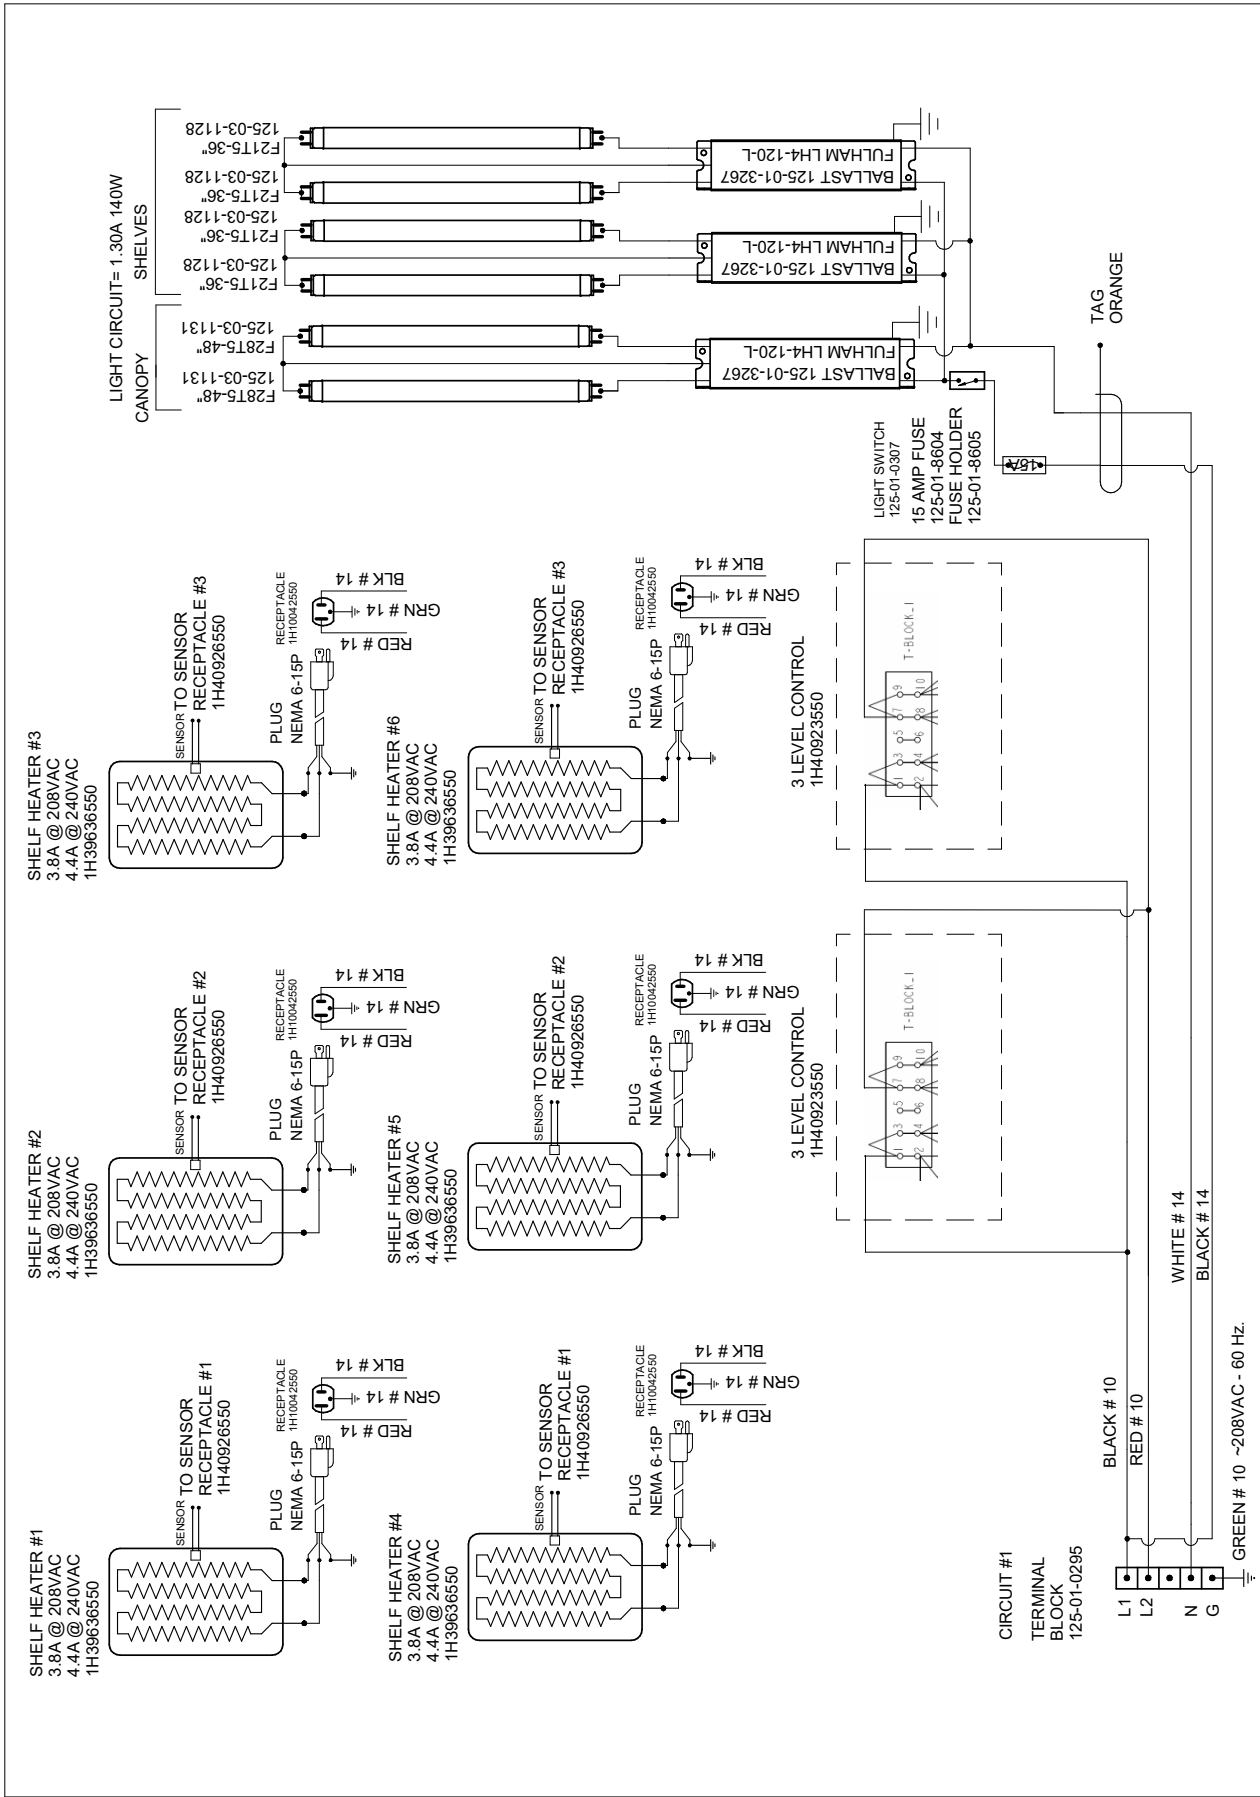

DRAWN BY: CRAIG BOOREY		PROJECT TITLE: ISLA HOT		DRAWING #: W6600039	
DATE: 7/2/12	BY: CB	DATE: 7/2/12	BY: CB	DATE: 7/2/12	BY: CB
DESCRIPTION: A CN#634531	DESCRIPTION: B RESET TO REV-B	DESCRIPTION: C	DESCRIPTION: D	DESCRIPTION: E	DESCRIPTION: F
REVISIONS:	REVISIONS:	REVISIONS:	REVISIONS:	REVISIONS:	REVISIONS:
FILE LOCATION: IM-03-18-H	FILE LOCATION:	FILE LOCATION:	FILE LOCATION:	FILE LOCATION:	FILE LOCATION:

CIRCUIT #1


LOADING	208 V	240V
L1	24.1	27.7
L2	22.8	26.4

NOTE: CASE MUST BE GROUNDED


CIRCUIT # 1 CONTINUED

5013W @ 208VAC
6648W@240VAC

HEATER RECEPTACLE WIRING CONTROL PANEL

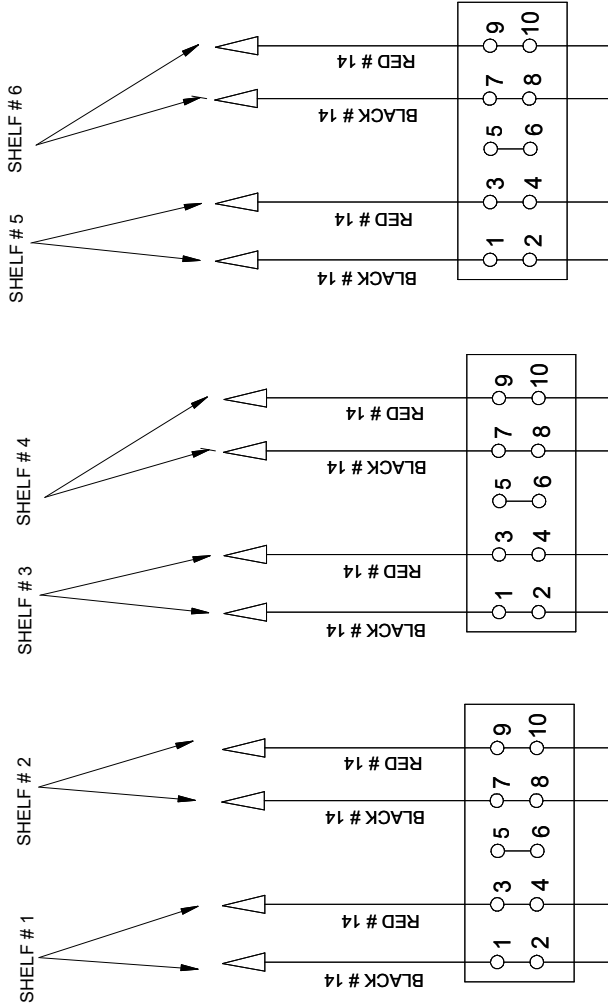

SENSOR RECEPTACLE WIRING CONTROL PANEL

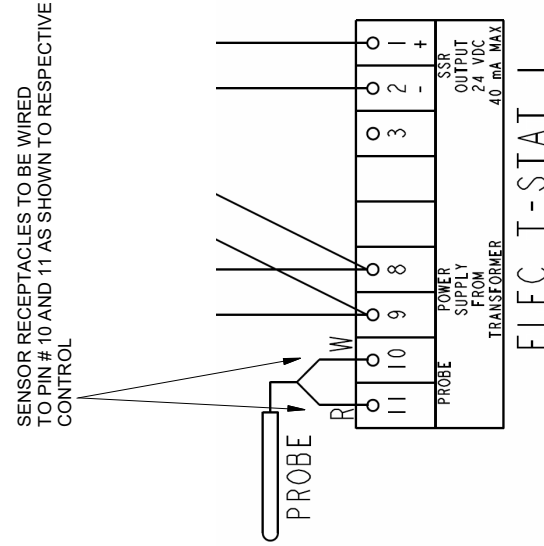

SENSOR RECEPTACLES TO BE WIRED TO PIN # 10 AND 11 AS SHOWN TO RESPECTIVE CONTROL

HUSSMANN®
Hussmann Corporation, Inc.
1700 West 17th Avenue
Chico, CA 95719 Lic.#: 644406
(909) 560-4810

REVISIONS:


#	DESCRIPTION:	DATE:	BY:
A	CN#634531	7/2/12	CB
B	RESET TO REV-B	8/15/12	CB

DRAWN BY: CRAIG BOOREY
CHECKED BY: DATE: 7/2/12
PRODUCTION ORDER #:
FILE LOCATION:

PROJECT TITLE: ISLA HOT
DRAWING TITLE: IM-03-18-H
DRAWING #: W6600039

CONTROL PANEL WIRING FOR UP TO 5 HEATED DECKS

CIRCUIT # 1
CONTINUED

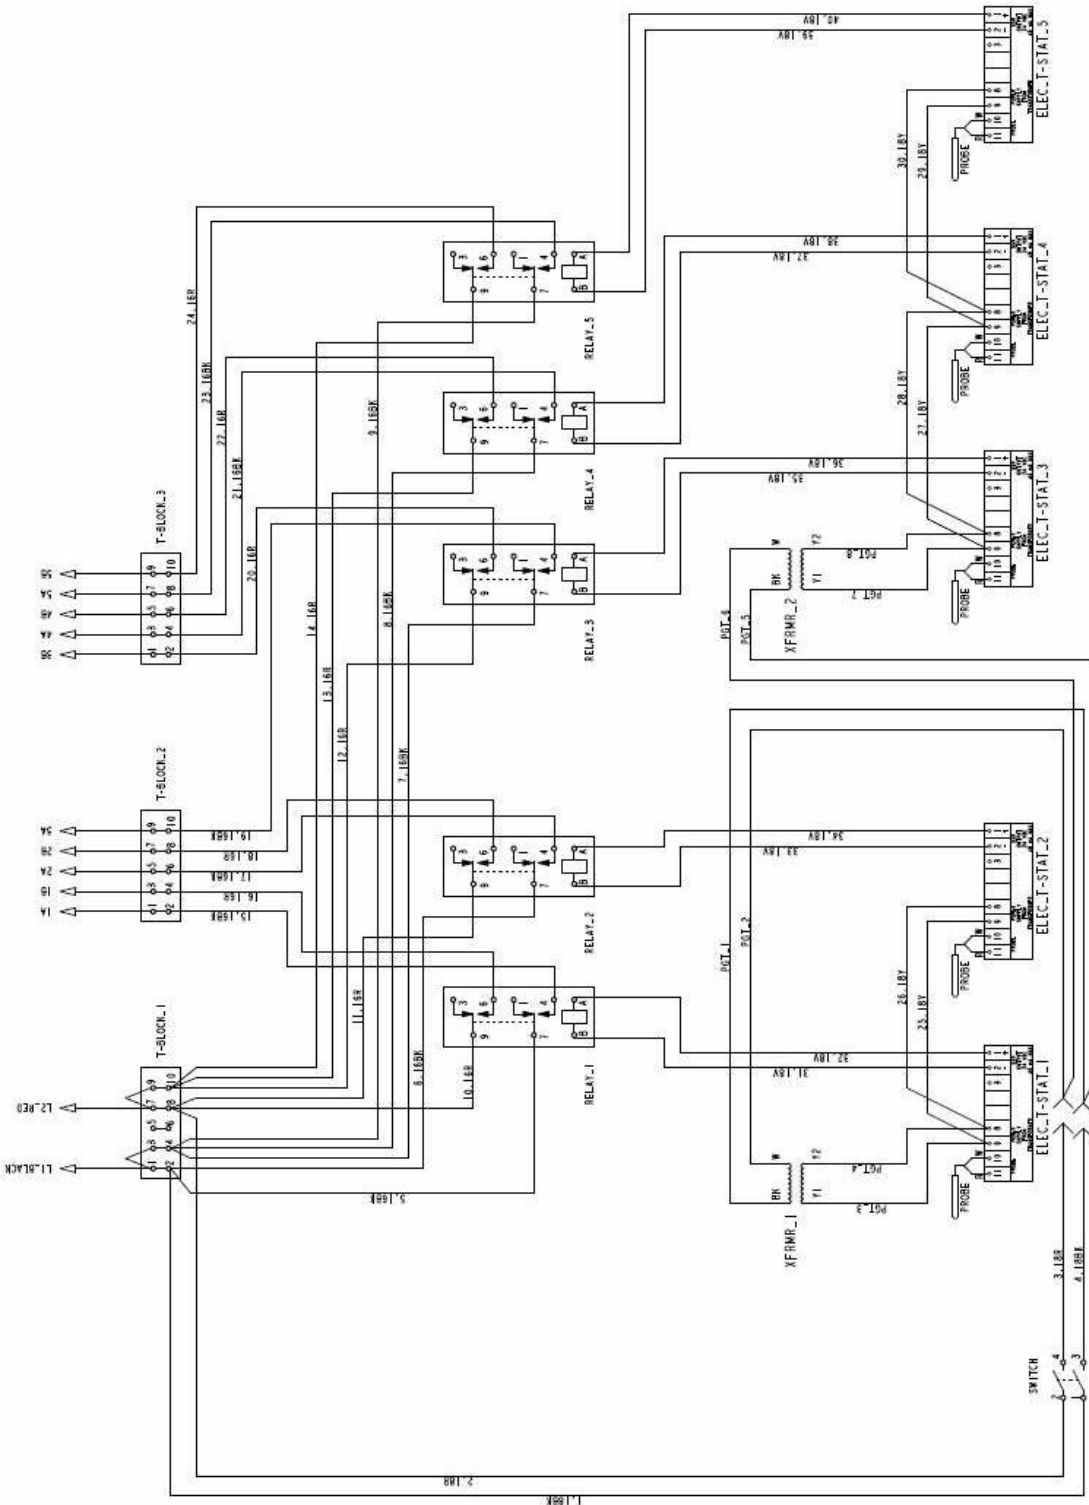


HUSSMANN
 Hussmann Corporation, Inc.
 15770 Collins Avenue
 Channahon, IL 61018
 (815) 590-4910 Lic. # 644-06

REVISIONS:
 # DESCRIPTION:
 A CN#634531
 B RESET TO REV-B

DATE: 7/2/12
 BY: CB
 PRODUCTION ORDER #:
 FILE LOCATION: IM-03-18-H


DRAWN BY: CRAIG BOOREY
 CHECKED BY:
 PROJECT TITLE: ISLA HOT
 DRAWING TITLE:

DRAWING #: W6600039
 PAGE 3 OF 3

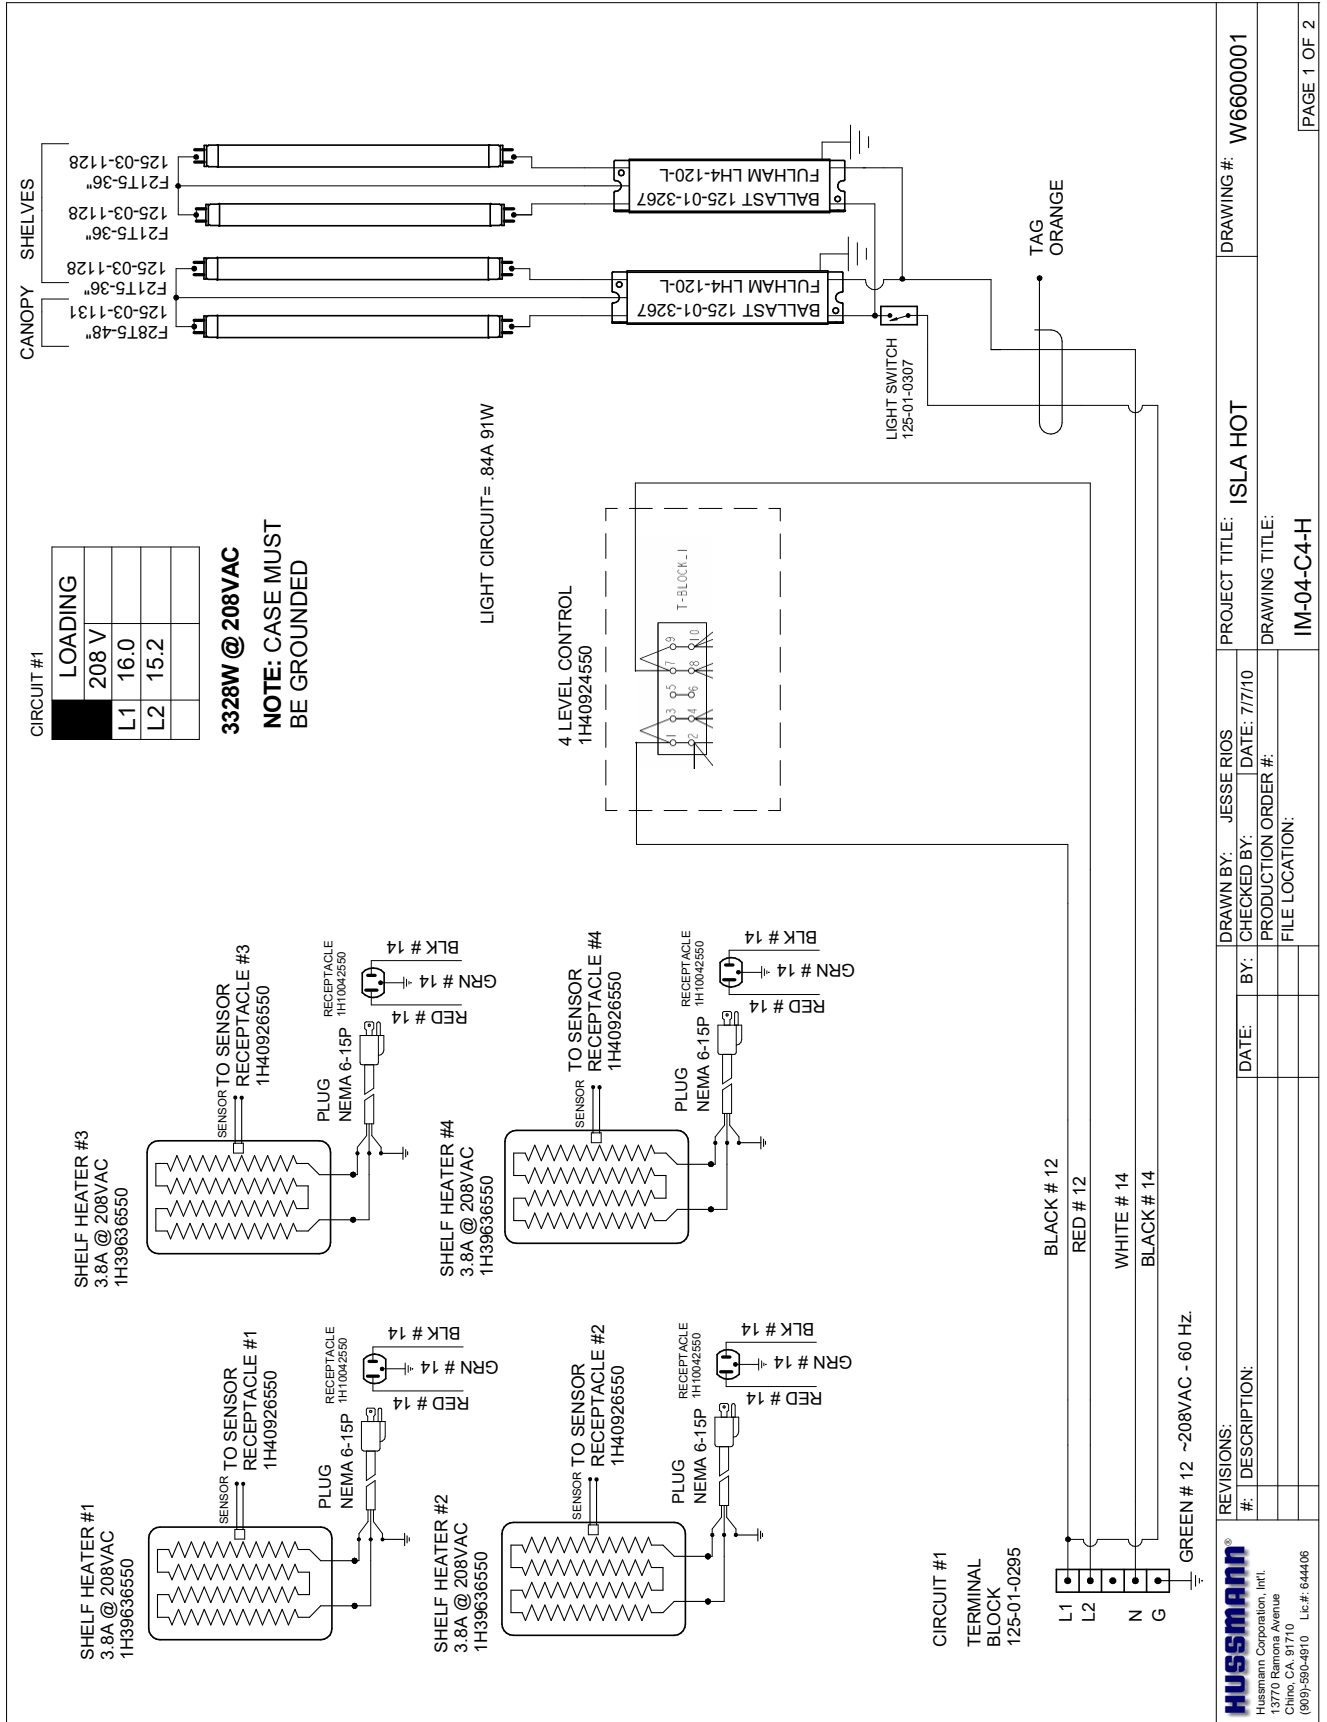


CIRCUIT # 1
CONTINUED


HEATER RECEPTACLE WIRING
CONTROL PANEL

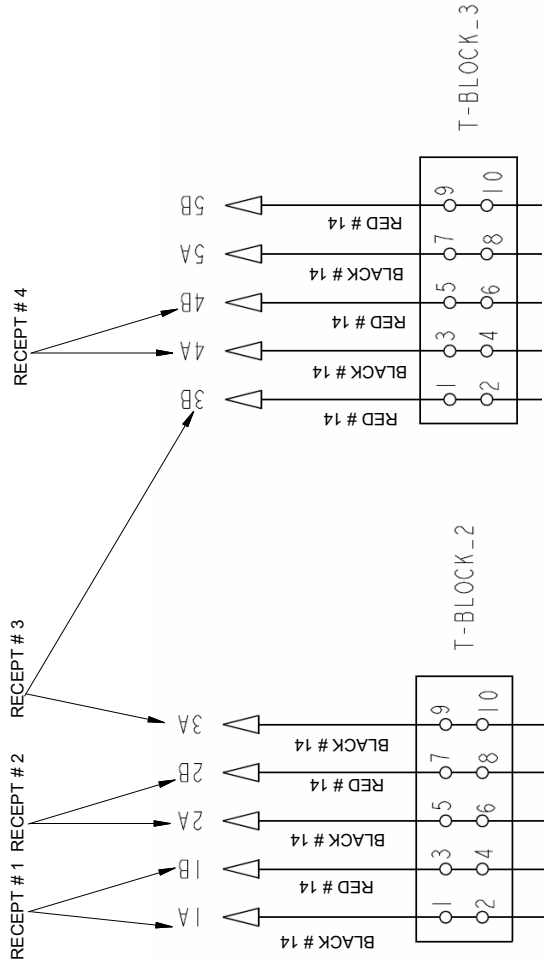

SENSOR RECEPTACLE WIRING
CONTROL PANEL

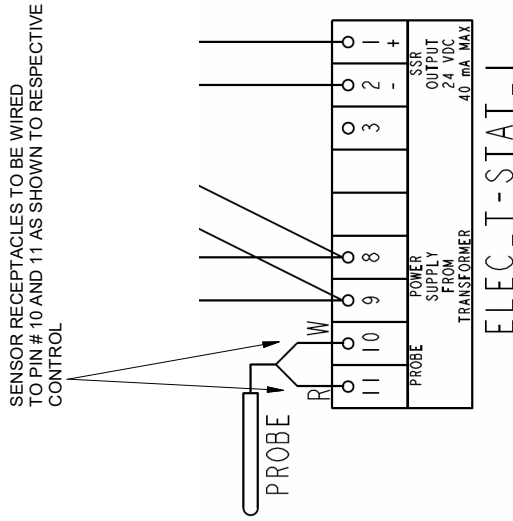



REVISIONS: #1 DESCRIPTION:		DRAWN BY: JESSE RIOS CHECKED BY:	PROJECT TITLE: ISLA HOT DRAWING #: W6600001
DATE:	BY:	DATE: 7/7/10 PRODUCTION ORDER #:	DRAWING TITLE: IM-04-C4-H FILE LOCATION:
HUSSMANN Hussmann Corporation, Int'l. 13770 Ramona Avenue Chino, CA 91710 (909) 596-4910 Ltr. #: 644406		ELEC_T-STAT_1 T-BLOCK_2 T-BLOCK_3	

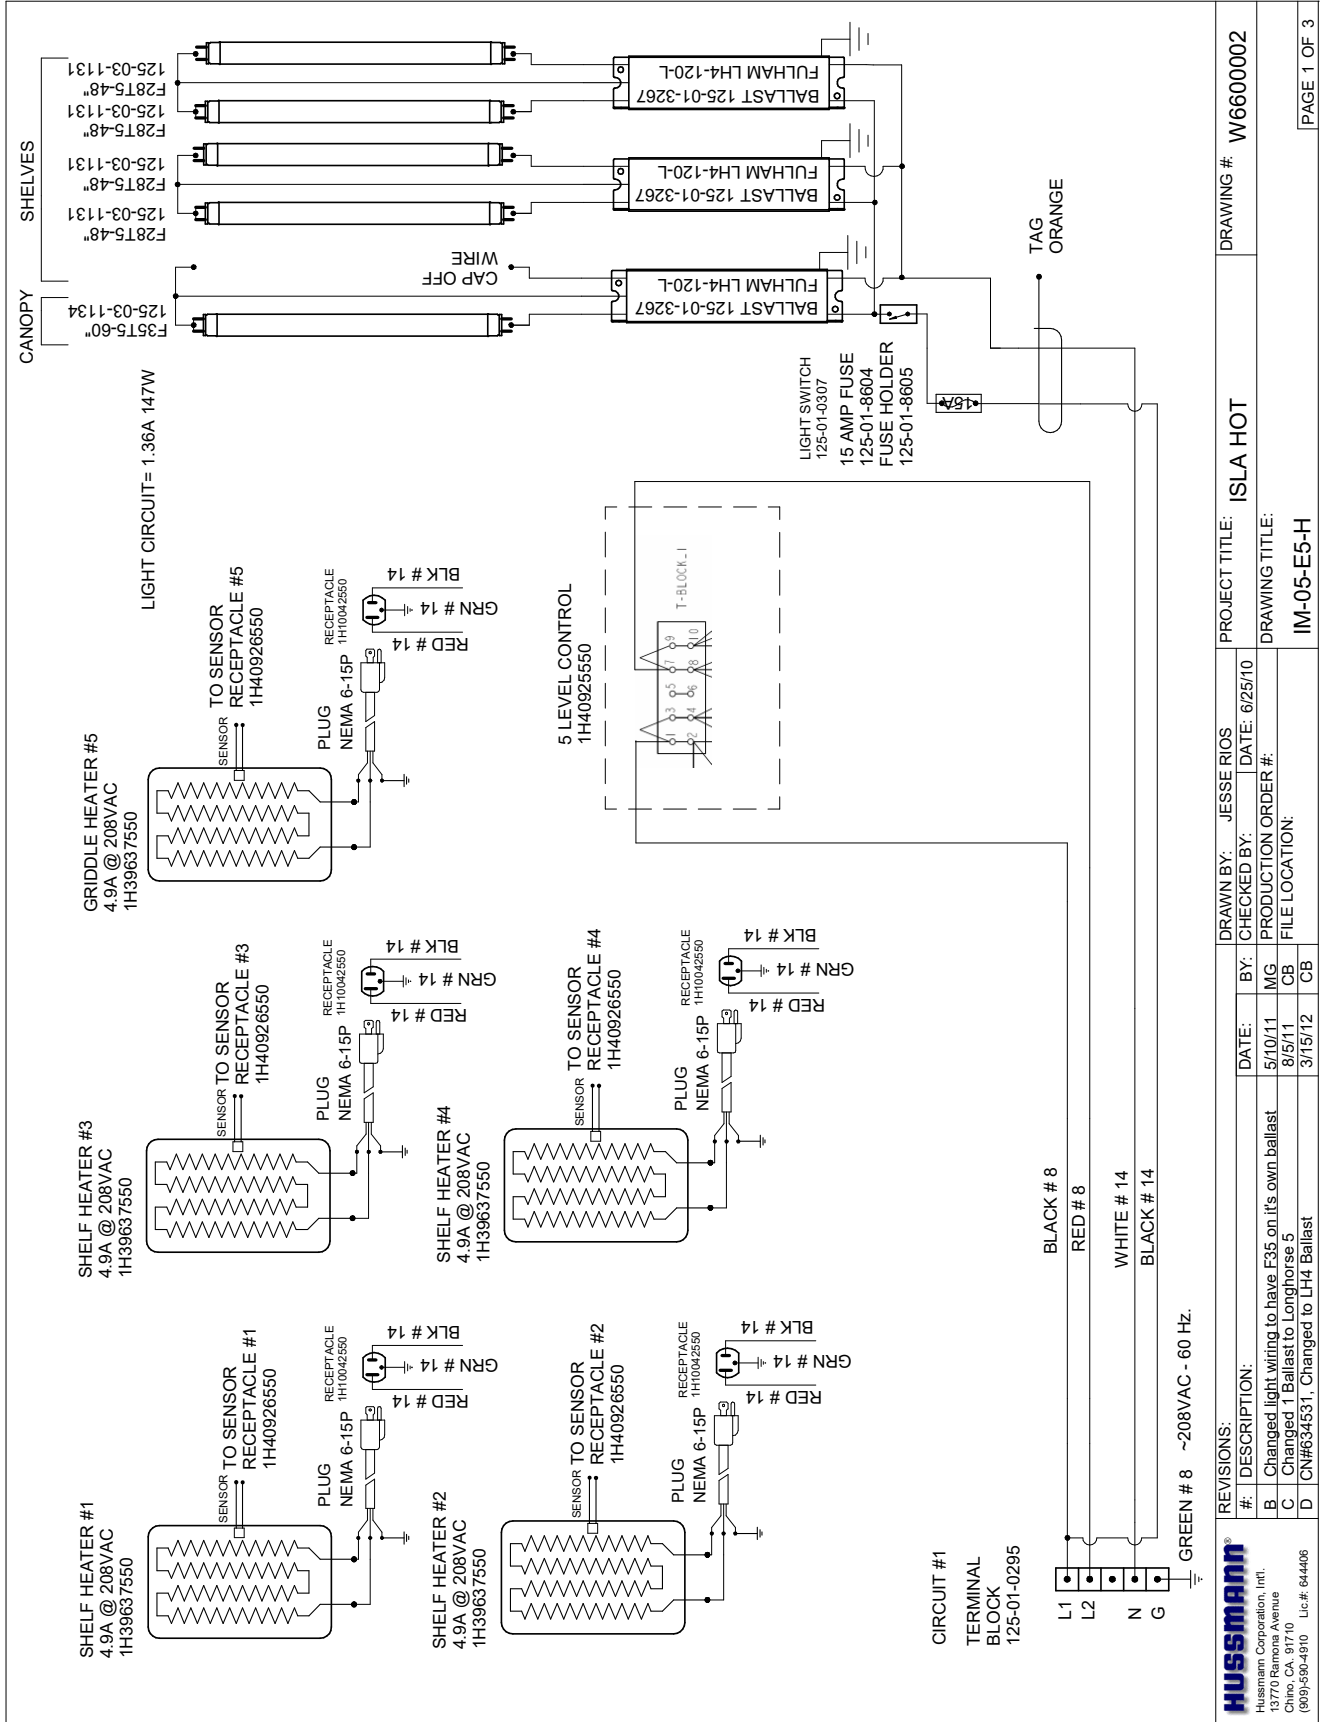

DRAWN BY: JESSE RIOS		PROJECT TITLE: ISLA HOT		DRAWING #: W6600002	
CHECKED BY:		DATE: 6/25/10		DRAWING TITLE:	
BY: IMG		PRODUCTION ORDER #:		IM-05-E5-H	
DATE: 5/10/11		FILE LOCATION:		PAGE 1 OF 3	
8/5/11					
3/15/12					


HUSSMANN
Hussmann Corporation, Inc.
7770 Main Avenue
Channahon, IL 61018
(815) 599-4810 Lic #: 644406

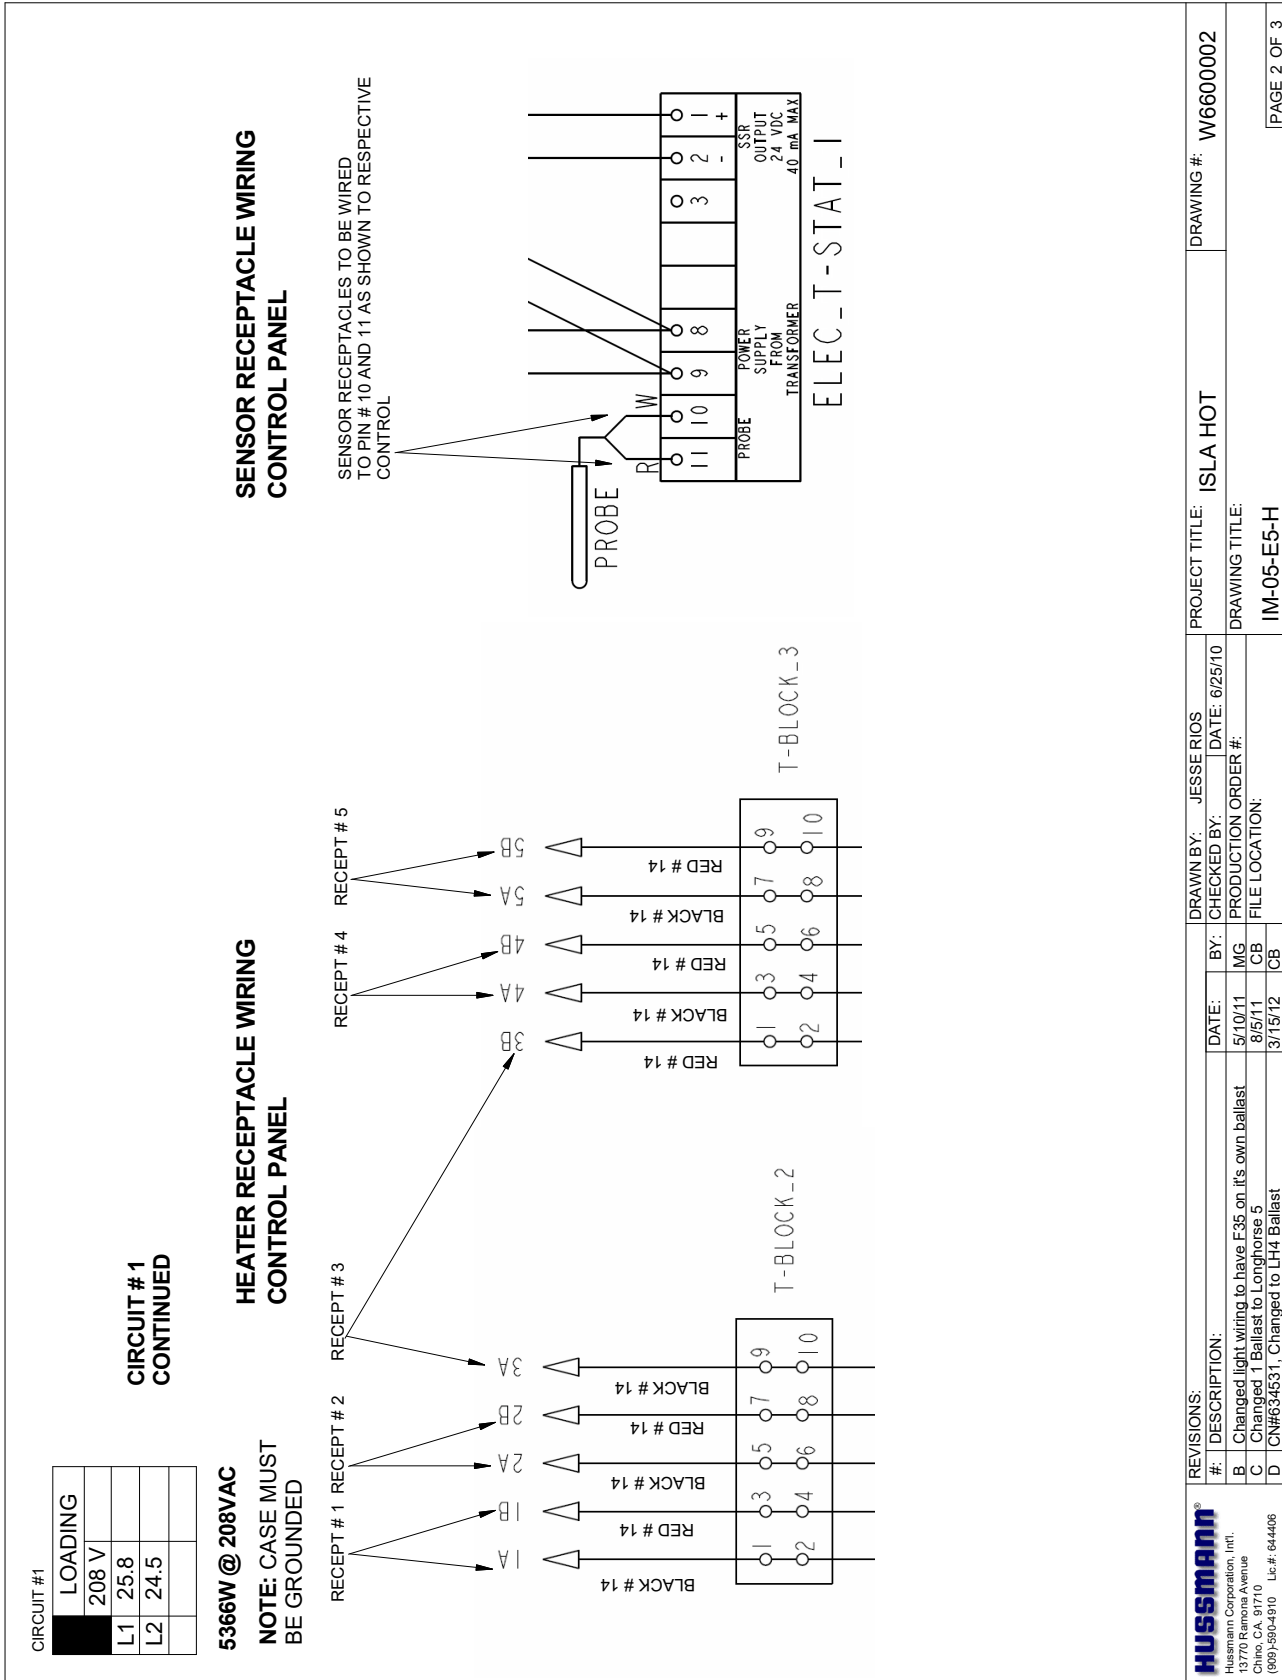

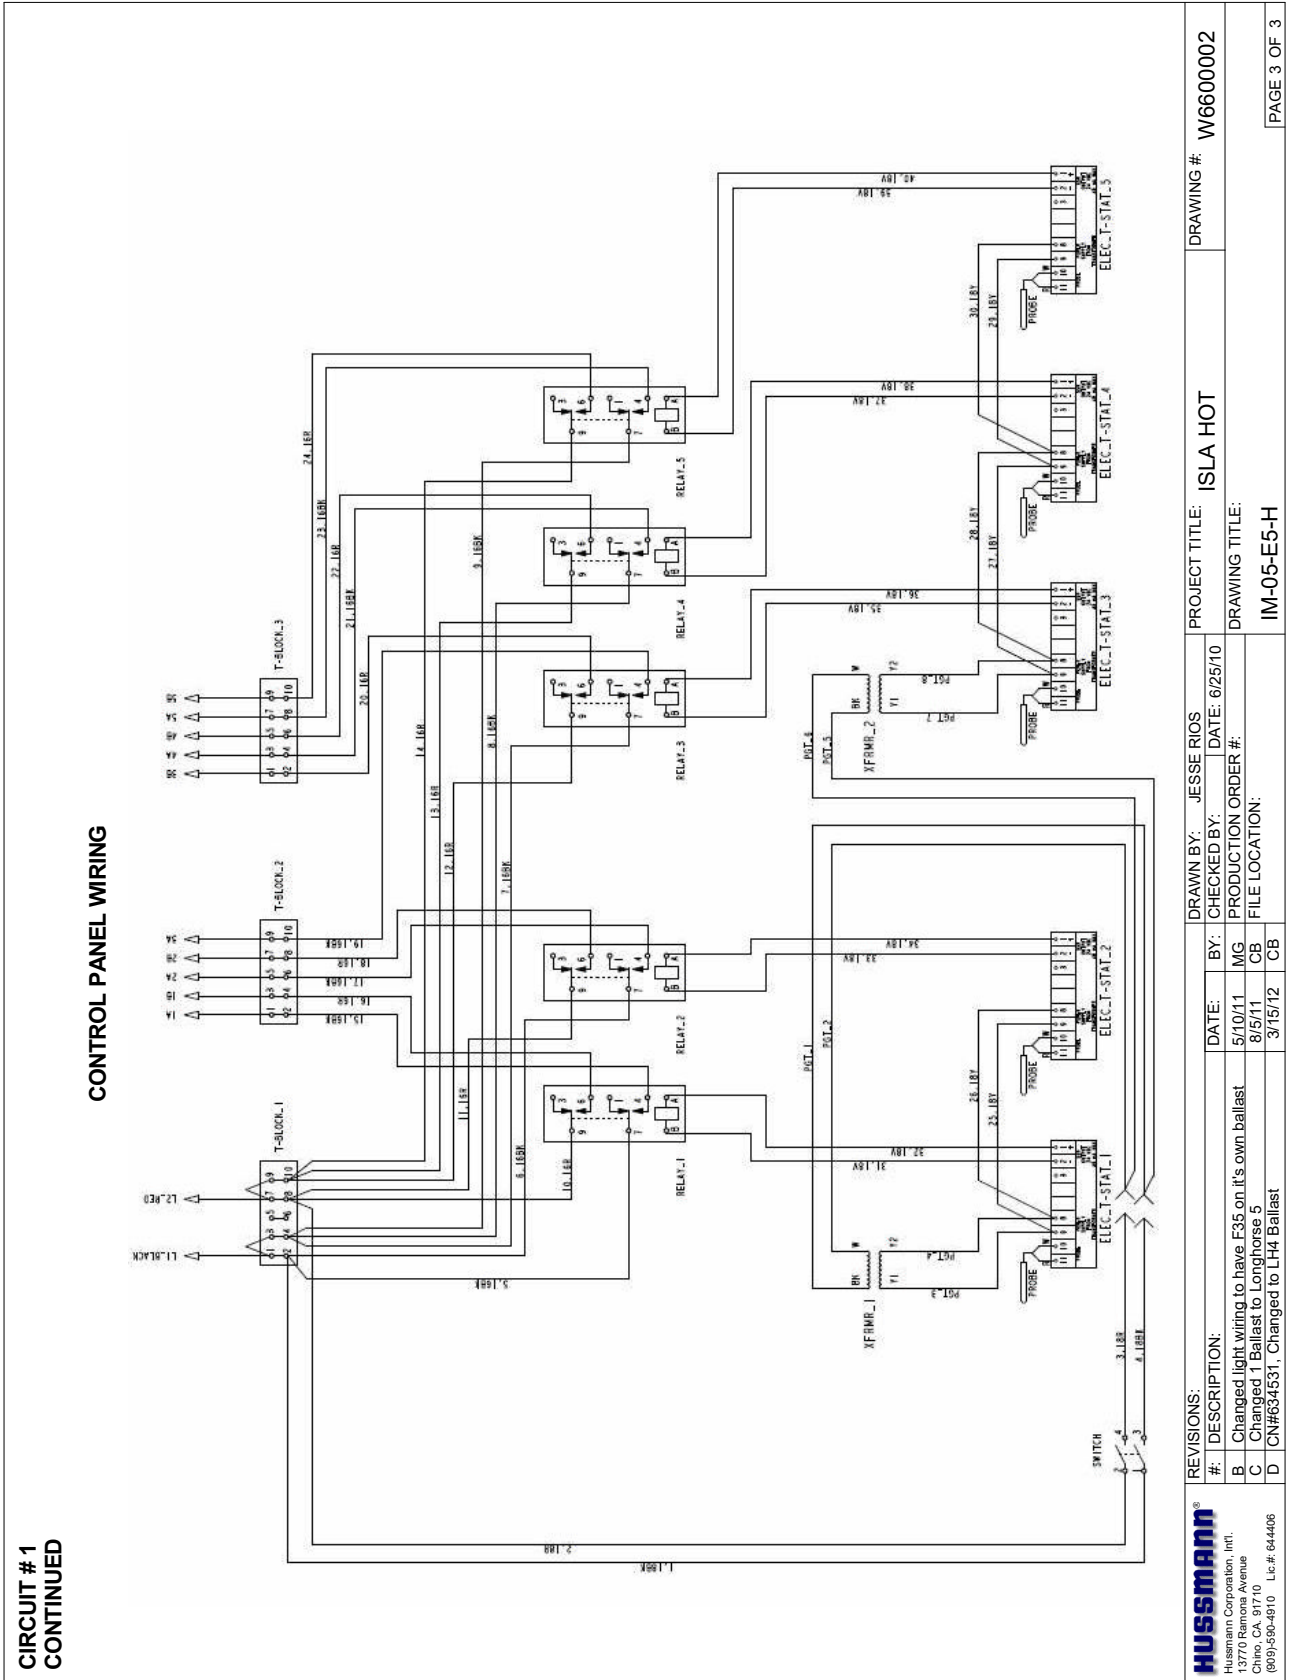


CIRCUIT # 1
CONTINUED

HUSMANN Husmann Corporation, Inc. 13770 Rimm Road Chico, CA 95710 (909)590-4910 Lic.# 644406		REVISIONS: # 1 DESCRIPTION: B Changed light wiring to have F35 on it's own ballast C Changed 1 Ballast to Longhorse 5 D CN#634531, Changed to LH4 Ballast	DRAWN BY: JESSE RIOS CHECKED BY: MG DATE: 5/10/11 8/5/11 3/15/12	PROJECT TITLE: ISLA HOT DRAWING TITLE: IM-05-E5-H	DRAWING #: W6600002 DATE: 6/25/10 PRODUCTION ORDER #: FILE LOCATION: CB	PAGE 3 OF 3
---	--	---	--	--	--	-------------

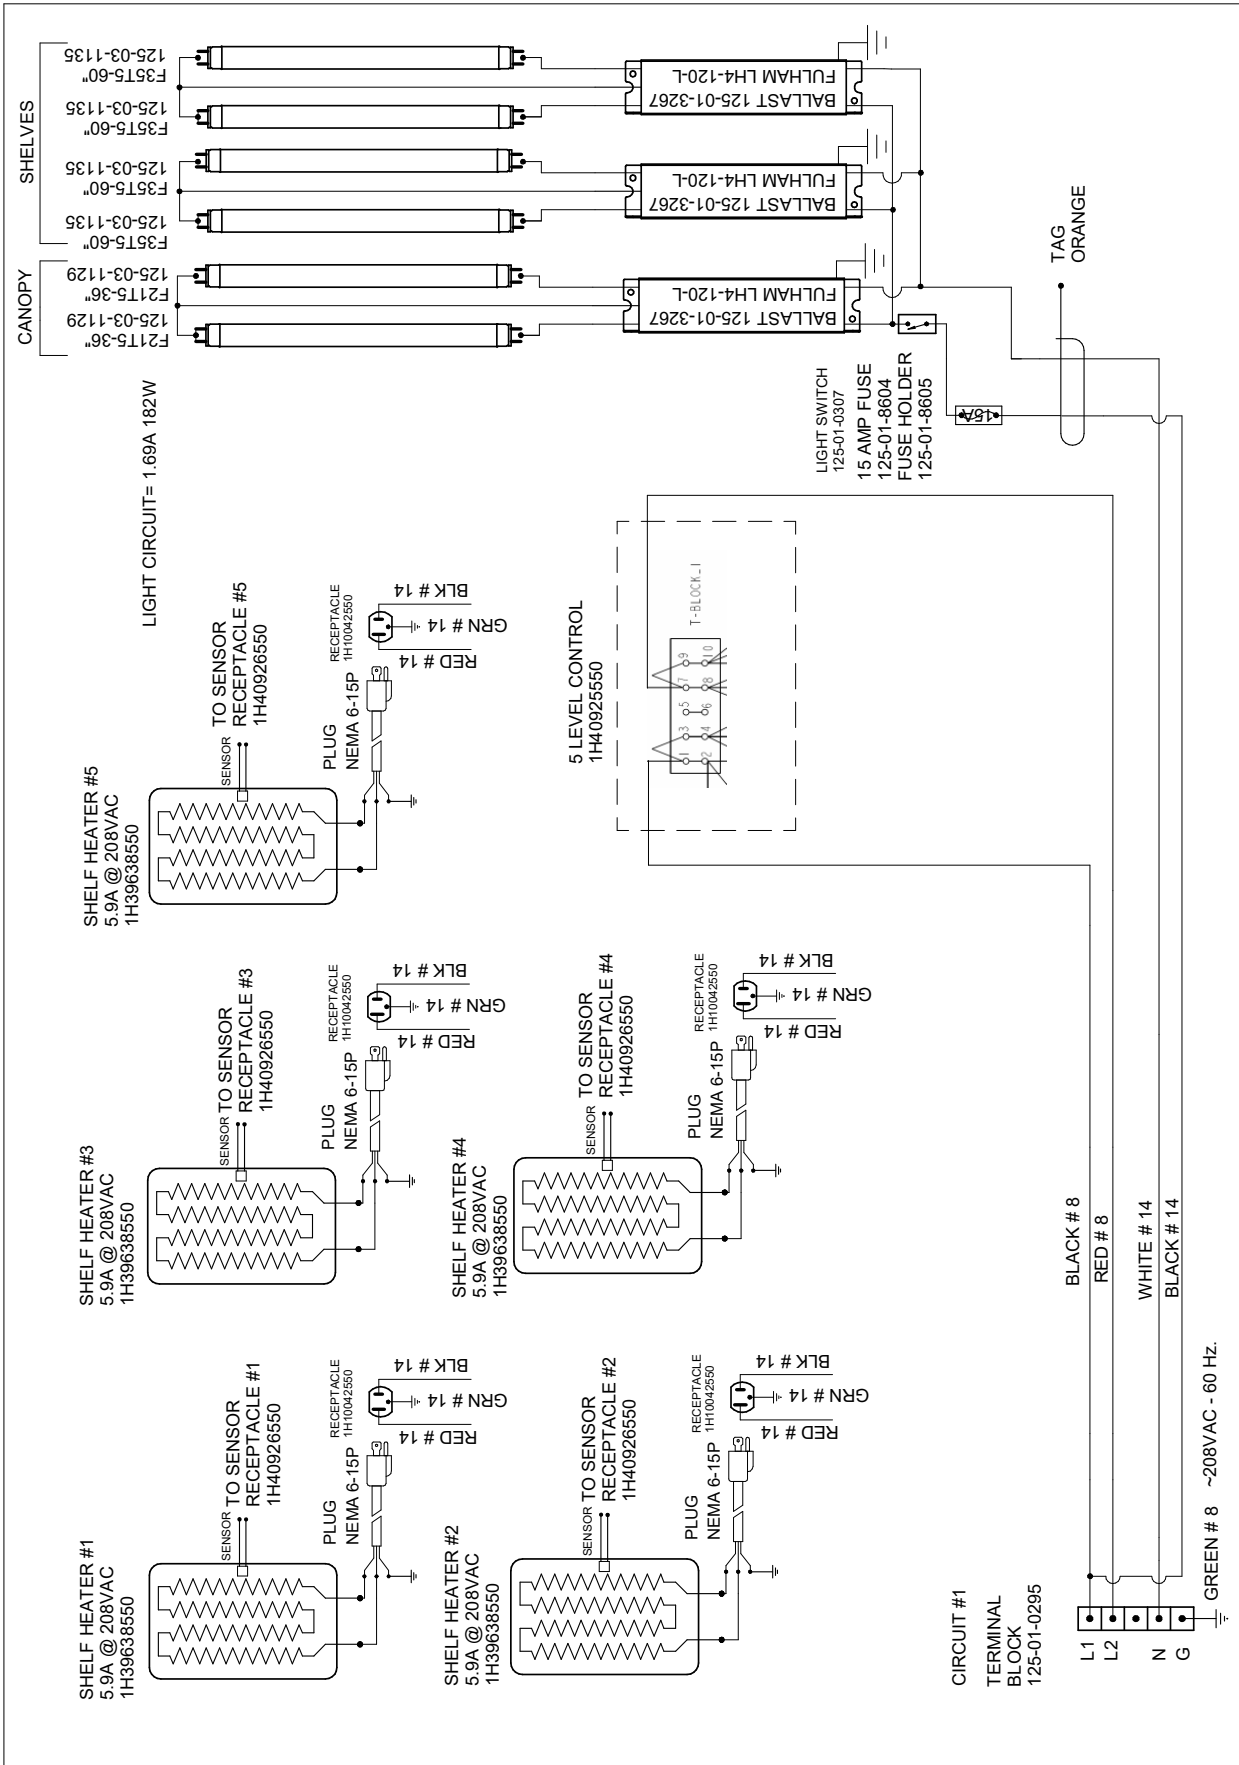

DRAWING TITLE: ISLA HOT		DRAWING #: W6600003	
PROJECT TITLE:	DATE: 7/16/10	DRAWING ORDER #:	
BY:	FILE LOCATION:	PRODUCTION ORDER #:	
DATE:		FILE LOCATION:	
DRAWN BY: JESSE RIOS	DRAWING TITLE: IM-05-C6-H		
CHECKED BY:			
REVISIONS:			
#:	DESCRIPTION:		
HUSSMANN Hussmann Corporation, Int'l. 13770 Ramona Avenue Chino, CA 91710 (909)-590-4910 Lic.# 644406			

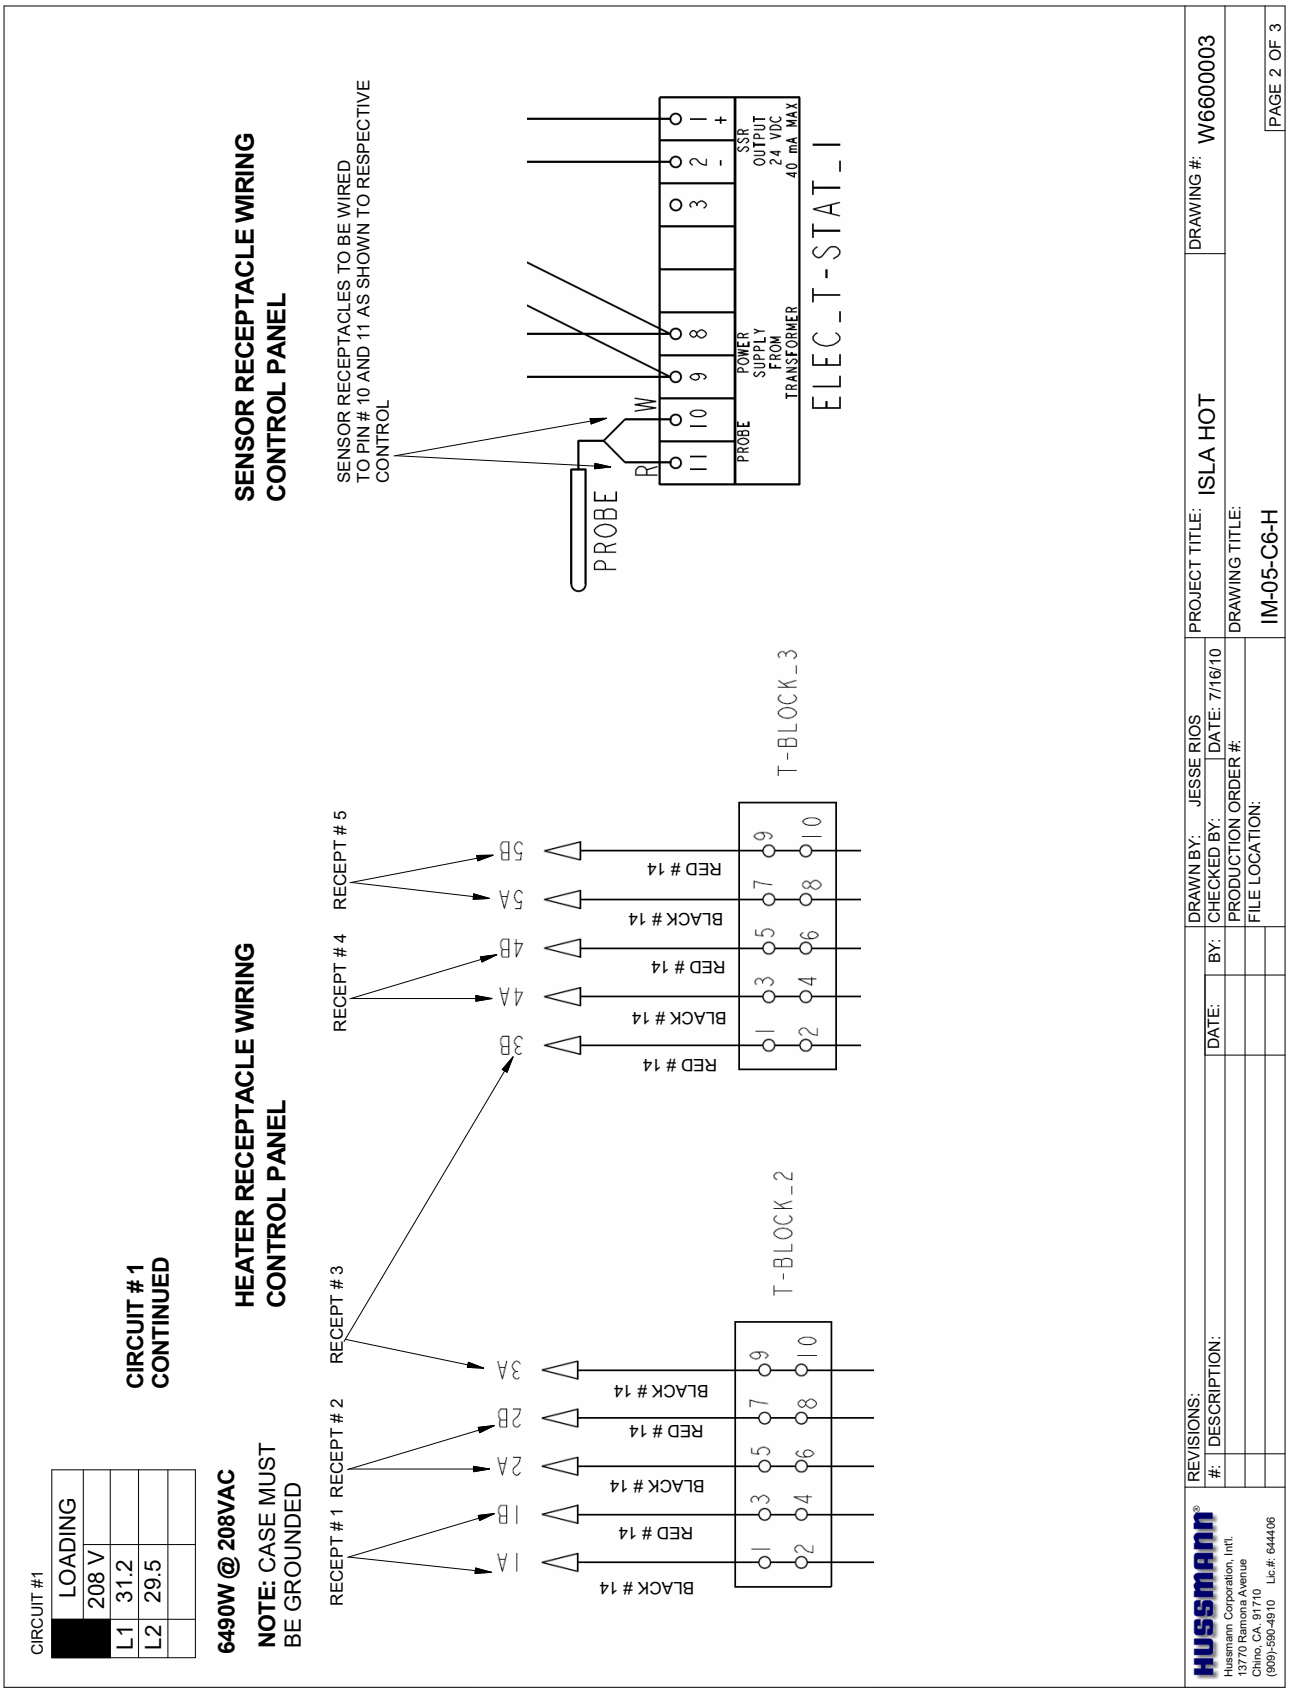


REVISIONS:	DRAWN BY: JESSE RIOS	PROJECT TITLE: ISLA HOT	DRAWING #: W6600003
#: DESCRIPTION:	BY:	DATE: 7/16/10	DRAWING TITLE:
	PRODUCTION ORDER #:		IM-05-C6-H
	FILE LOCATION:		PAGE 2 OF 3

HUSSMANN
 Hussmann Corporation, Inc.
 13770 Raymond Avenue
 Chino, CA 91710
 (909)-590-4910 Lic.#: 644408

CIRCUIT # 1
CONTINUED

CONTROL PANEL WIRING

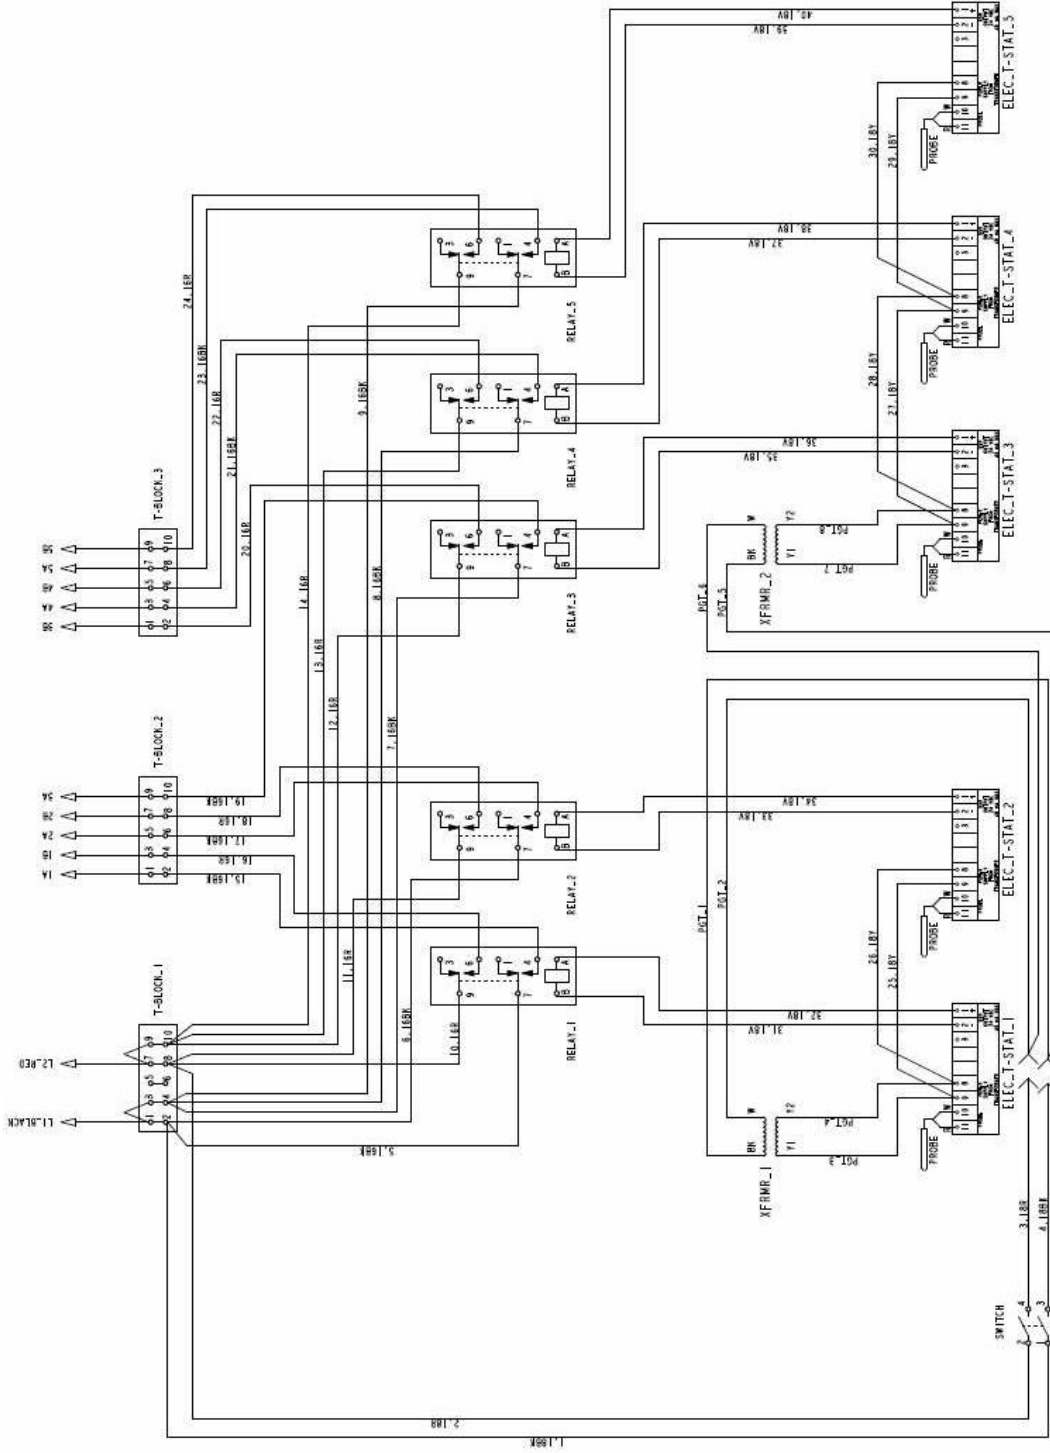


REVISIONS:
DESCRIPTION:
DATE:


DRAWN BY: JESSE RIOS
CHECKED BY:
BY: PRODUCTION ORDER #:
DATE: 7/16/10
FILE LOCATION:

PROJECT TITLE: ISLA HOT
DRAWING TITLE: IM-05-C6-H


DRAWING #: W6600003
PAGE 3 OF 3

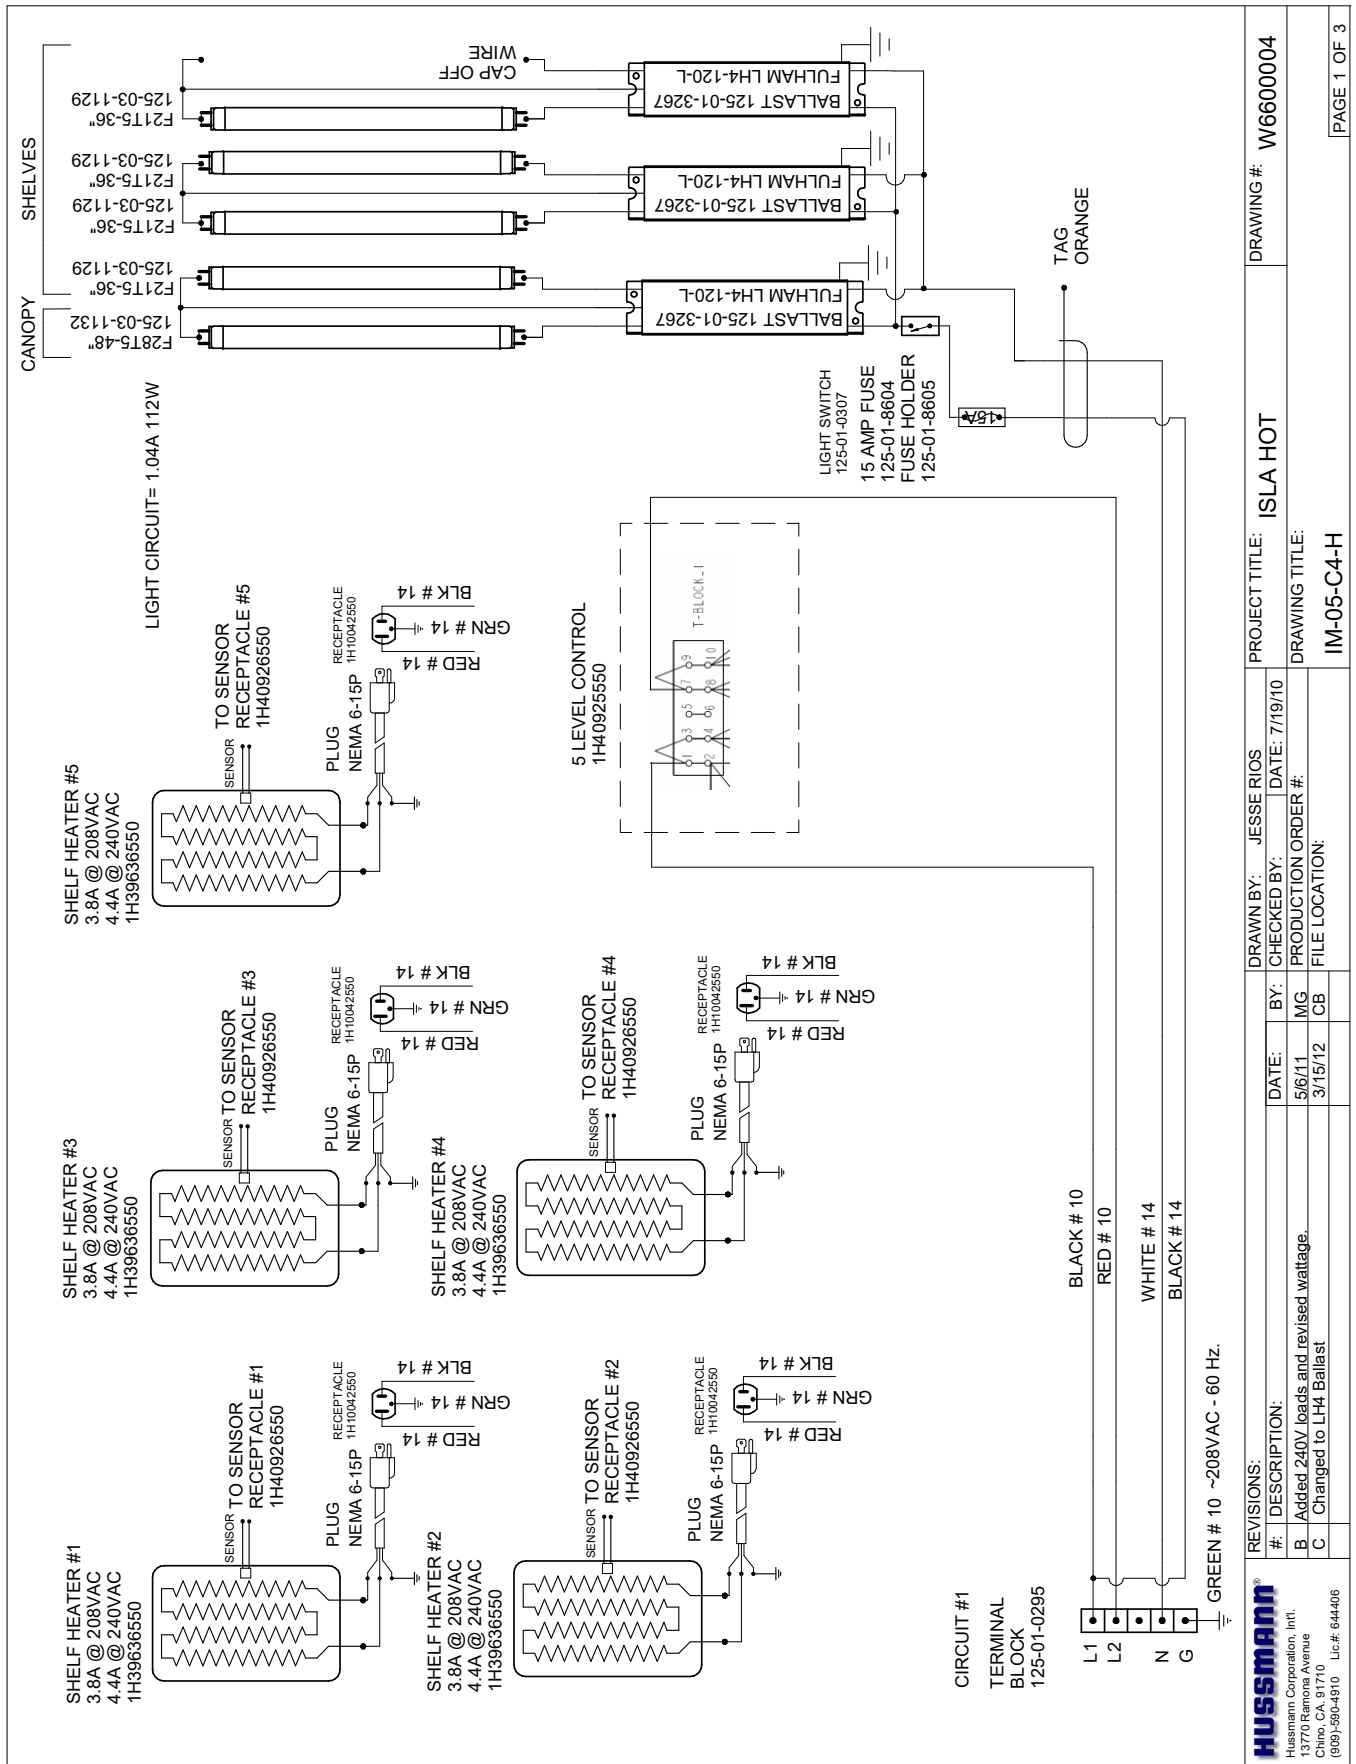

DRAWING #:			W6600004		
PROJECT TITLE:			ISLA HOT		
DRAWN BY:	JESSE RIOS		CHECKED BY:	DATE: 7/19/10	
DATE:	5/6/11	MG	PRODUCTION ORDER #:		
	3/15/12	CB	FILE LOCATION:	IM-05-C4-H	
REVISIONS:					
#:	DESCRIPTION:				
B:	Added 240V loads and revised wattage.				
C:	Changed to LH4 Ballast				
	Lic.#: 644406				

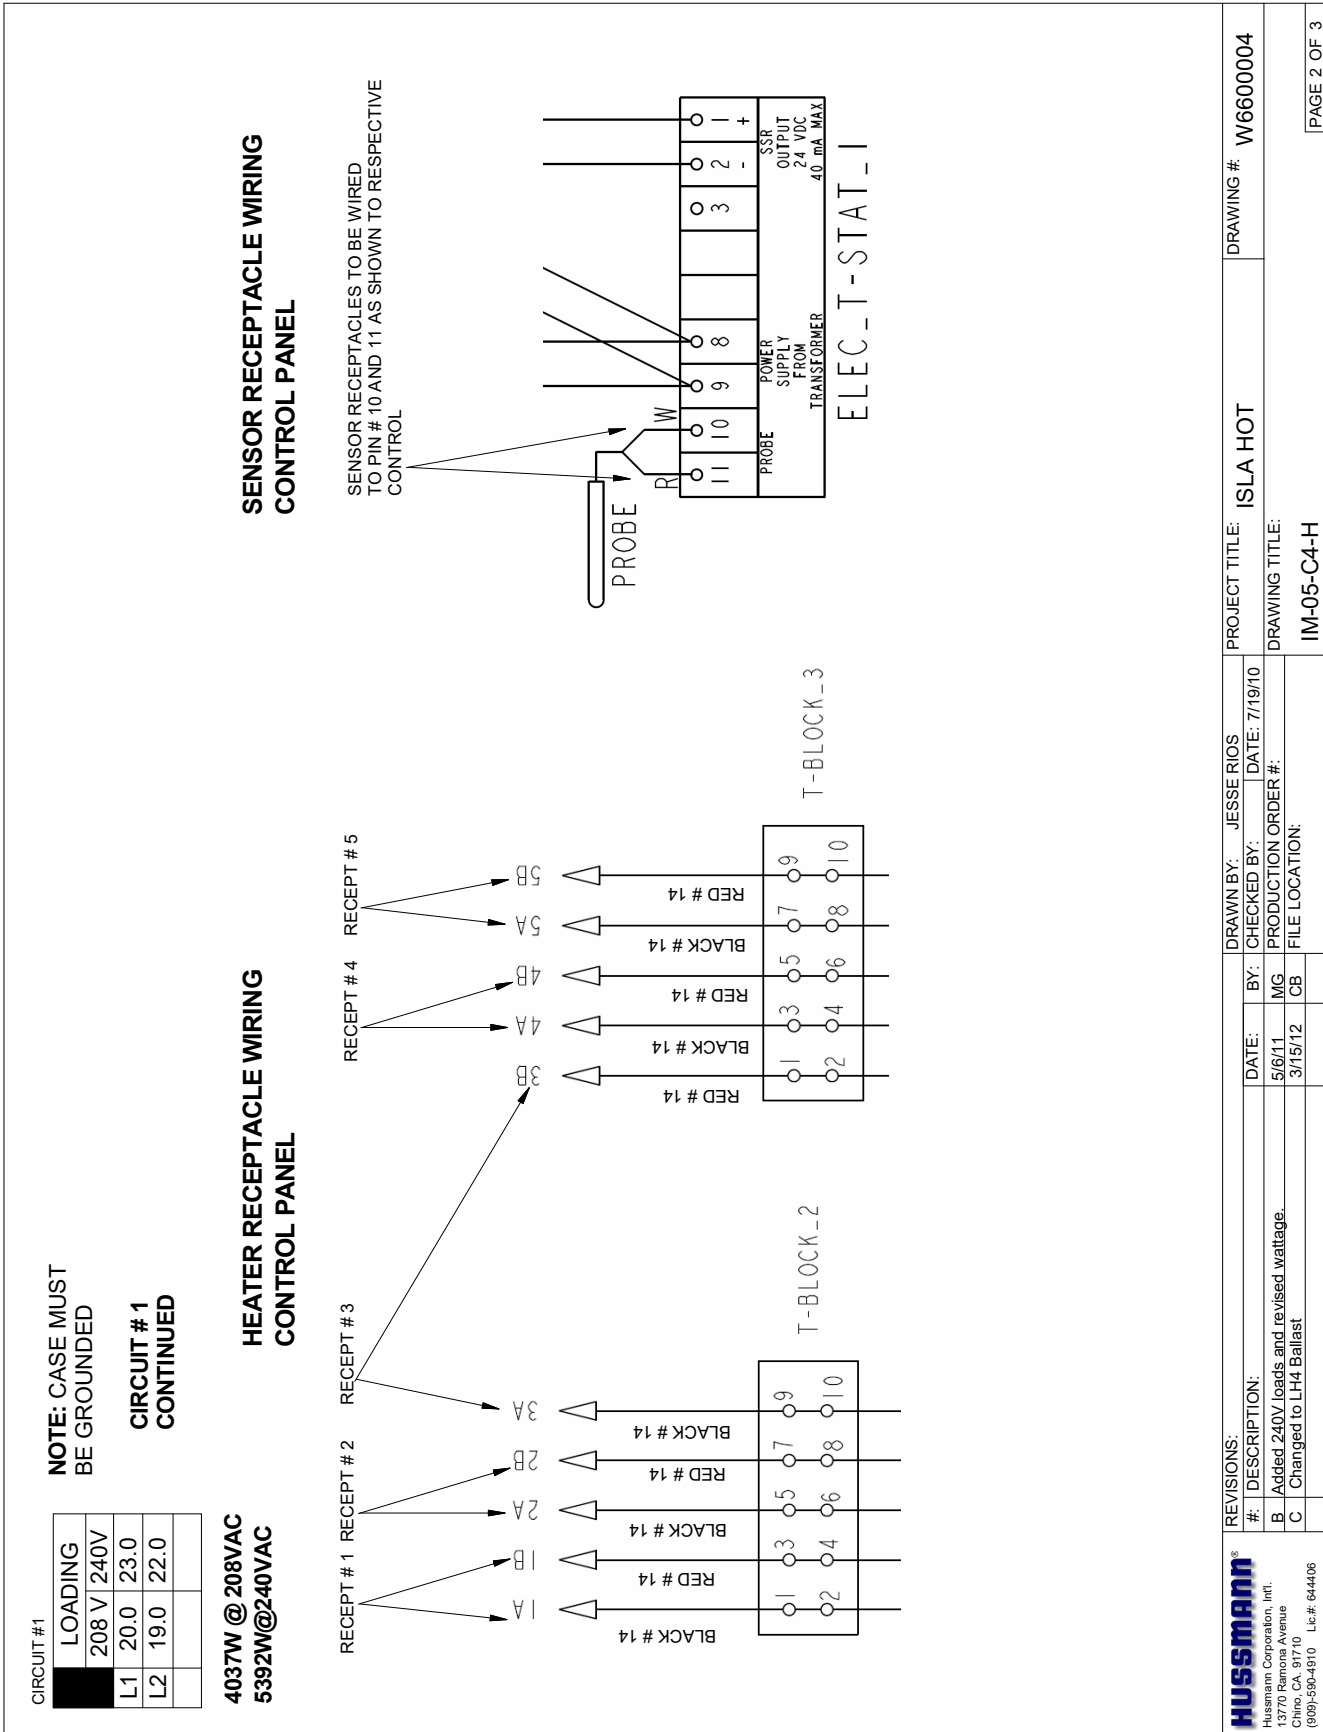


<p>HUSSMANN Husmann Corporation, Inc. 13770 Ramona Avenue Chino, CA 91710 (909)-590-4910 Lic.# 644406</p>	<p>REVISIONS:</p> <table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th>#</th> <th>DESCRIPTION:</th> <th>DATE:</th> <th>BY:</th> <th>CHECKED BY:</th> <th>DATE:</th> </tr> </thead> <tbody> <tr> <td>B</td> <td>Added 240V loads and revised wattage.</td> <td>5/6/11</td> <td>MG</td> <td></td> <td>7/19/10</td> </tr> <tr> <td>C</td> <td>Changed to LH4 Ballast</td> <td>3/15/12</td> <td>CB</td> <td></td> <td></td> </tr> </tbody> </table>	#	DESCRIPTION:	DATE:	BY:	CHECKED BY:	DATE:	B	Added 240V loads and revised wattage.	5/6/11	MG		7/19/10	C	Changed to LH4 Ballast	3/15/12	CB			<p>DRAWN BY: JESSE RIOS</p>	<p>PROJECT TITLE: ISLA HOT</p>
	#	DESCRIPTION:	DATE:	BY:	CHECKED BY:	DATE:															
	B	Added 240V loads and revised wattage.	5/6/11	MG		7/19/10															
C	Changed to LH4 Ballast	3/15/12	CB																		
<p>FILE LOCATION:</p>		<p>DRAWING #: W6600004</p>																			
<p>IM-05-C4-H</p>		<p>PAGE 2 OF 3</p>																			

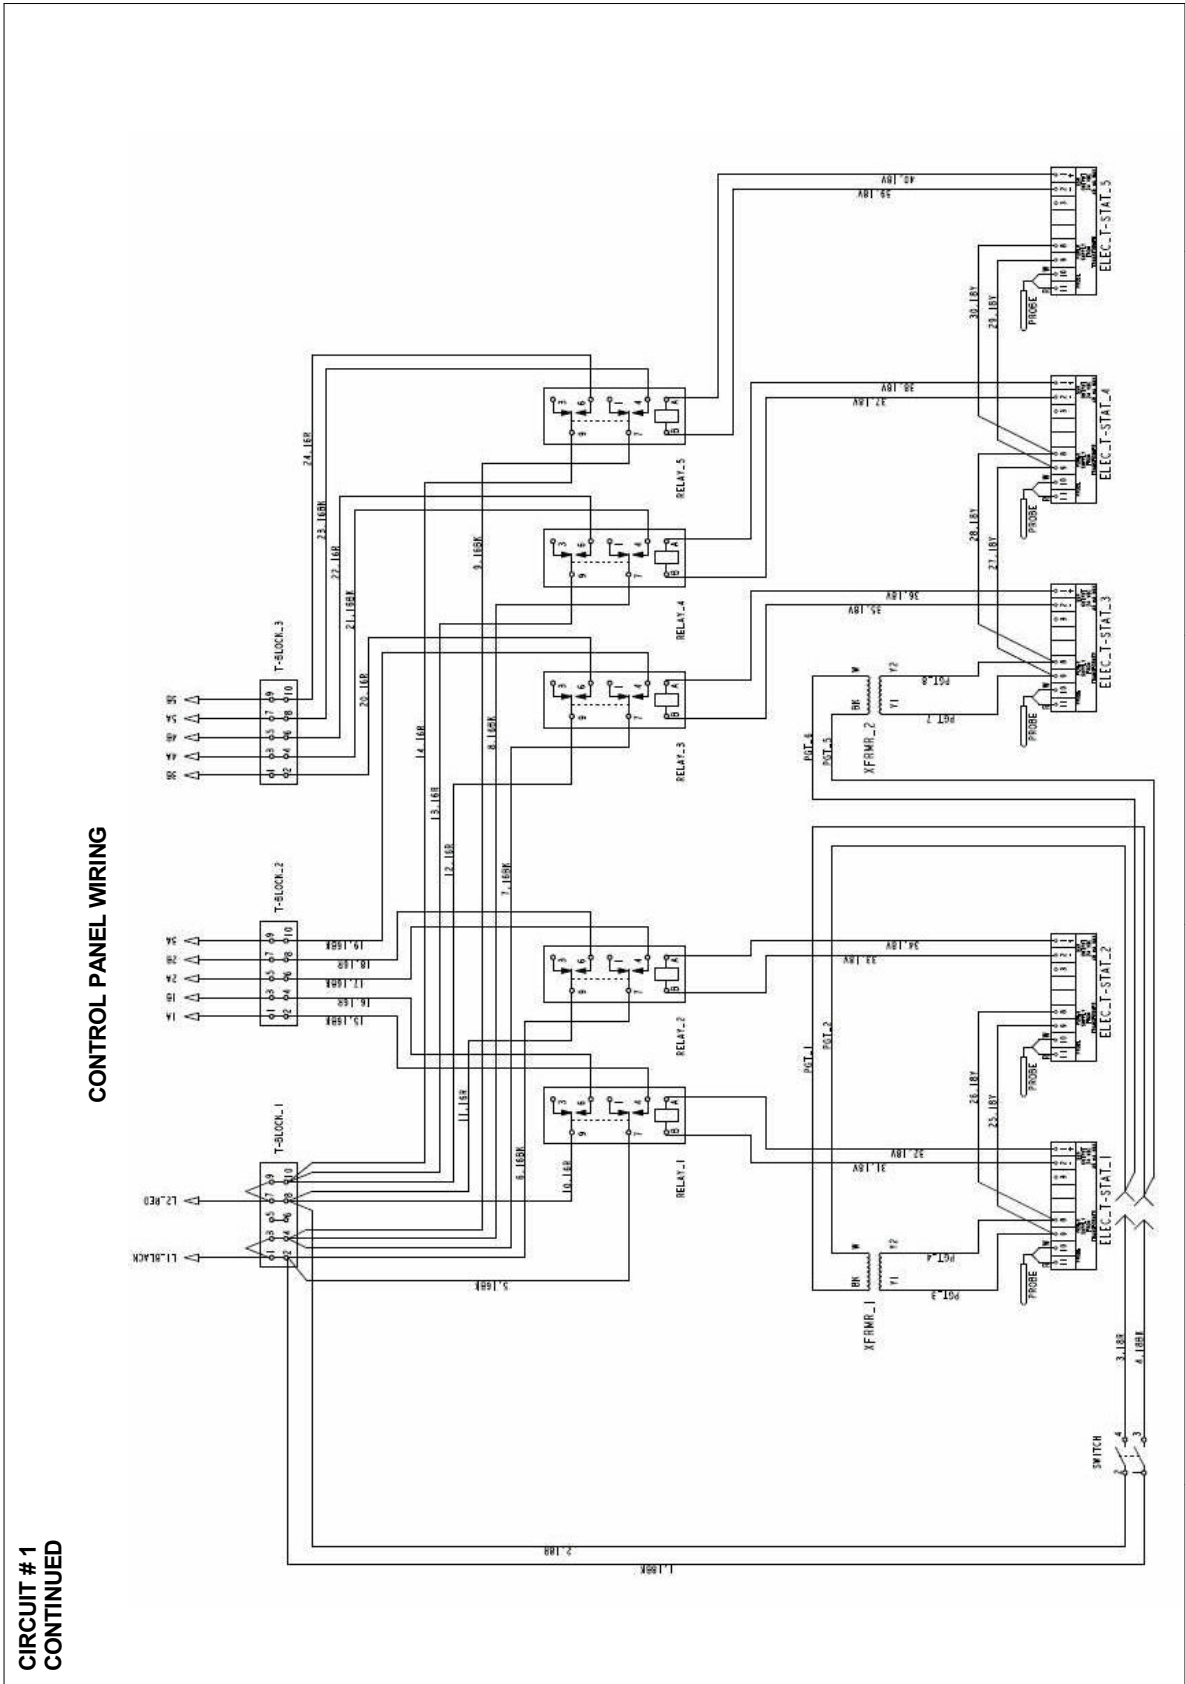

CIRCUIT # 1
CONTINUED

CONTROL PANEL WIRING

HUSSMANN Hussmann Corporation, Inc. 13770 Ramona Avenue Chino, CA 91710 (909) 590-4910 Lic. # 644406		REVISIONS: # DESCRIPTION: B Added 240V loads and revised wattage. C Changed to LH4 Ballast.	DRAWN BY: JESSE RIOS CHECKED BY: MG DATE: 5/6/11 3/15/12	PROJECT TITLE: ISLA HOT DRAWING TITLE: IM-05-C4-H	DRAWING #: W6600004 PAGE 3 OF 3
---	--	--	---	--	------------------------------------

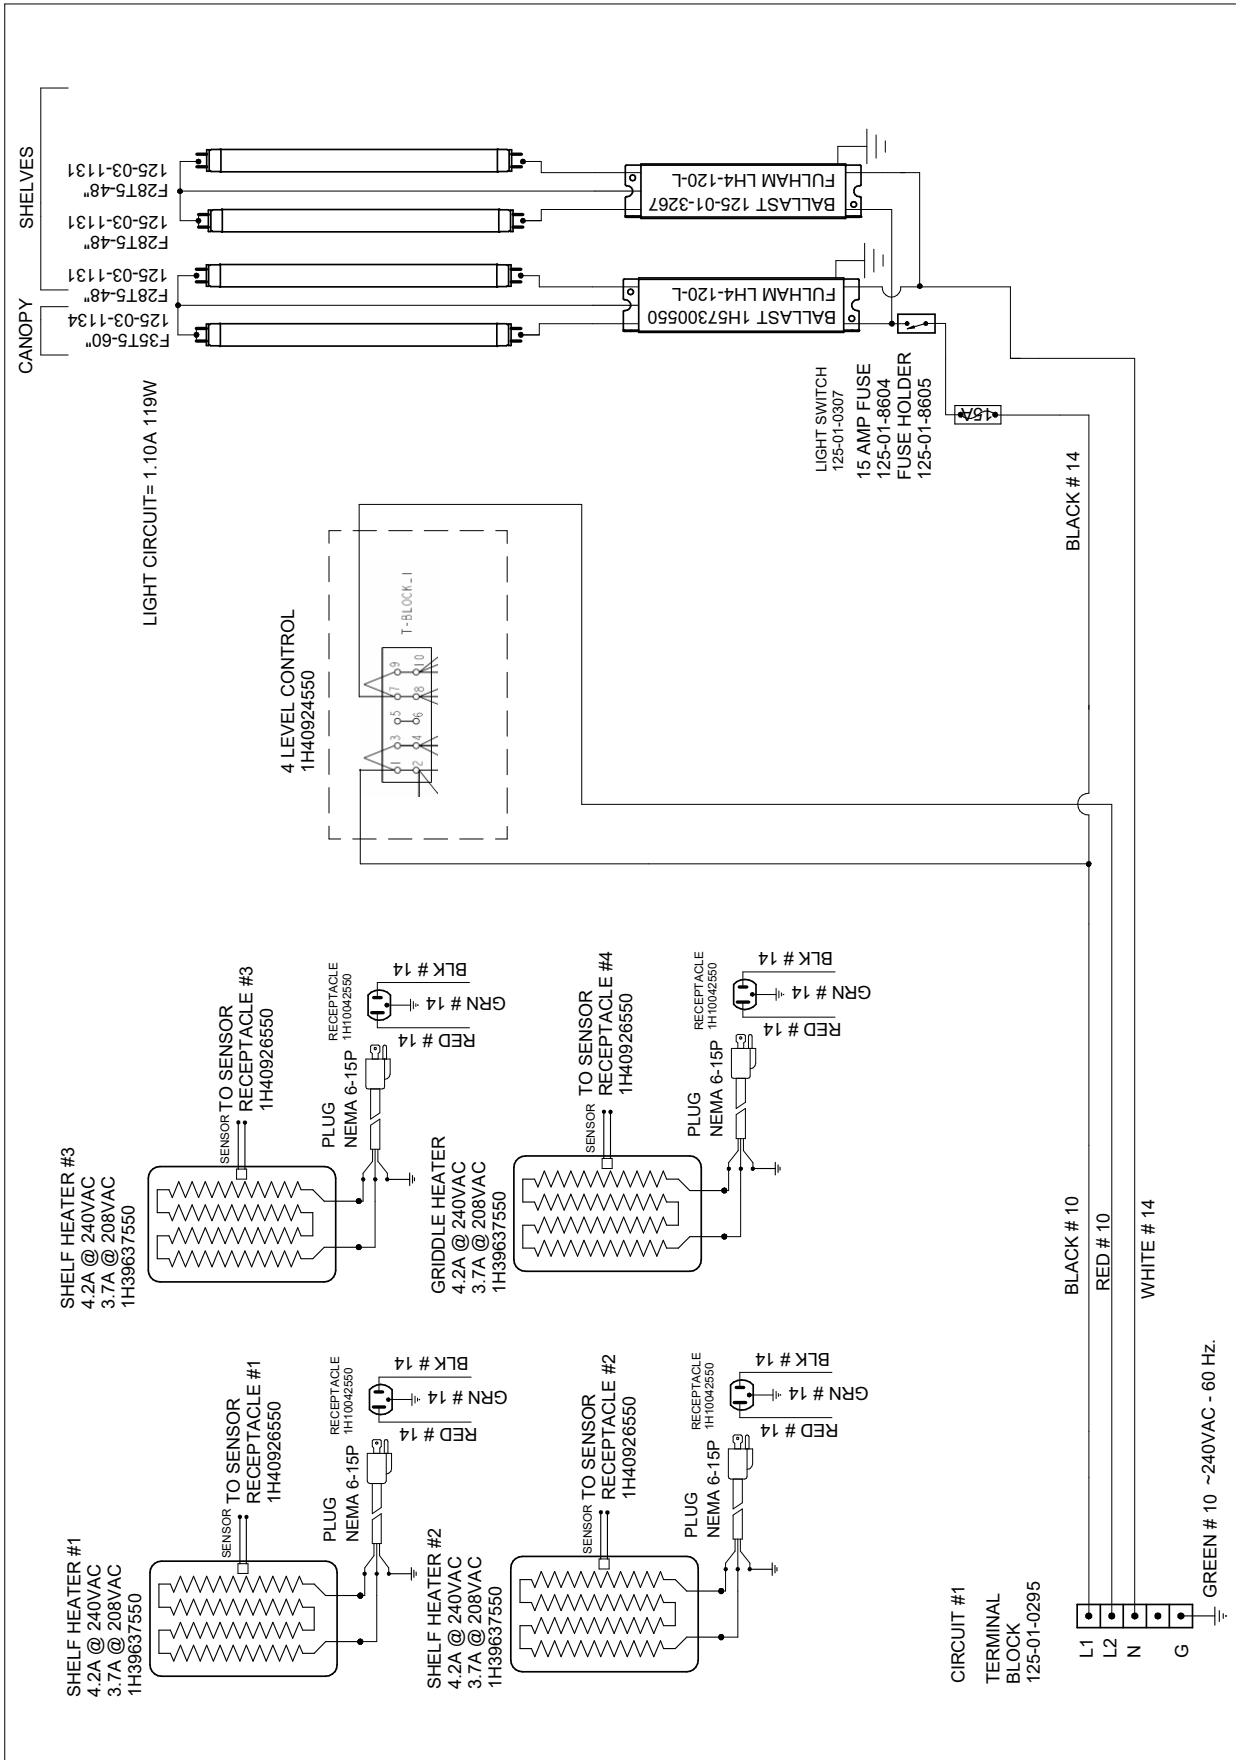

DRAWN BY: MATT GRAMATA		PROJECT TITLE: ISLA HOT		DRAWING #: W6600005	
DATE: 10/07/10	BY: CHECKED BY:	DATE: 10/01/10			
10/07/10	MG	6/15/11	DRAWING TITLE: IM-04-5-H 240 VAC/208 VAC, 1PH/60HZ		
6/15/11	CB	8/5/11	FILE LOCATION: Changed 1 Ballast to Longhorse 5		
8/5/11	CB		PAGE 1 OF 3		


CIRCUIT #1

LOADING	208 V	240V
L1	15.9	17.9
L2	14.8	16.8

**CIRCUIT #1
CONTINUED**


**3307W @ 208VAC
4296W @ 240VAC
NOTE: CASE MUST
BE GROUNDED**

**HEATER RECEPTACLE WIRING
CONTROL PANEL**

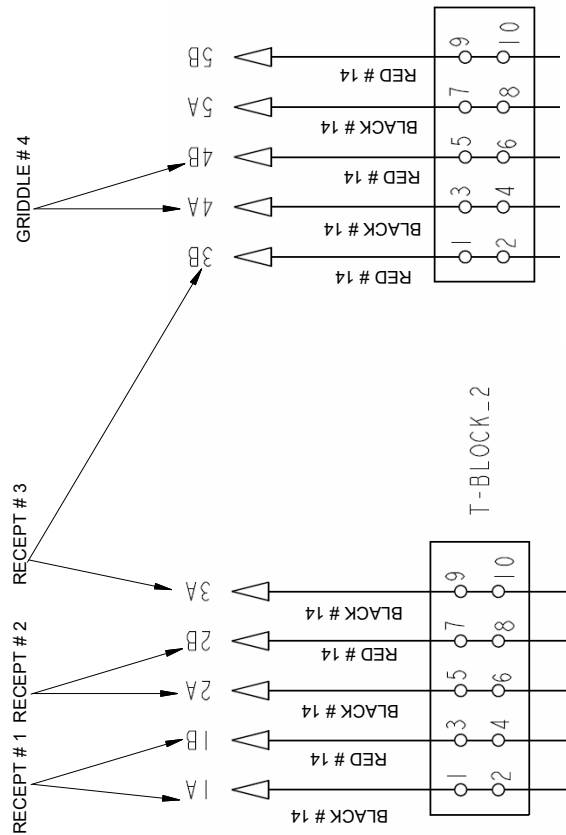

**SENSOR RECEPTACLE WIRING
CONTROL PANEL**

SENSOR RECEPTACLES TO BE WIRED
TO PIN # 10 AND 11 AS SHOWN TO RESPECTIVE
CONTROL

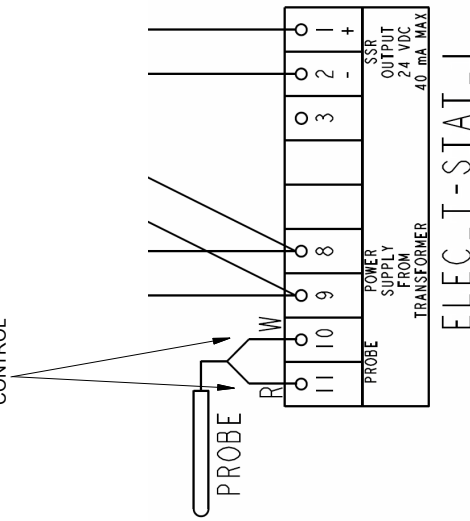

HUSSMANN®
Hussmann Corporation, Int.
13770 Ramona Avenue
Chino, CA 91710
(909) 590-4910 Lic. # 644406

REVISIONS:
DESCRIPTION:
B CHANGED WATTS AND LINE AMP TOTALS
C ADDED VALUES FOR 208V
D Changed 1 Ballast to Longhorse 5


DATE: 10/07/10
BY: MG
10/07/10
MG
PRODUCTION ORDER #:
FILE LOCATION:

DRAWN BY: MATT GRAMATA
CHECKED BY: DATE: 10/07/10
PROJECT TITLE: ISLA HOT
DRAWING TITLE: IM-04-E5-H 240 VAC, 208VAC 1PH/60HZ


DRAWING #: W6600005
PAGE 2 OF 3

CIRCUIT # 1
CONTINUED

CONTROL PANEL WIRING

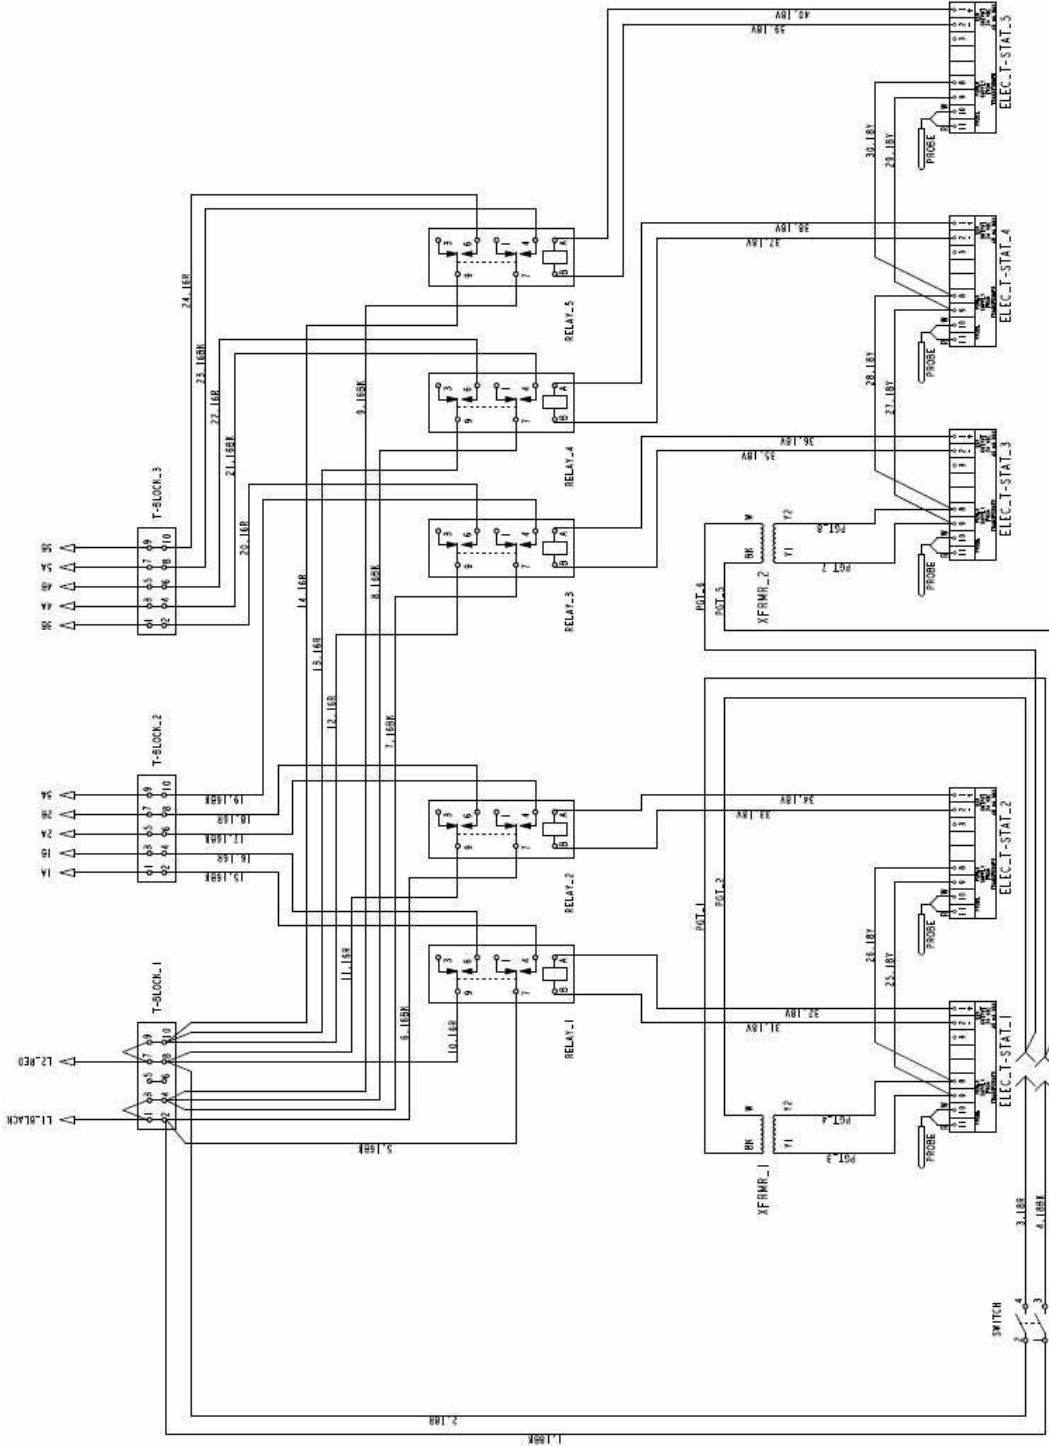


REVISIONS: # DESCRIPTION B CHANGED WATTS AND LINE AMP TOTALS C ADDED VALUES FOR 208 V D Changed 1 Ballast to Longhorse 5		DRAWN BY: MATT GRAMATA CHECKED BY: DATE: 10/07/10 BY: 10/07/10 /MG PRODUCTION ORDER #: FILE LOCATION:		PROJECT TITLE: ISLA HOT DRAWING TITLE: IM-04-E5-H 240 VAC, 208 VAC 1PH/60HZ		DRAWING #: W6600005 PAGE 3 OF 3	
---	--	---	--	--	--	------------------------------------	--

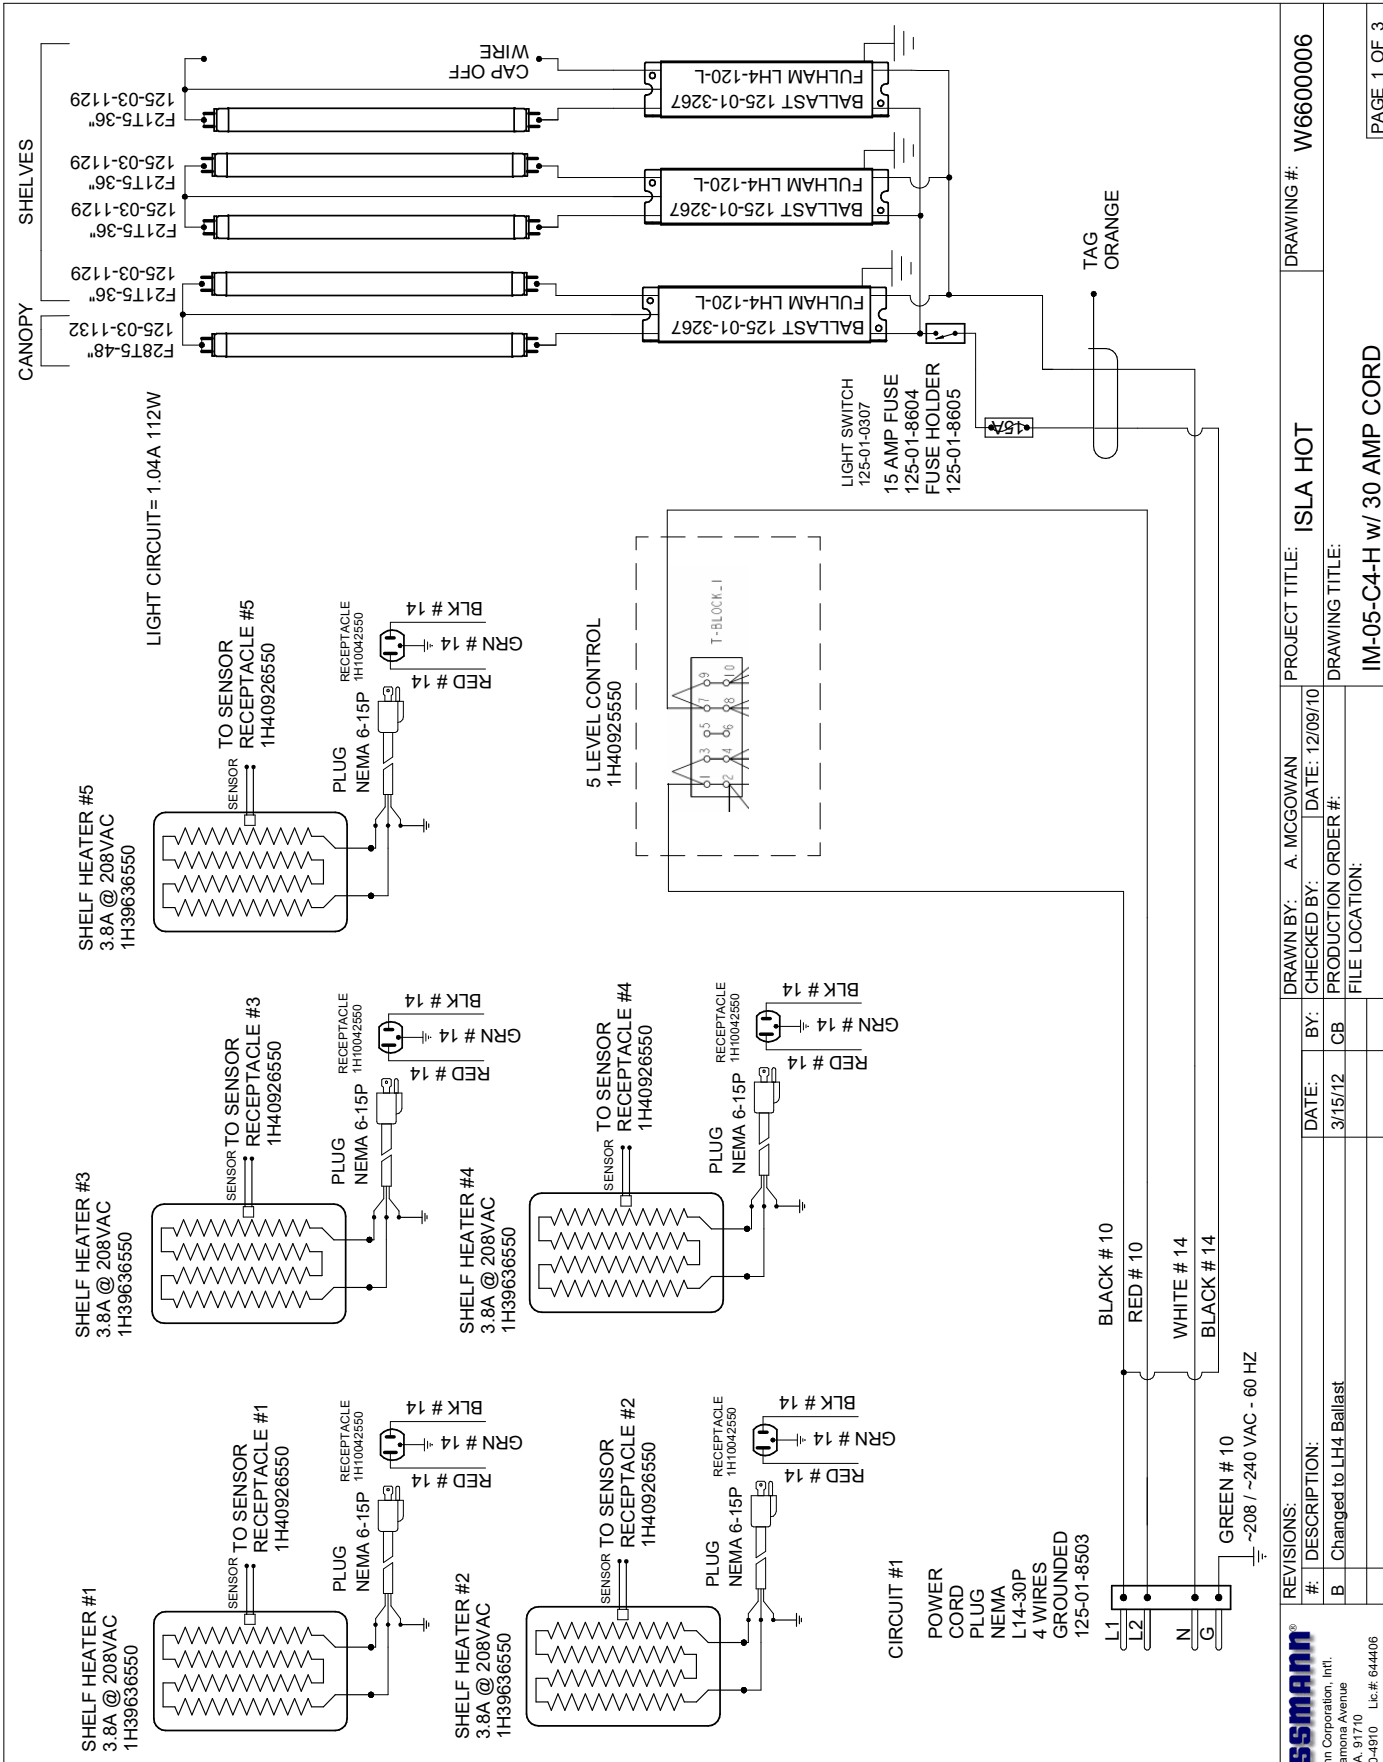


CIRCUIT #1
CONTINUED

CONTROL PANEL WIRING

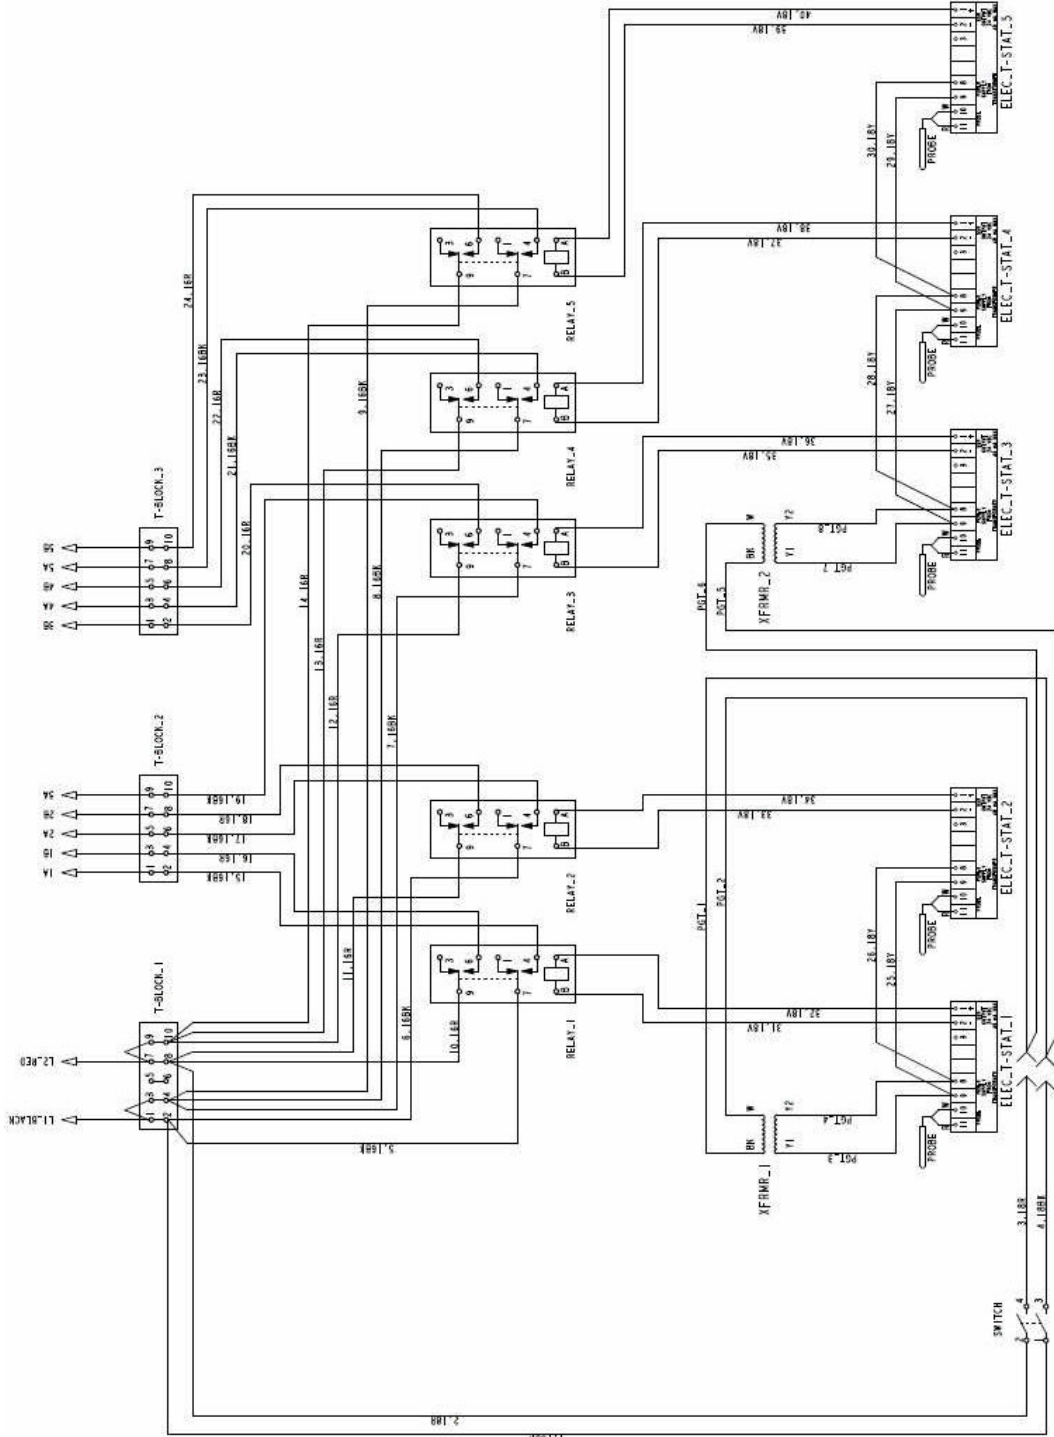


REVISIONS:		DRAWN BY: MATT GRAMATA		PROJECT TITLE: ISLA HOT		DRAWING #: W6600005	
#	DESCRIPTION:	DATE:	BY:	DATE:	PRODUCTION ORDER #:	DRAWING TITLE:	
B	CHANGED WATTS AND LINE AMP TOTALS	10/07/10	MG	10/01/10		IM-04-E5-H 240 VAC, 208 VAC 1PH/60HZ	
C	ADDED VALUES FOR 208 V	6/15/11	CB			FILE LOCATION:	
D	Changed 1 Ballast to Longhorse 5	8/5/11	CB			PAGE 3 OF 3	

HUSSMANN
 Hussmann Corporation, Inc.
 10000 S. Bascom Avenue
 San Jose, CA 95128
 (408) 550-4810 Lic.# 644406

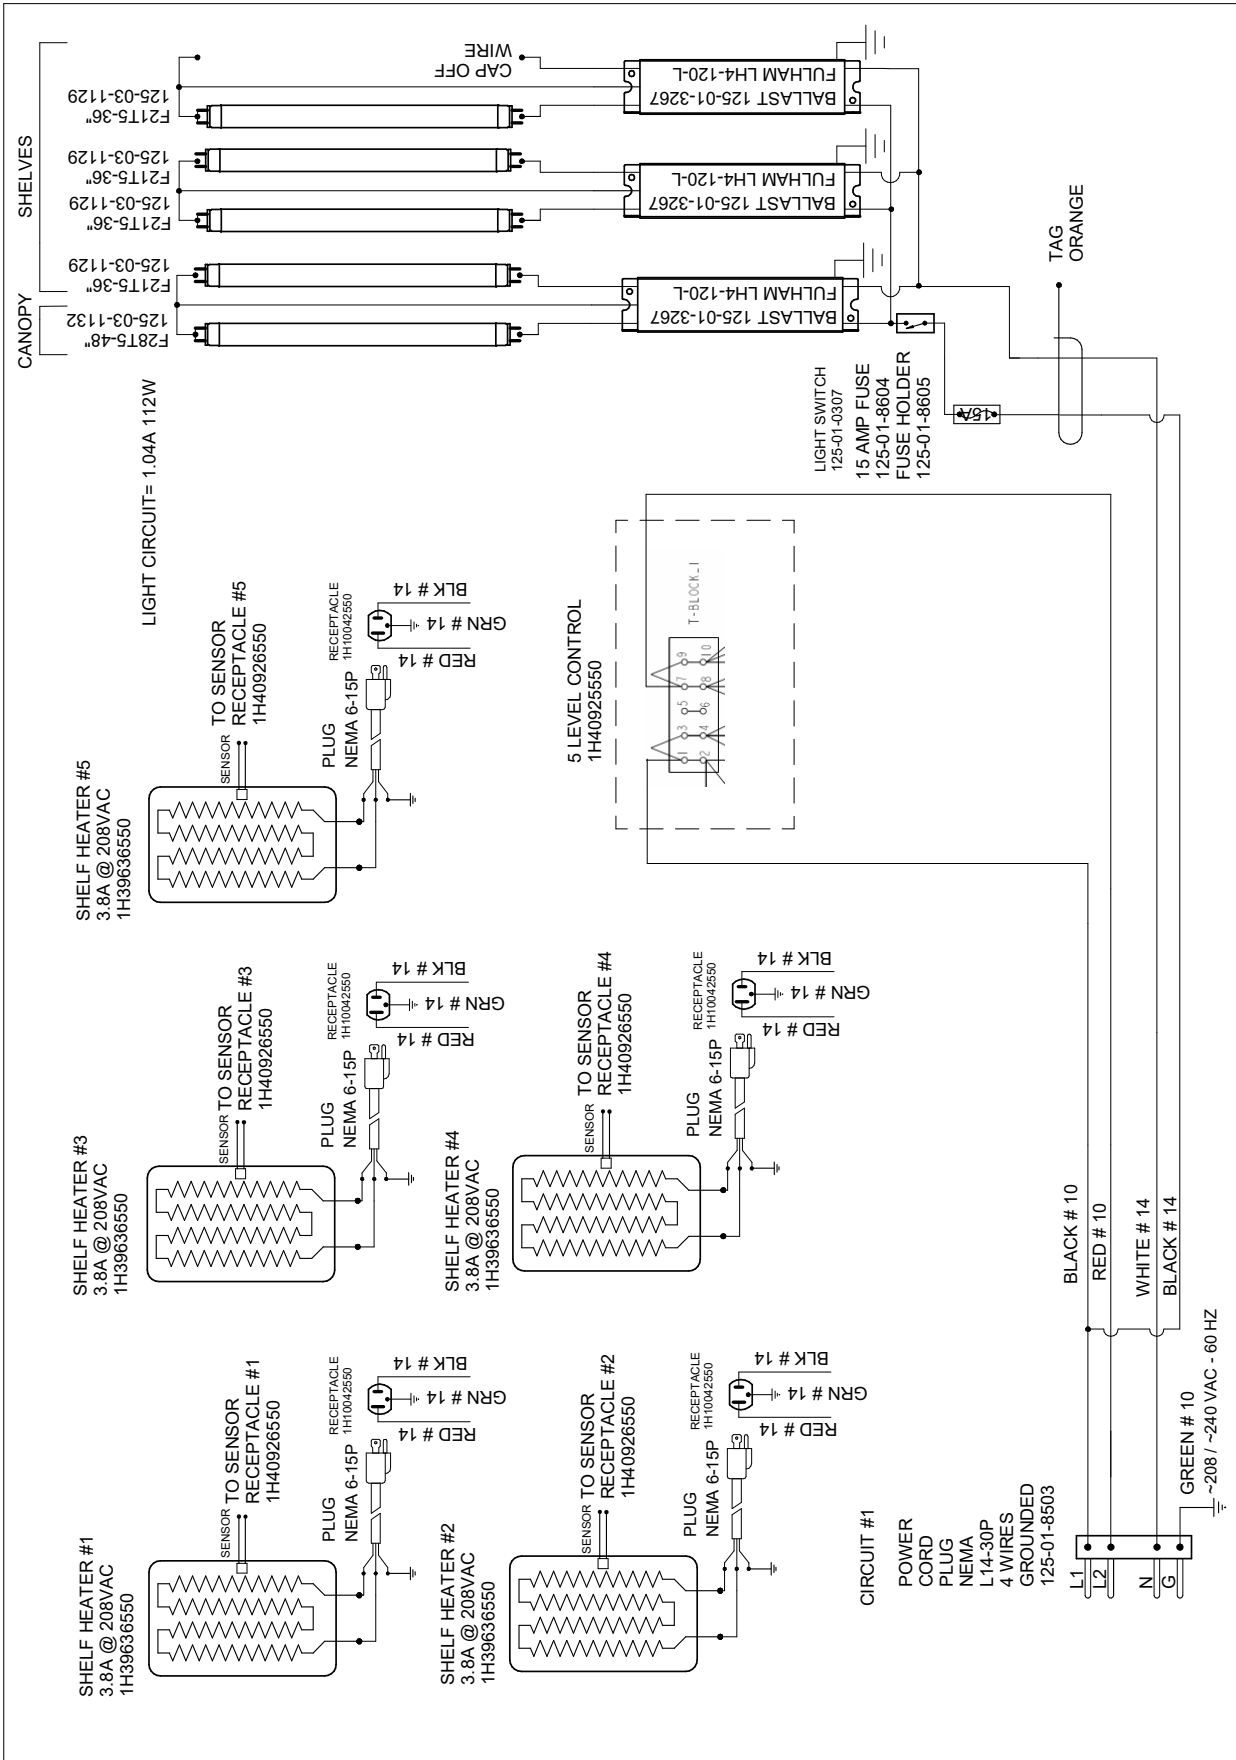


DRAWING #: W6600006	
PROJECT TITLE: ISLA HOT	DRAWING TITLE: IM-05-C4-H w/ 30 AMP CORD
DRAWN BY: A. MCGOWAN	FILE LOCATION:
CHECKED BY:	PRODUCTION ORDER #:
DATE: 12/09/10	DATE: 3/15/12
BY: CB	FILE LOCATION:
<p>REVISIONS:</p> <p># DESCRIPTION:</p> <p>B Changed to LH4 Ballast</p>	
<p>HUSSMANN Husmann Corporation, Inc. 13770 Ramona Avenue Chino, CA 91710 (909) 590-4910 Lic.# 644-406</p>	

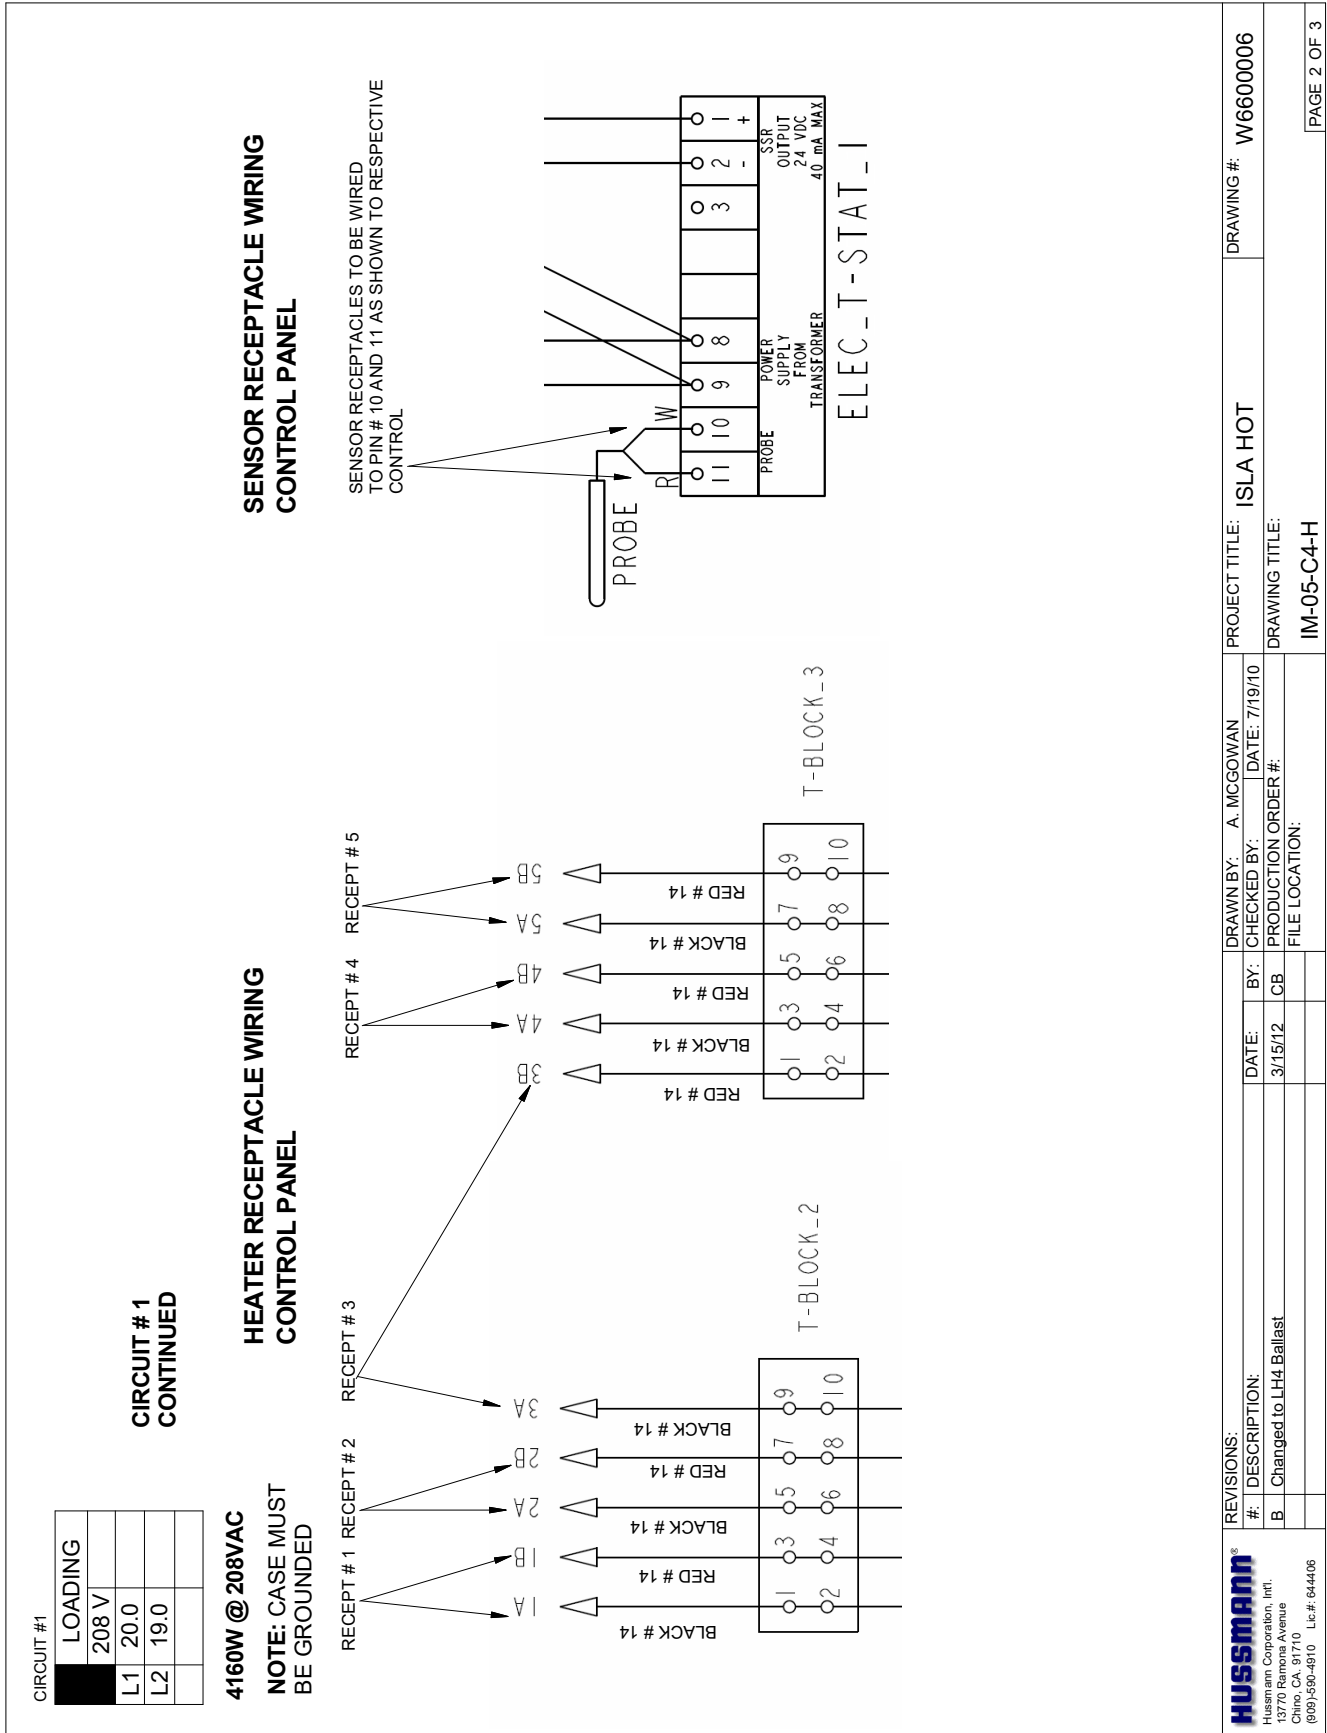


CIRCUIT # 1
CONTINUED


CONTROL PANEL WIRING

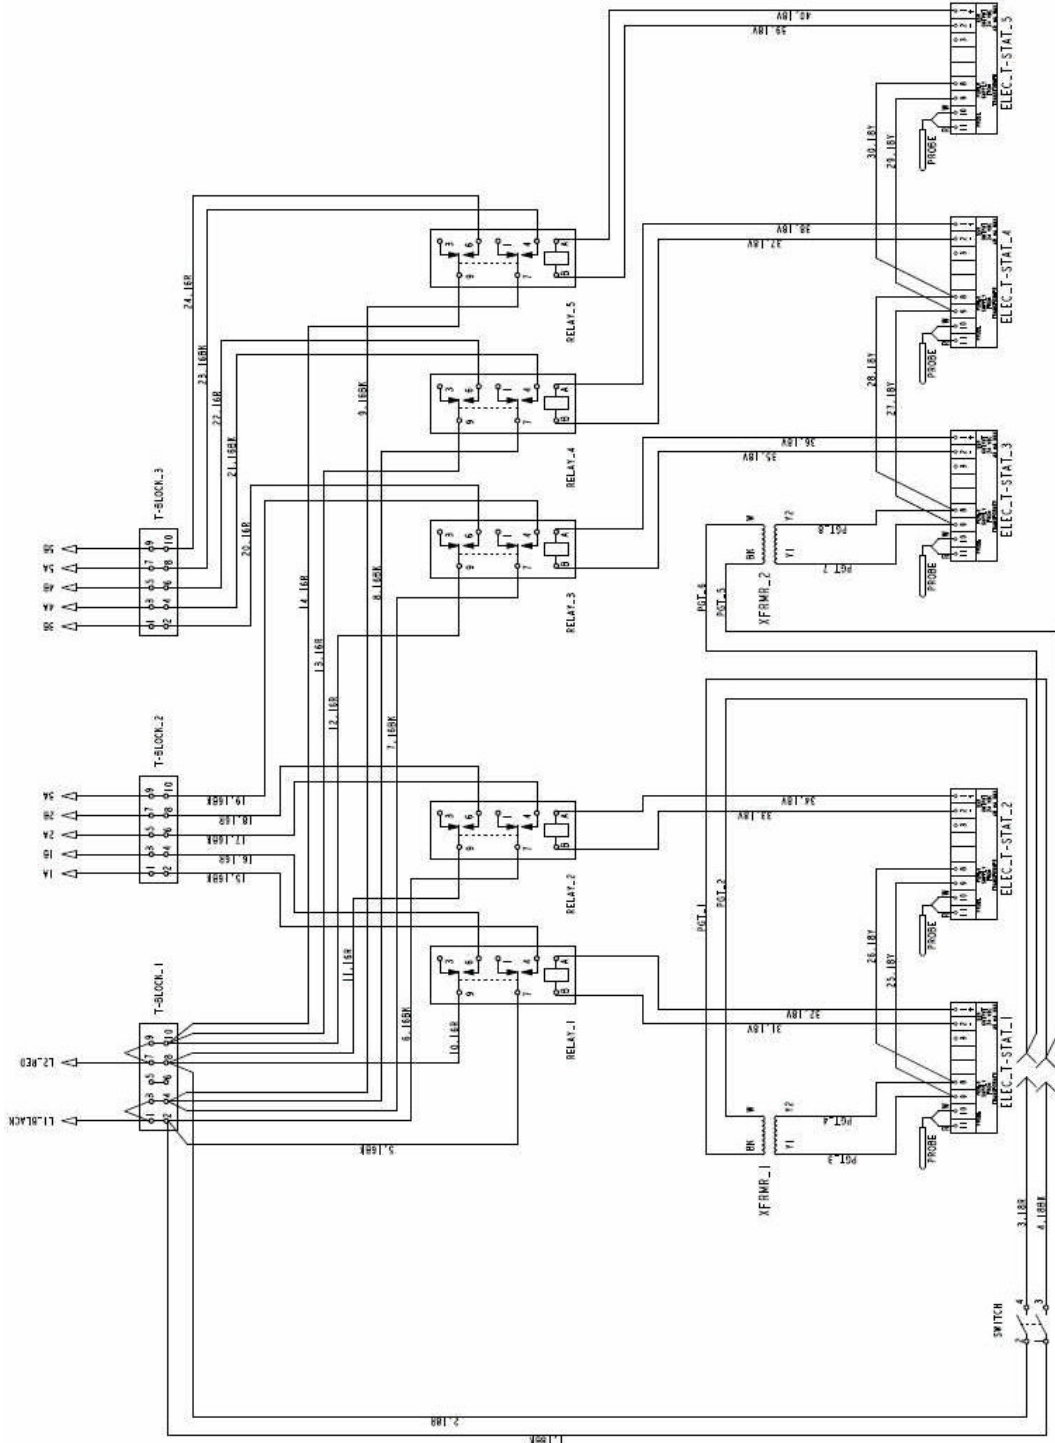

REVISIONS: # DESCRIPTION: B Changed to LH4 Ballast		DRAWN BY: A. MCGOWAN CHECKED BY: DATE: 7/19/10 PRODUCTION ORDER #: FILE LOCATION:		PROJECT TITLE: ISLA HOT DRAWING TITLE: IM-05-C4-H DRAWING #: W6600006 PAGE 3 OF 3	
HUSSMANN® Hussmann Corporation, Int'l. 13770 Ramona Avenue Chino, CA 91710 (909) 590-4910 Lic.#: 644406					

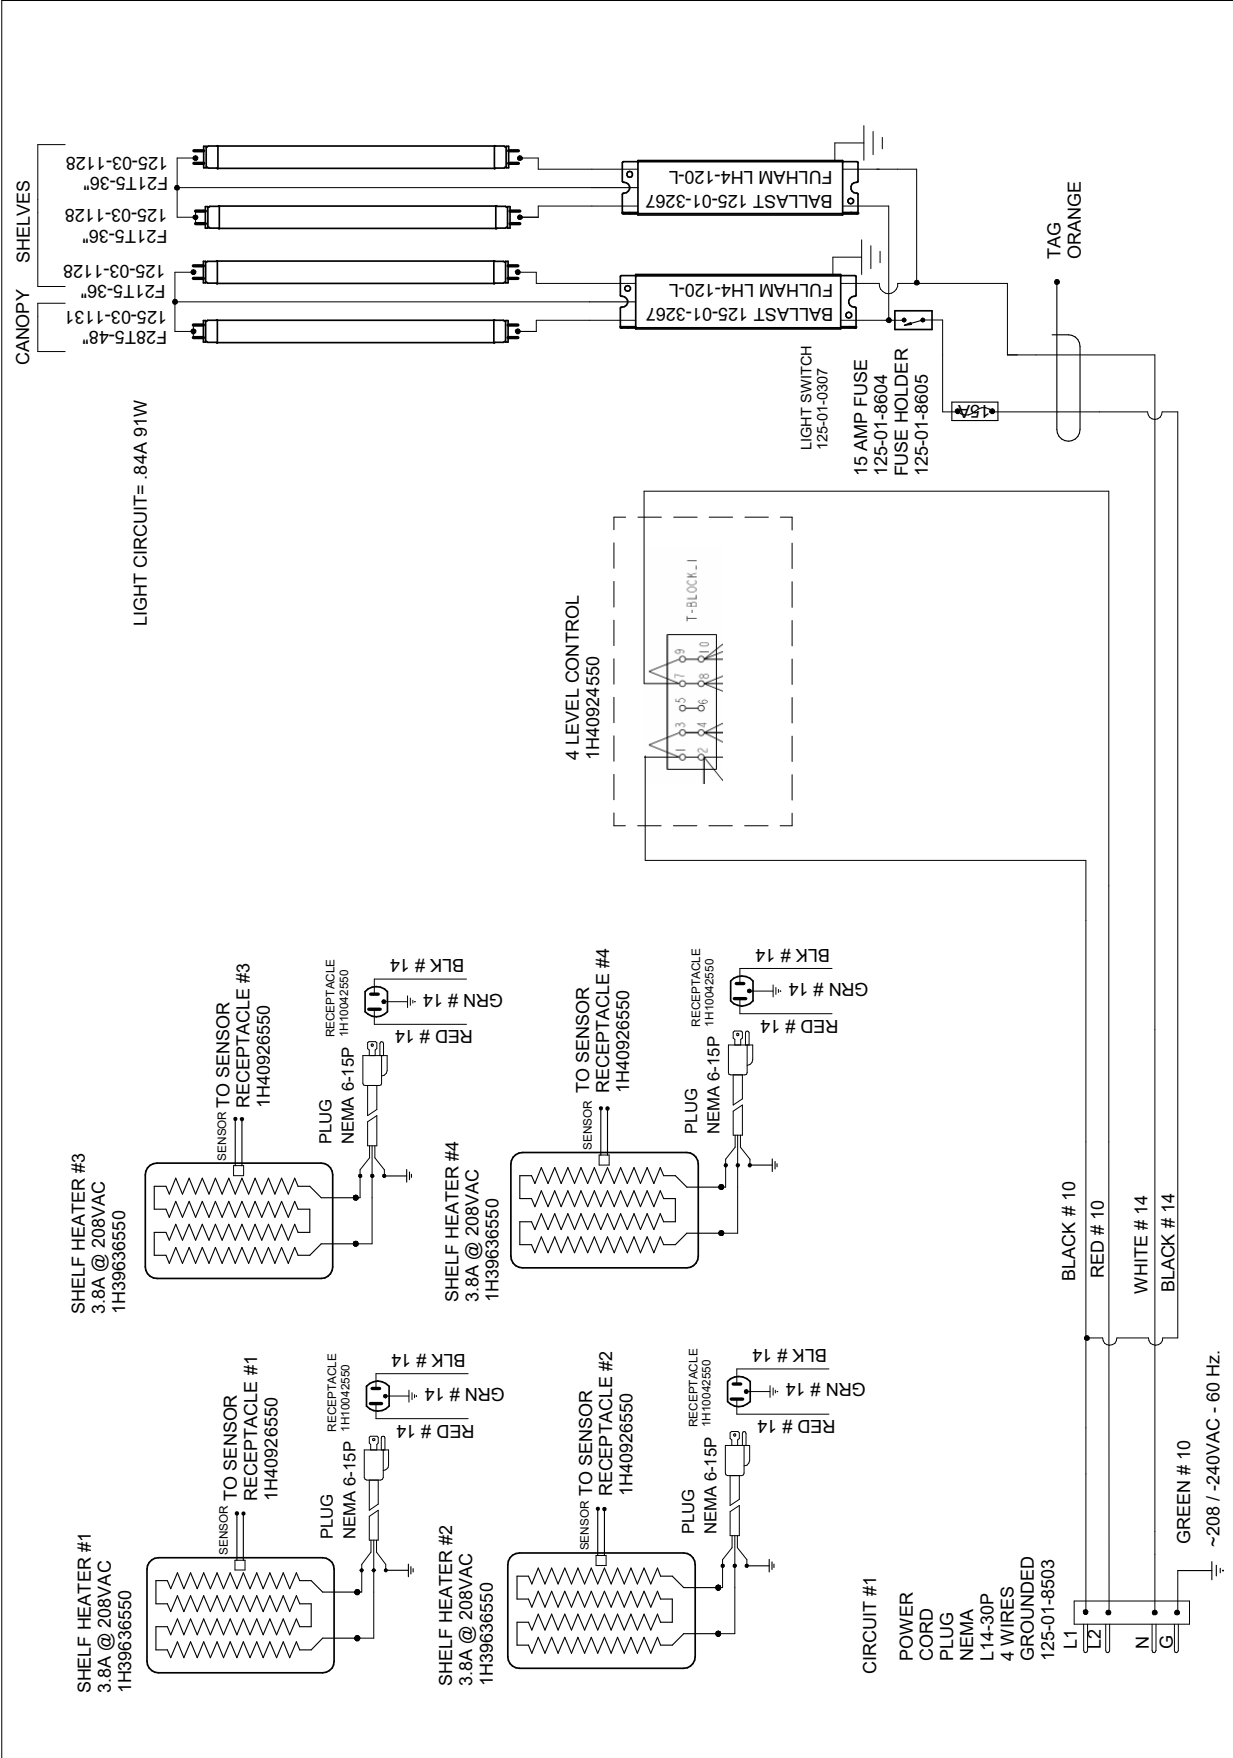


DRAWN BY: MATT GRAMATA		PROJECT TITLE: ISLA HOT		DRAWING #: W6600007	
DATE: 07/12/12	BY: CB	PRODUCTION ORDER #:	FILE LOCATION:	DRAWING TITLE: IM-04-C4-H w/ 30 AMP CORD	
REVISIONS:		DRAWING TITLE: IM-04-C4-H w/ 30 AMP CORD			
#:	DESCRIPTION:	DATE:	BY:	CHECKED BY:	DATE:
C	LN#634531 NEW RELEASE	07/12/12	CB	MATT GRAMATA	1/18/11
HUSMANN® Husmann Corporation, Int'l. 13770 Ramona Avenue Chino, CA 91710 (909)-590-4910 Lic.#: 644406		PAGE 1 OF 3			

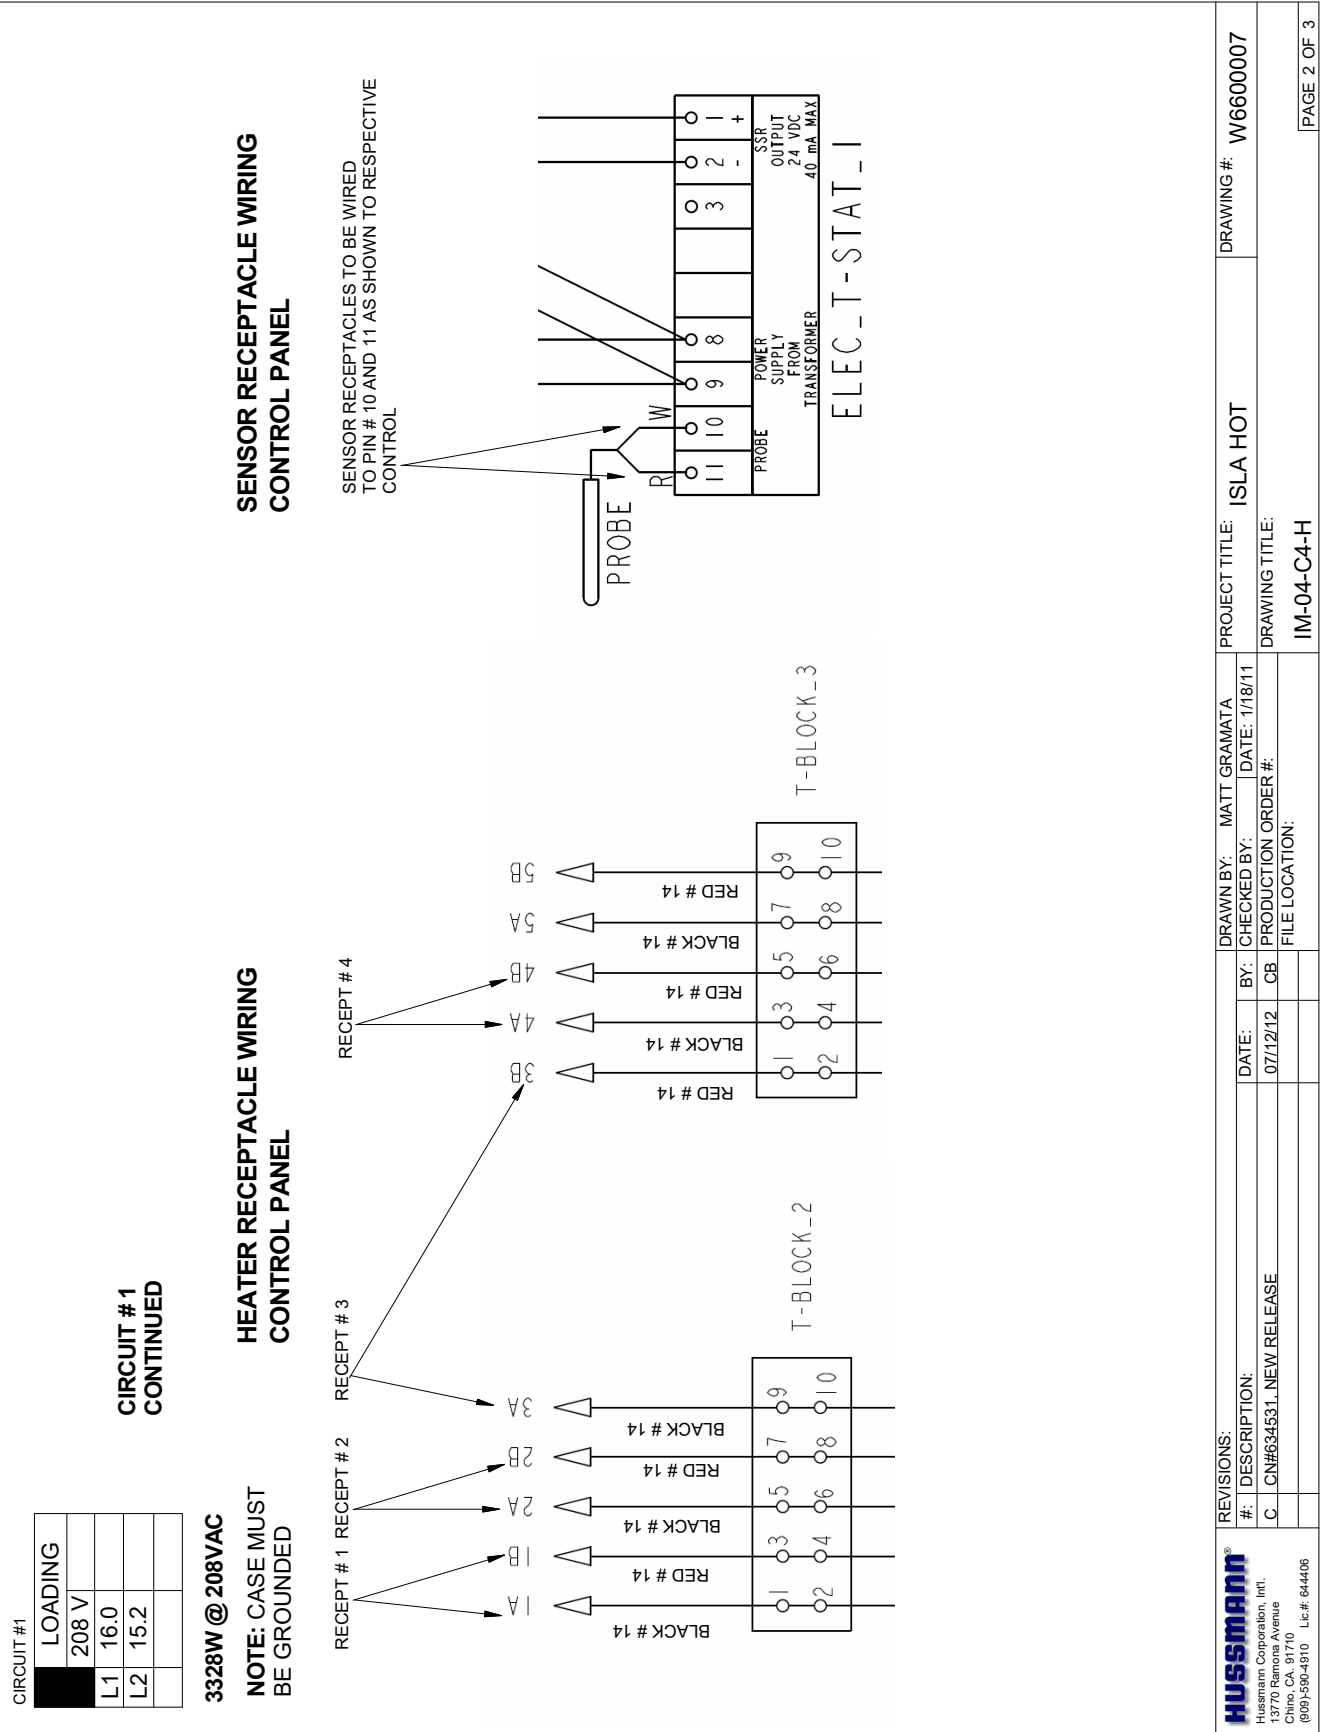


CIRCUIT # 1
CONTINUED

CONTROL PANEL WIRING FOR UP TO 5 DECKS

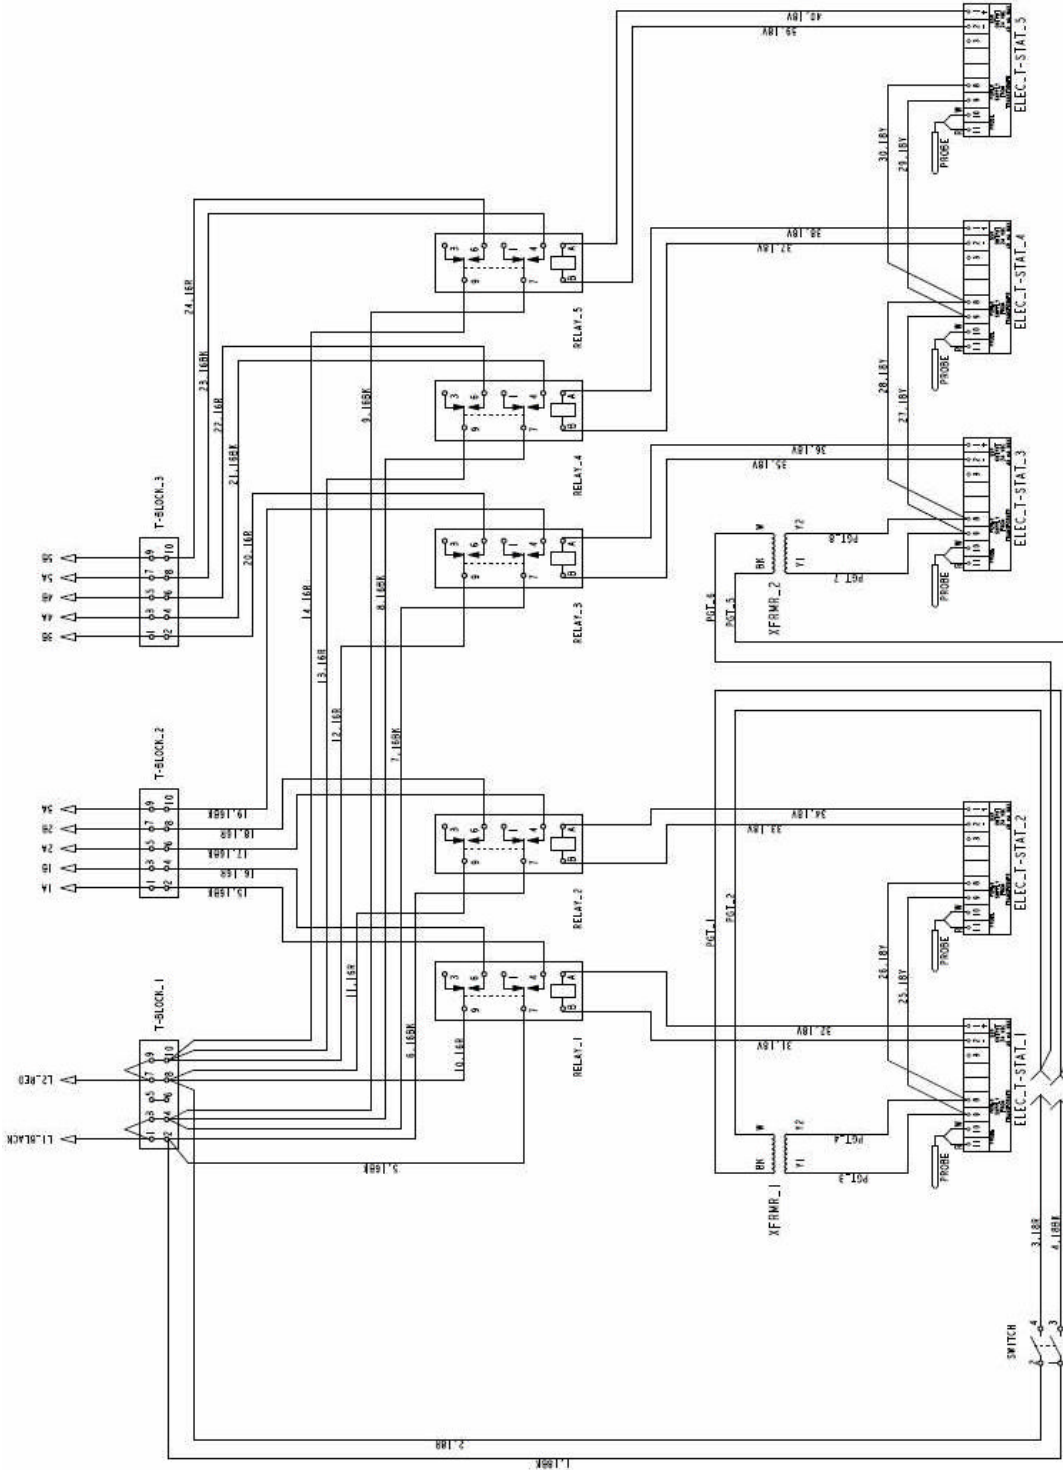

HUSSMANN Hussmann Corporation, Inc. 13770 Ramona Avenue Chino, CA 91710 (909) 590-4810 Lic. # 64406		REVISIONS: # DESCRIPTION: C CN#634531_NEW RELEASE	DRAWN BY: MATT GRAMATA CHECKED BY: CB DATE: 07/12/12 PRODUCTION ORDER #: FILE LOCATION:	PROJECT TITLE: ISLA HOT DRAWING TITLE: IM-04-C4-H	DRAWING #: W6600007 DATE: 1/18/11
PAGE 3 OF 3					

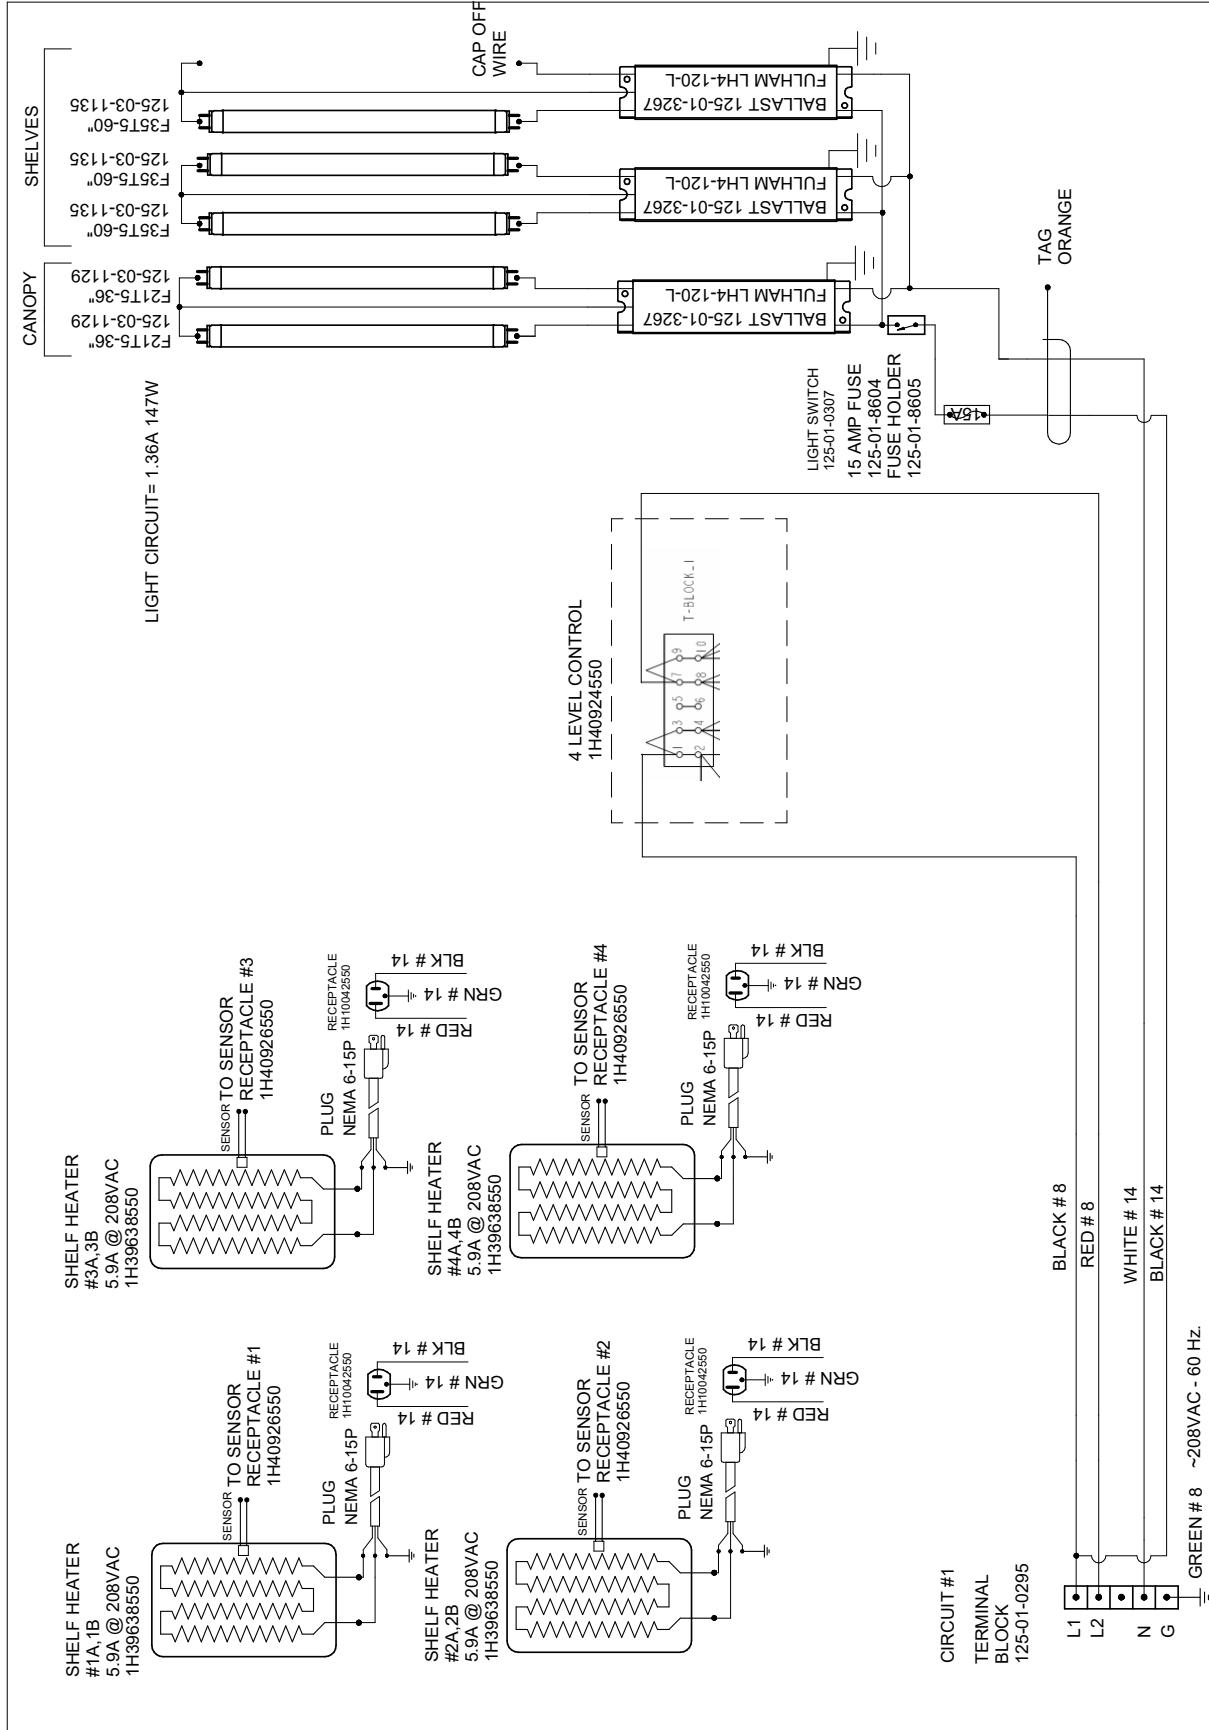


DRAWN BY: CRAIG BOOREY		PROJECT TITLE: ISLA HOT		DRAWING #: W6600012	
CHECKED BY:		DATE: 8/1/11		DRAWING TITLE:	
BY: 11/4/11 CB		PRODUCTION ORDER #: 622834		IM-04-16-H	
DATE: 4/26/12 CB		FILE LOCATION:		PAGE 1 OF 3	
11/29/12 CB					
REVISIONS: # DESCRIPTION: B CHANGED TO LH5-20L BALLAST FOR SHELVES E CHANGED TO LH4-20L BALLAST FOR SHELVES F CN#67609 CHGD 5 LEVEL CONTROL TO 4 LEVEL					
HUSSMANN® Hussmann Corporation, Int'l. 13770 Ramona Avenue Chino, CA 91710 (909)590-4910 Lic# 64406					

CIRCUIT #1	LOADING
	208 V 240V
L1	25.0 28.6
L2	23.6 27.2

**CIRCUIT # 1
CONTINUED**


**5200W @ 208VAC
6864W @ 240VAC**
NOTE: CASE MUST
BE GROUNDED

**HEATER RECEPTACLE WIRING
CONTROL PANEL**

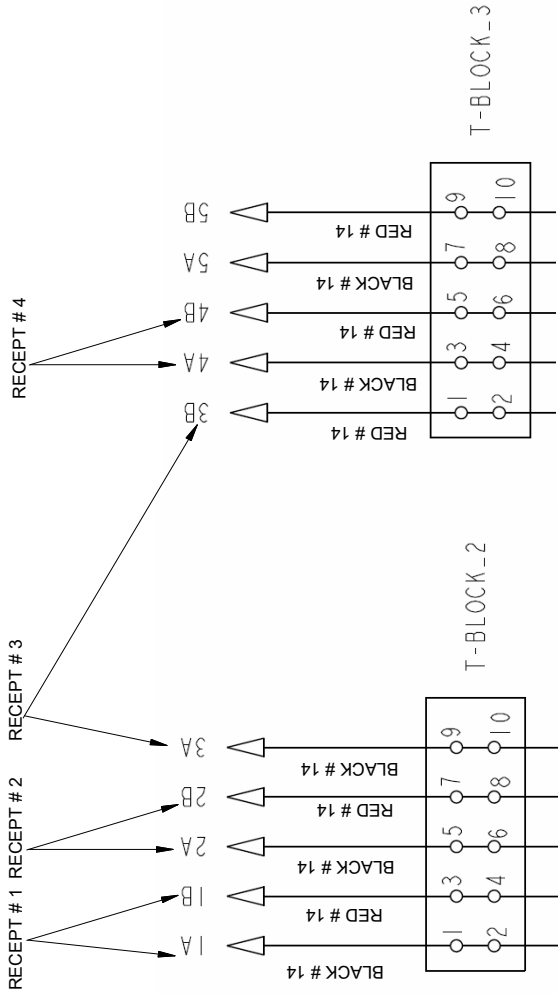

**SENSOR RECEPTACLE WIRING
CONTROL PANEL**

SENSOR RECEPTACLES TO BE WIRED
TO PIN # 10 AND 11 AS SHOWN TO RESPECTIVE
CONTROL

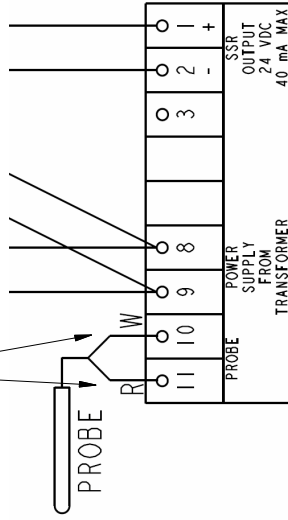

HUSSMANN®
Hussmann Corporation, Intl.
13000 Riverchase
Chico, CA 91710
(909)-590-4810 Lic.# 644406

REVISIONS:

#	DESCRIPTION:	DATE:	BY:
B	CHANGED TO LH5-20L BALLAST FOR SHELVES	11/4/11	CB
E	CHANGED TO LH4-20L BALLAST FOR SHELVES	4/26/12	CB
F	CW#667609 CHGD 5 LEVEL CONTROL TO 4 LEVEL	11/29/12	CB

DRAWN BY: CRAIG BOOREY

CHECKED BY:

DATE: 8/1/11

PROJECT TITLE: ISLA HOT

DRAWING #: W6600012


DRAWING TITLE:

IM-04-16-H

PAGE 2 OF 3

CIRCUIT # 1
CONTINUED

CONTROL PANEL WIRING FOR UP TO 5 LEVELS

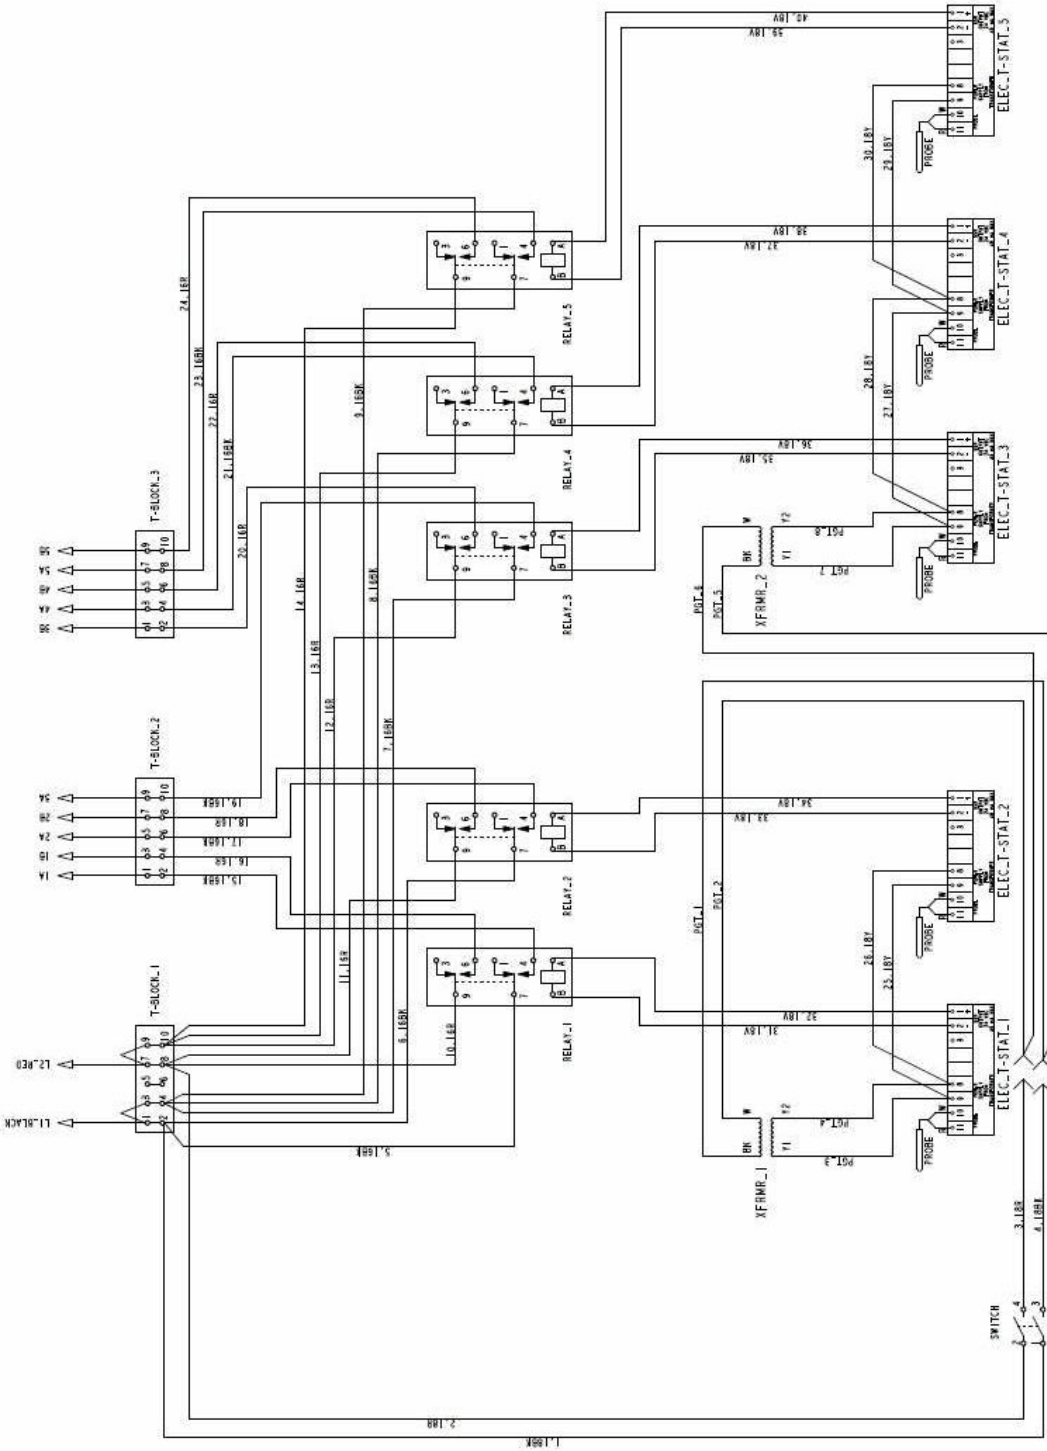


HUSSMANN
Hussmann Corporation, Intl.
13770 Ramona Avenue
Chino, CA 91710
(909)590-4910 Lic.# 644406

REVISIONS:

#	DESCRIPTION:	DATE:	BY:
A	CHANGED TO LH5-120-L BALLAST FOR SHELVES	11/04/11	CB
B	CHANGED TO LH4-20L BALLAST FOR SHELVES	4/26/12	CB
E	CHANGED TO LH4-20L BALLAST FOR SHELVES	4/26/12	CB
F	CN#667609 CHGD 5 LEVEL CONTROL TO 4 LEVEL	11/29/12	CB

DRAWN BY: CRAIG BOOREY	PROJECT TITLE: ISLA HOT	DRAWING #: W6600012
CHECKED BY:	DATE: 8/1/11	
PRODUCTION ORDER #:		
FILE LOCATION:		

IM-04-C6-H	PAGE 3 OF 3
------------	-------------

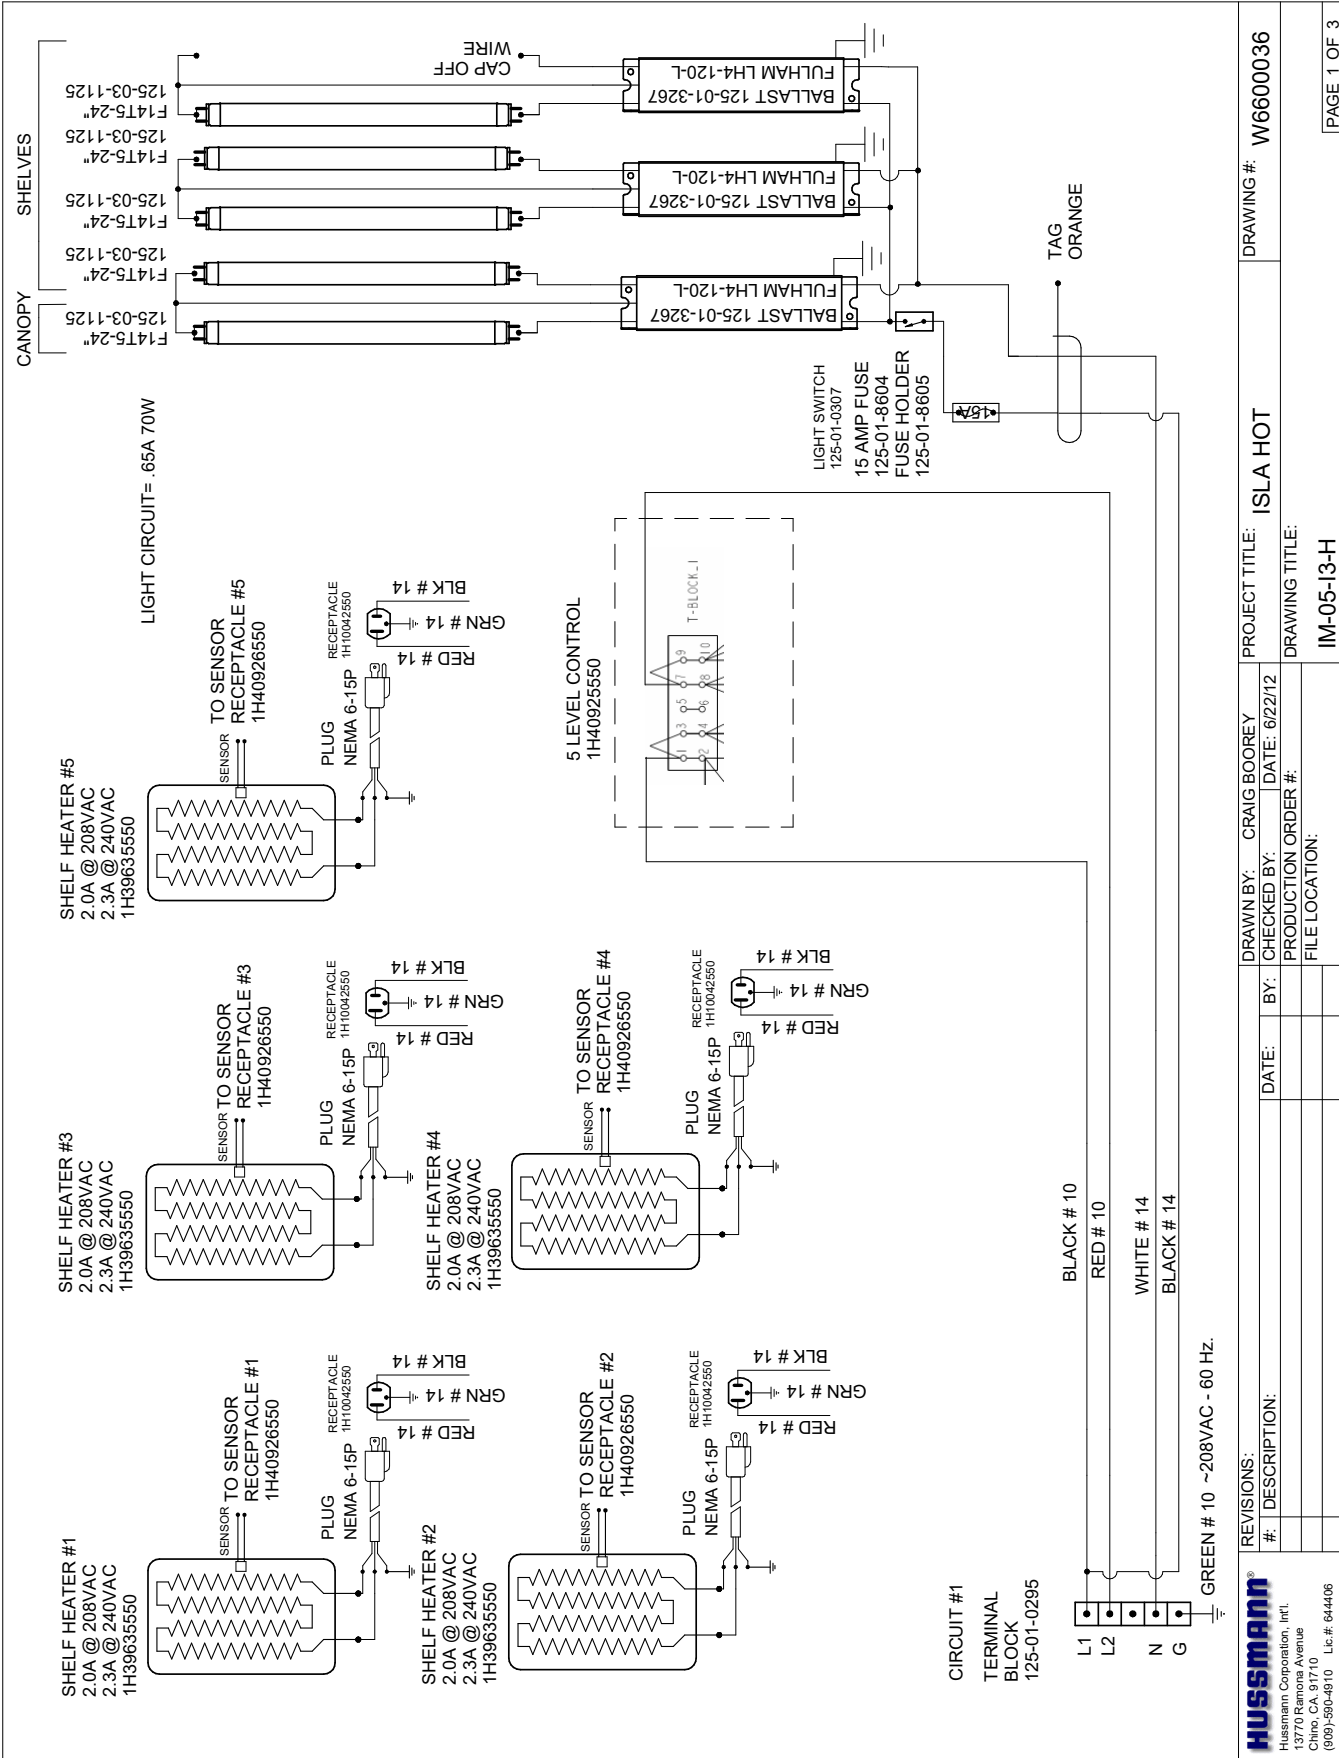

CIRCUIT #1


LOADING	208 V	240V
L1	10.7	12.2
L2	10.0	11.5

NOTE: CASE MUST BE GROUNDED


CIRCUIT #1 CONTINUED

**4037W @ 208VAC
5392W@240VAC**

HEATER RECEPTACLE WIRING CONTROL PANEL

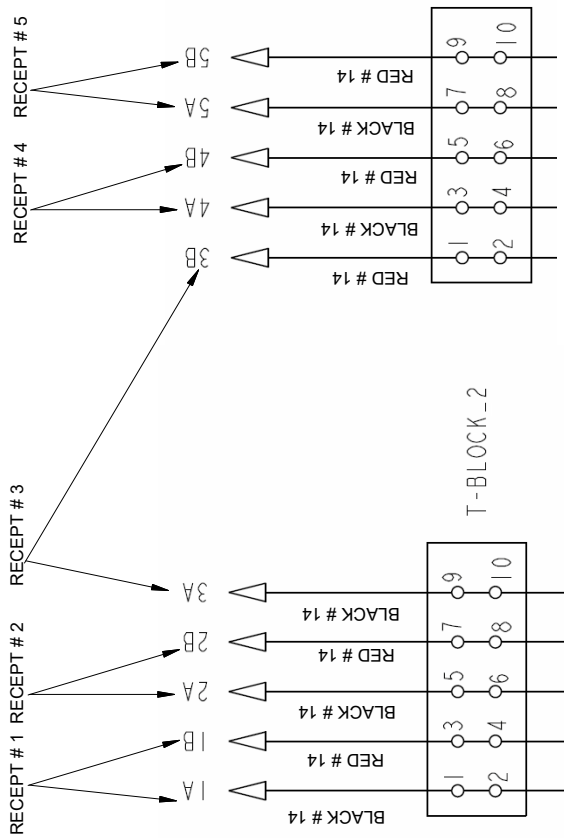

SENSOR RECEPTACLE WIRING CONTROL PANEL

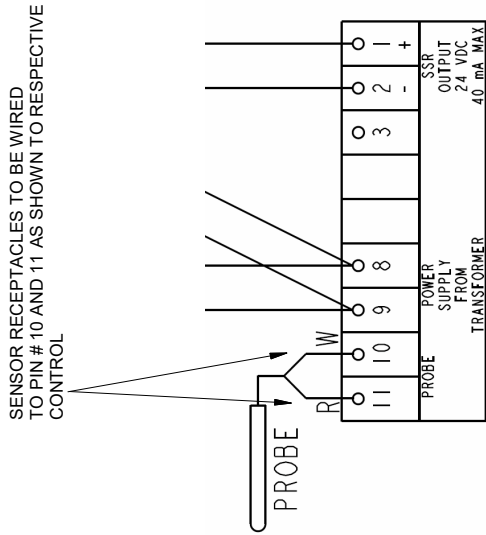


SENSOR RECEPTACLES TO BE WIRED TO PIN # 10 AND 11 AS SHOWN TO RESPECTIVE CONTROL

ELEC_T-STAT_1

<p>Husmann Corporation, Inc. 3770 Ramona Avenue Chino, CA 91710 (909) 390-4910 Lic.#: 644406</p>	REVISIONS:	DATE:	DRAWN BY: CRAIG BOOREY	PROJECT TITLE: ISLA HOT	DRAWING #: W6600036
	#:	DESCRIPTION:	BY:	PRODUCTION ORDER #:	DRAWING TITLE: IM-05-13-H
			DATE: 6/22/12		PAGE 2 OF 3
			FILE LOCATION:		


CIRCUIT # 1
CONTINUED

CONTROL PANEL WIRING

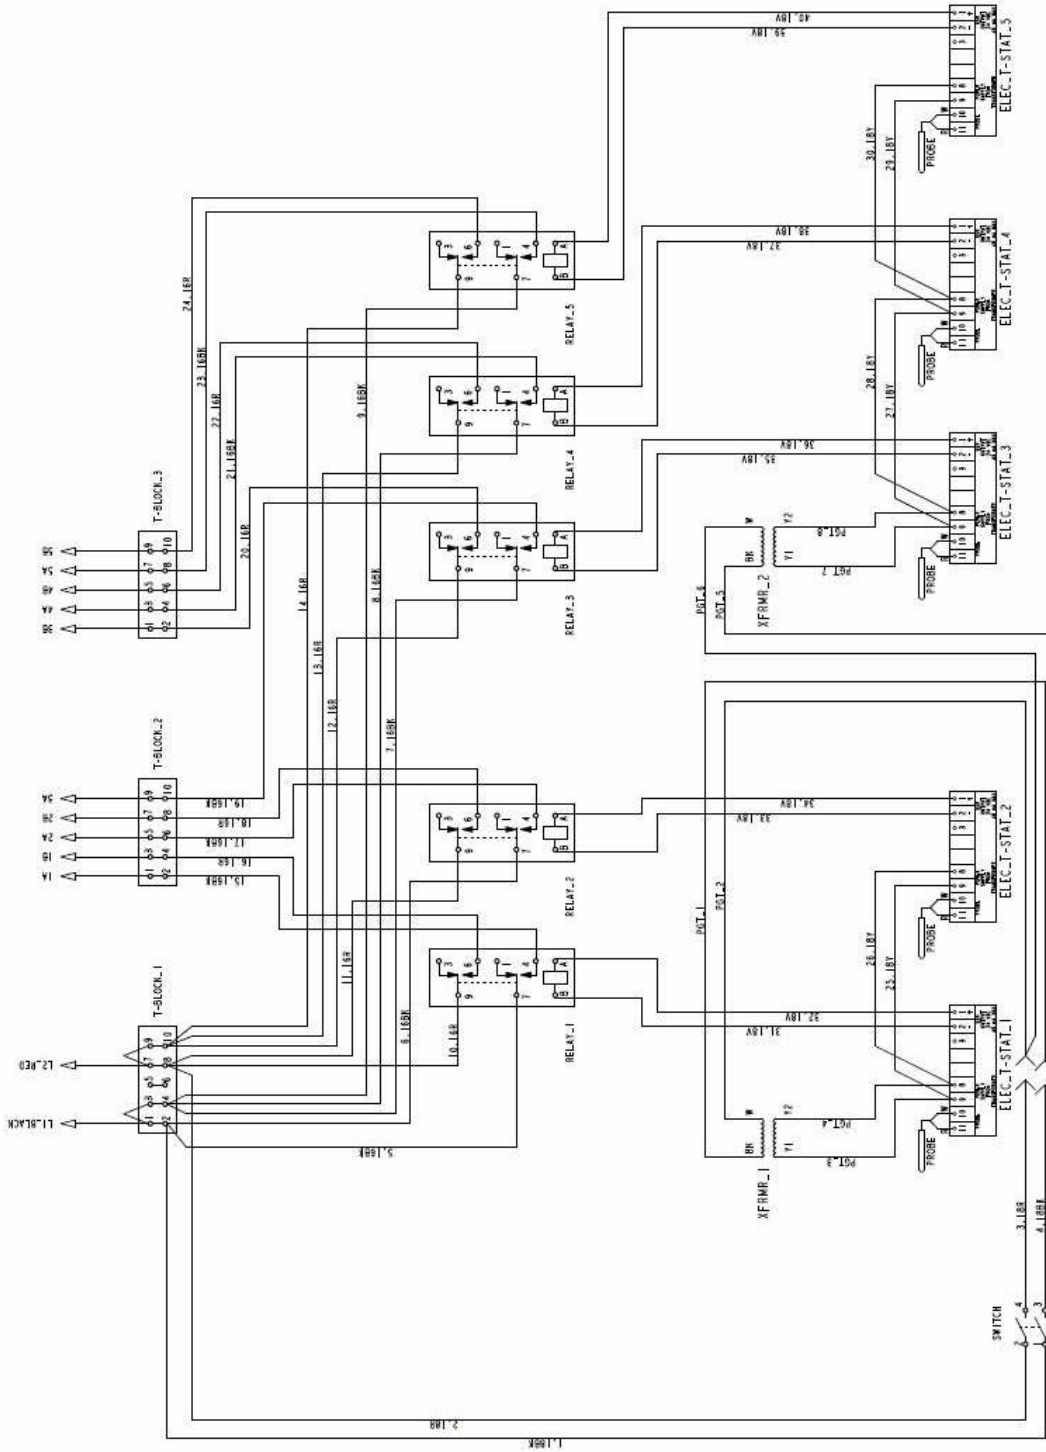

REVISIONS: #1 DESCRIPTION:	DRAWN BY: CRAIG BOOREY CHECKED BY:	PROJECT TITLE: ISLA HOT DRAWING TITLE: IM-05-13-H	DRAWING #: W6600036 DATE: 6/22/12
	DATE:	PRODUCTION ORDER #:	FILE LOCATION:

HUSSMANN
 Hussmann Corporation, Inc.
 17000 Sycamore Avenue
 Chico, CA 95710
 (916)-590-4810 Lic.# 644406

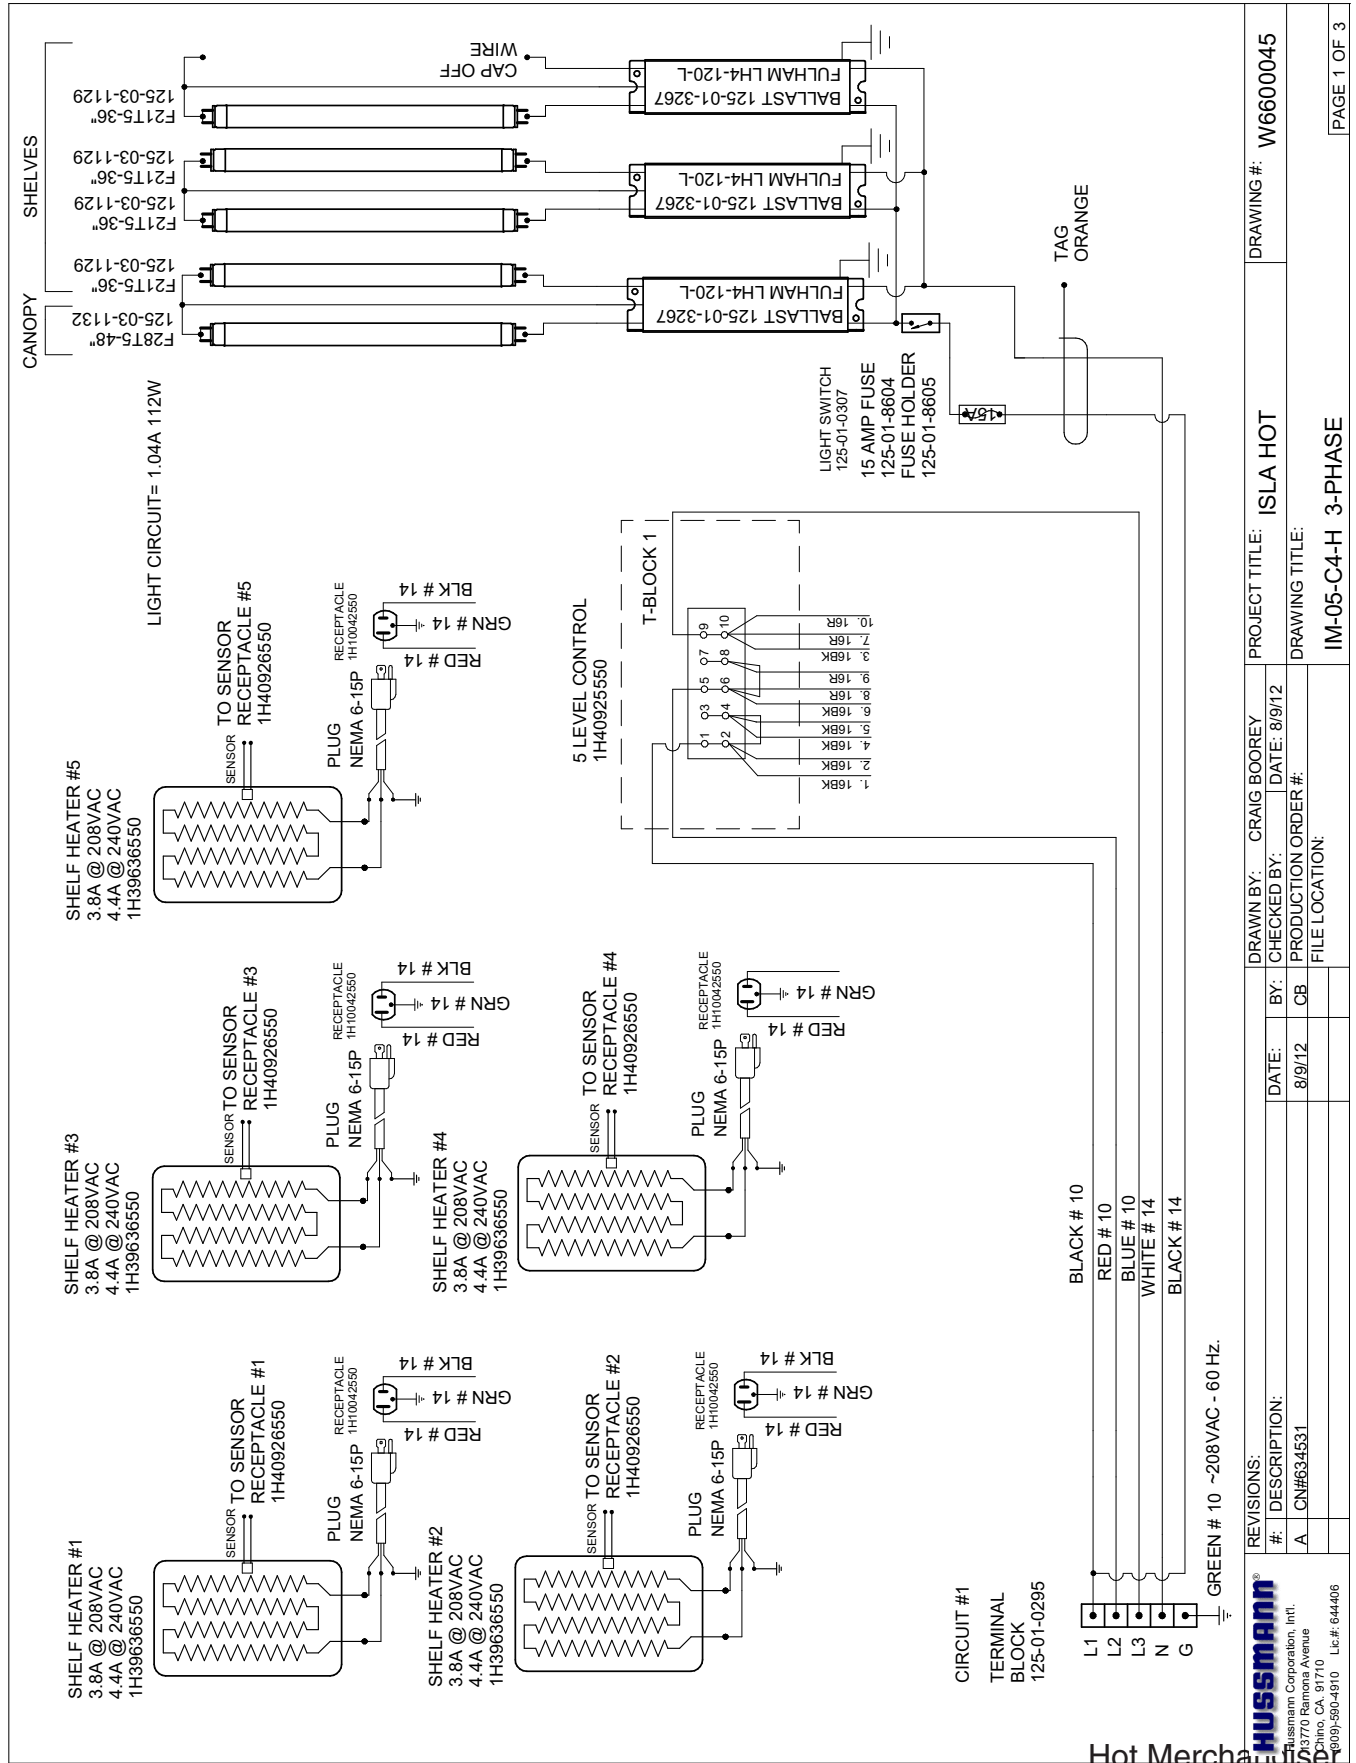

DRAWN BY: CRAIG BOOREY		PROJECT TITLE: ISLA HOT		DRAWING #: W6600045	
BY: 8/9/12	CHECKED BY:	DATE: 8/9/12	ISLA HOT		
8/9/12	CB	PRODUCTION ORDER #:			
		FILE LOCATION:			
				IM-05-C4-H 3-PHASE	
				PAGE 1 OF 3	

HUSSMANN
 Hussmann Corporation, Int'l.
 313770 Ramona Avenue
 Chino, CA 91710
 800-938-4910 Lic.# 644-06

Hot Merchandise

CIRCUIT #1


LOADING
208 V
L1 12.4
L2 15.2
L3 11.4

NOTE: CASE MUST BE GROUNDED



CIRCUIT # 1 CONTINUED

4683W @ 208VAC

HEATER RECEPTACLE WIRING CONTROL PANEL

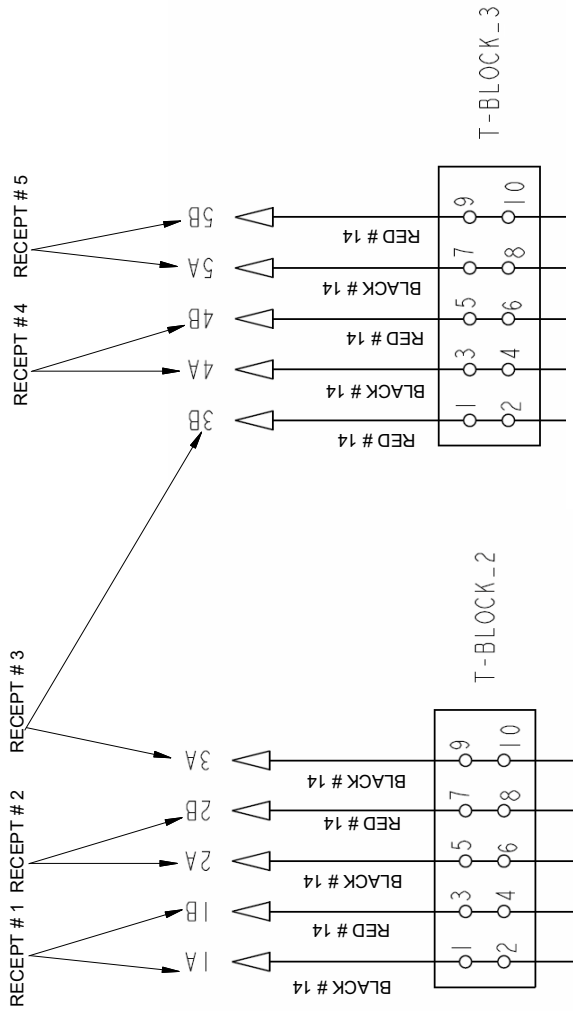

SENSOR RECEPTACLE WIRING CONTROL PANEL

 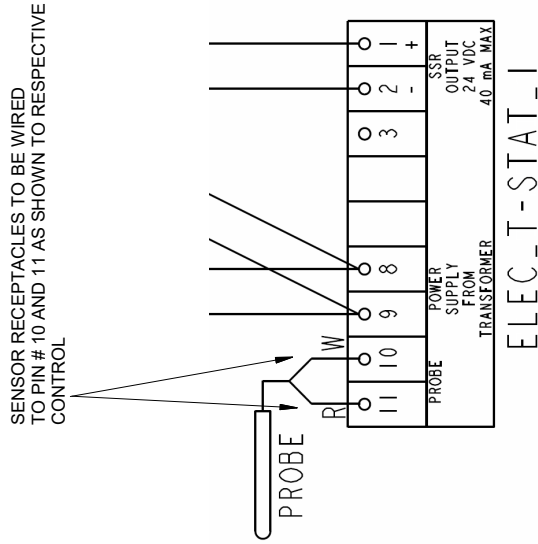

Husmann Corporation, Int'l
13770 Ramona Avenue
Chino, CA, 91710
(909) 594-4910 Lic.# 644406

REVISIONS:

#	DESCRIPTION
A	CN#634531

DRAWN BY: CRAIG BOOREY
CHECKED BY: DATE: 8/9/12
BY: CB PRODUCTION ORDER #:
FILE LOCATION:

PROJECT TITLE: ISLA HOT
DRAWING TITLE: IM-05-C4-H 3-PHASE

DRAWING #: W6600045
PAGE 2 OF 3







CIRCUIT # 1
CONTINUED

NOTE: ALL WIRES IN T-BLOCK_1 MUST BE LABELED WITH WIRE NUMBERS

TERMINAL BLOCK CONNECTIONS	
POWER INPUT	HEATED SHELF
L1	SHELF #1
L2	SHELF #2
L3	SHELF #3
	SHELF #4
	SHELF #5
	SHELF #6

POWER INPUT	240 VOLTS	208 VOLTS	240 VOLTS
5 SHELF CONTROLLER	6150W 29.5A	6150W 25.5A	6150W 25.5A
POWER INPUT 3Ø	6150W 20.5A	6150W 17.1A	
5 SHELF CONTROLLER			
POWER OUTPUT (MAX)	208 VOLTS	240 VOLTS	
SHELF#1 (1A, 1B)	1230W 5.9A	1230W 5.1A	
SHELF#2 (2A, 2B)	1230W 5.9A	1230W 5.1A	
SHELF#3 (3A, 3B)	1230W 5.9A	1230W 5.1A	
SHELF#4 (4A, 4B)	1230W 5.9A	1230W 5.1A	
SHELF#5 (5A, 5B)	1230W 5.9A	1230W 5.1A	

WIRE NAME	SPOOL PART NO.	END 1	END 2	NOMINAL LENGTH
1	040	536	536	6
2	040	024	536	8
3	040	024	536	9
4	040	024	536	12
5	040	024	536	14
6	041	536	536	4
7	041	024	536	4
8	041	024	536	7
9	041	024	536	8
10	041	024	536	11
11	002	536	536	3
12	004	536	536	3
13	025	072	536	9
14	026	072	536	10
15	040	024	536	3
16	041	024	536	3
17	040	024	536	4
18	041	024	536	3
19	040	024	536	3
20	041	024	536	4
21	040	024	536	5
22	041	024	536	4
23	040	024	536	6
24	041	024	536	5
25	028	514	512	5
26	028	512	512	5
27	028	514	514	5
28	028	514	514	5
29	028	514	514	5
30	028	514	514	5
31	084	038	514	8
32	084	038	514	8
33	084	038	514	7
34	084	038	514	8
35	084	038	514	8
36	084	038	514	7
37	084	038	514	8
38	084	038	514	7
39	084	038	514	9
40	084	038	514	8
41	025	072	536	7
42	025	072	536	7

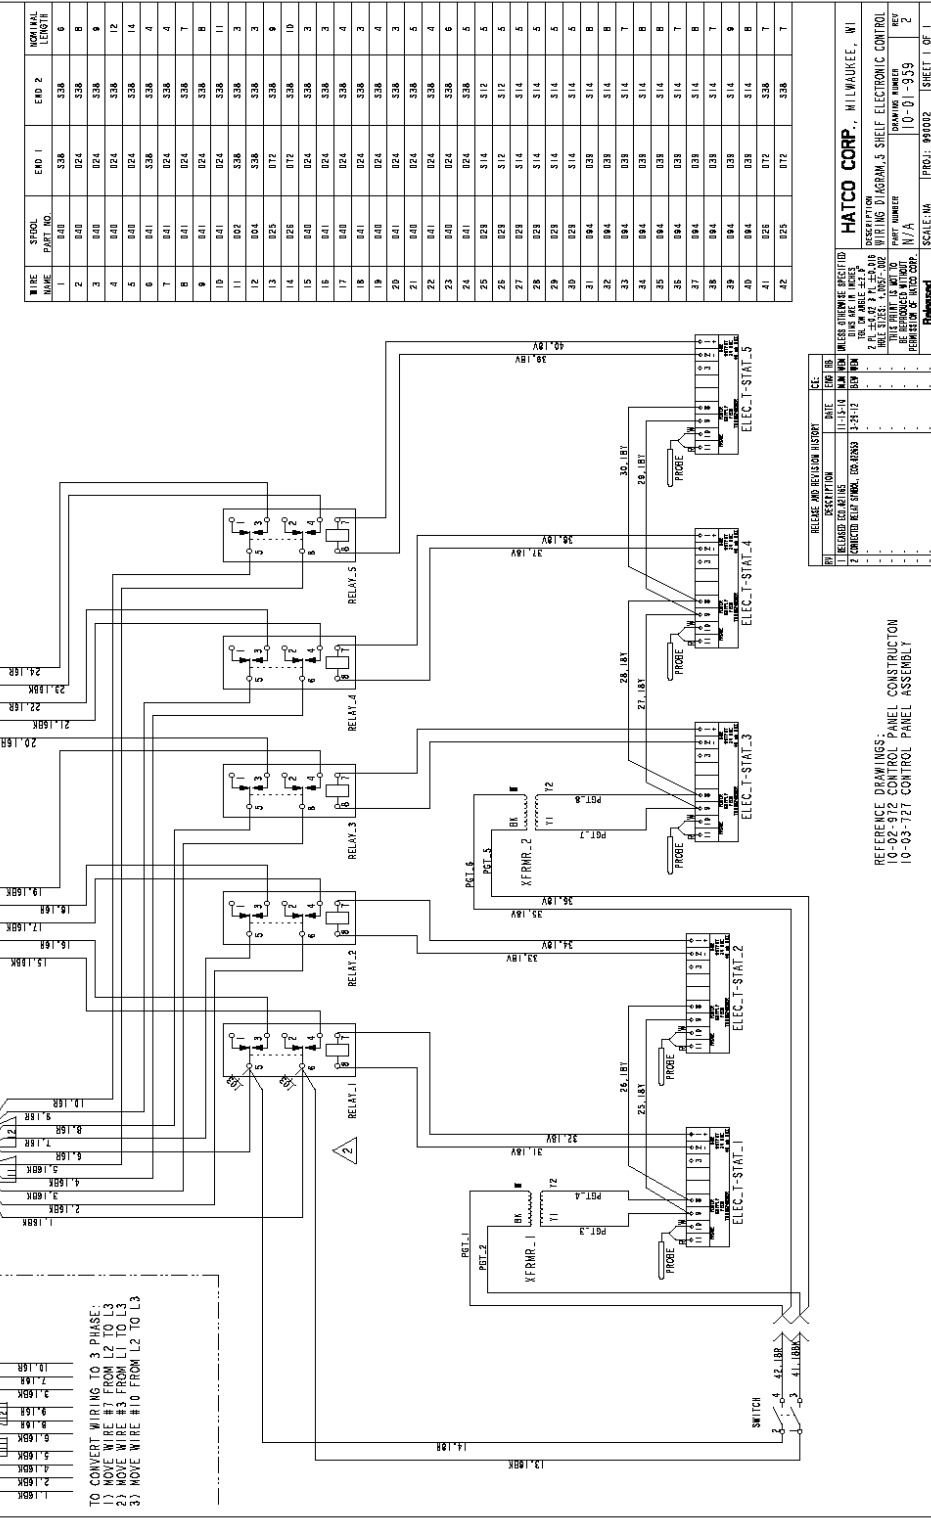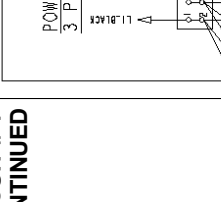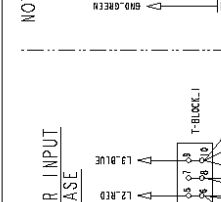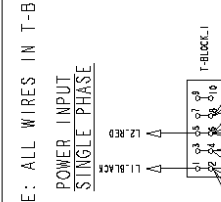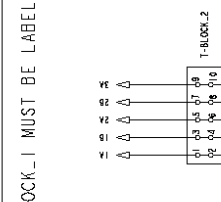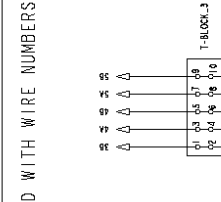


WIRE NAME	SPOOL PART NO.	END 1	END 2	NOMINAL LENGTH
1	040	536	536	6
2	040	024	536	8
3	040	024	536	9
4	040	024	536	12
5	040	024	536	14
6	041	536	536	4
7	041	024	536	4
8	041	024	536	7
9	041	024	536	8
10	041	024	536	11
11	002	536	536	3
12	004	536	536	3
13	025	072	536	9
14	026	072	536	10
15	040	024	536	3
16	041	024	536	3
17	040	024	536	4
18	041	024	536	3
19	040	024	536	3
20	041	024	536	4
21	040	024	536	5
22	041	024	536	4
23	040	024	536	6
24	041	024	536	5
25	028	514	512	5
26	028	512	512	5
27	028	514	514	5
28	028	514	514	5
29	028	514	514	5
30	028	514	514	5
31	084	038	514	8
32	084	038	514	8
33	084	038	514	7
34	084	038	514	8
35	084	038	514	8
36	084	038	514	7
37	084	038	514	8
38	084	038	514	7
39	084	038	514	9
40	084	038	514	8
41	025	072	536	7
42	025	072	536	7

RELEASE AND REVISION HISTORY	DATE	DESCRIPTION
1	10/12/12	ISSUED FOR CONSTRUCTION
2	10/12/12	ISSUED FOR CONSTRUCTION
3	10/12/12	ISSUED FOR CONSTRUCTION

REVISIONS:	DATE:	DESCRIPTION:
#	8/9/12	10-02-972 CONTROL PANEL CONSTRUCTION
A	8/9/12	10-03-127 CONTROL PANEL ASSEMBLY

PROJECT TITLE: ISLA HOT
 DRAWING #: W6600045
 DRAWING TITLE: IM-05-C4-H 3-PHASE
 DRAWN BY: CRAIG BOOREY
 CHECKED BY: CB
 DATE: 8/9/12
 PRODUCTION ORDER #:
 FILE LOCATION:
 HUSSMANN CORPORATION, INTL.
 13770 Ramona Avenue
 Chino, CA 91710
 (909) 590-4910 Lic.#: 644406

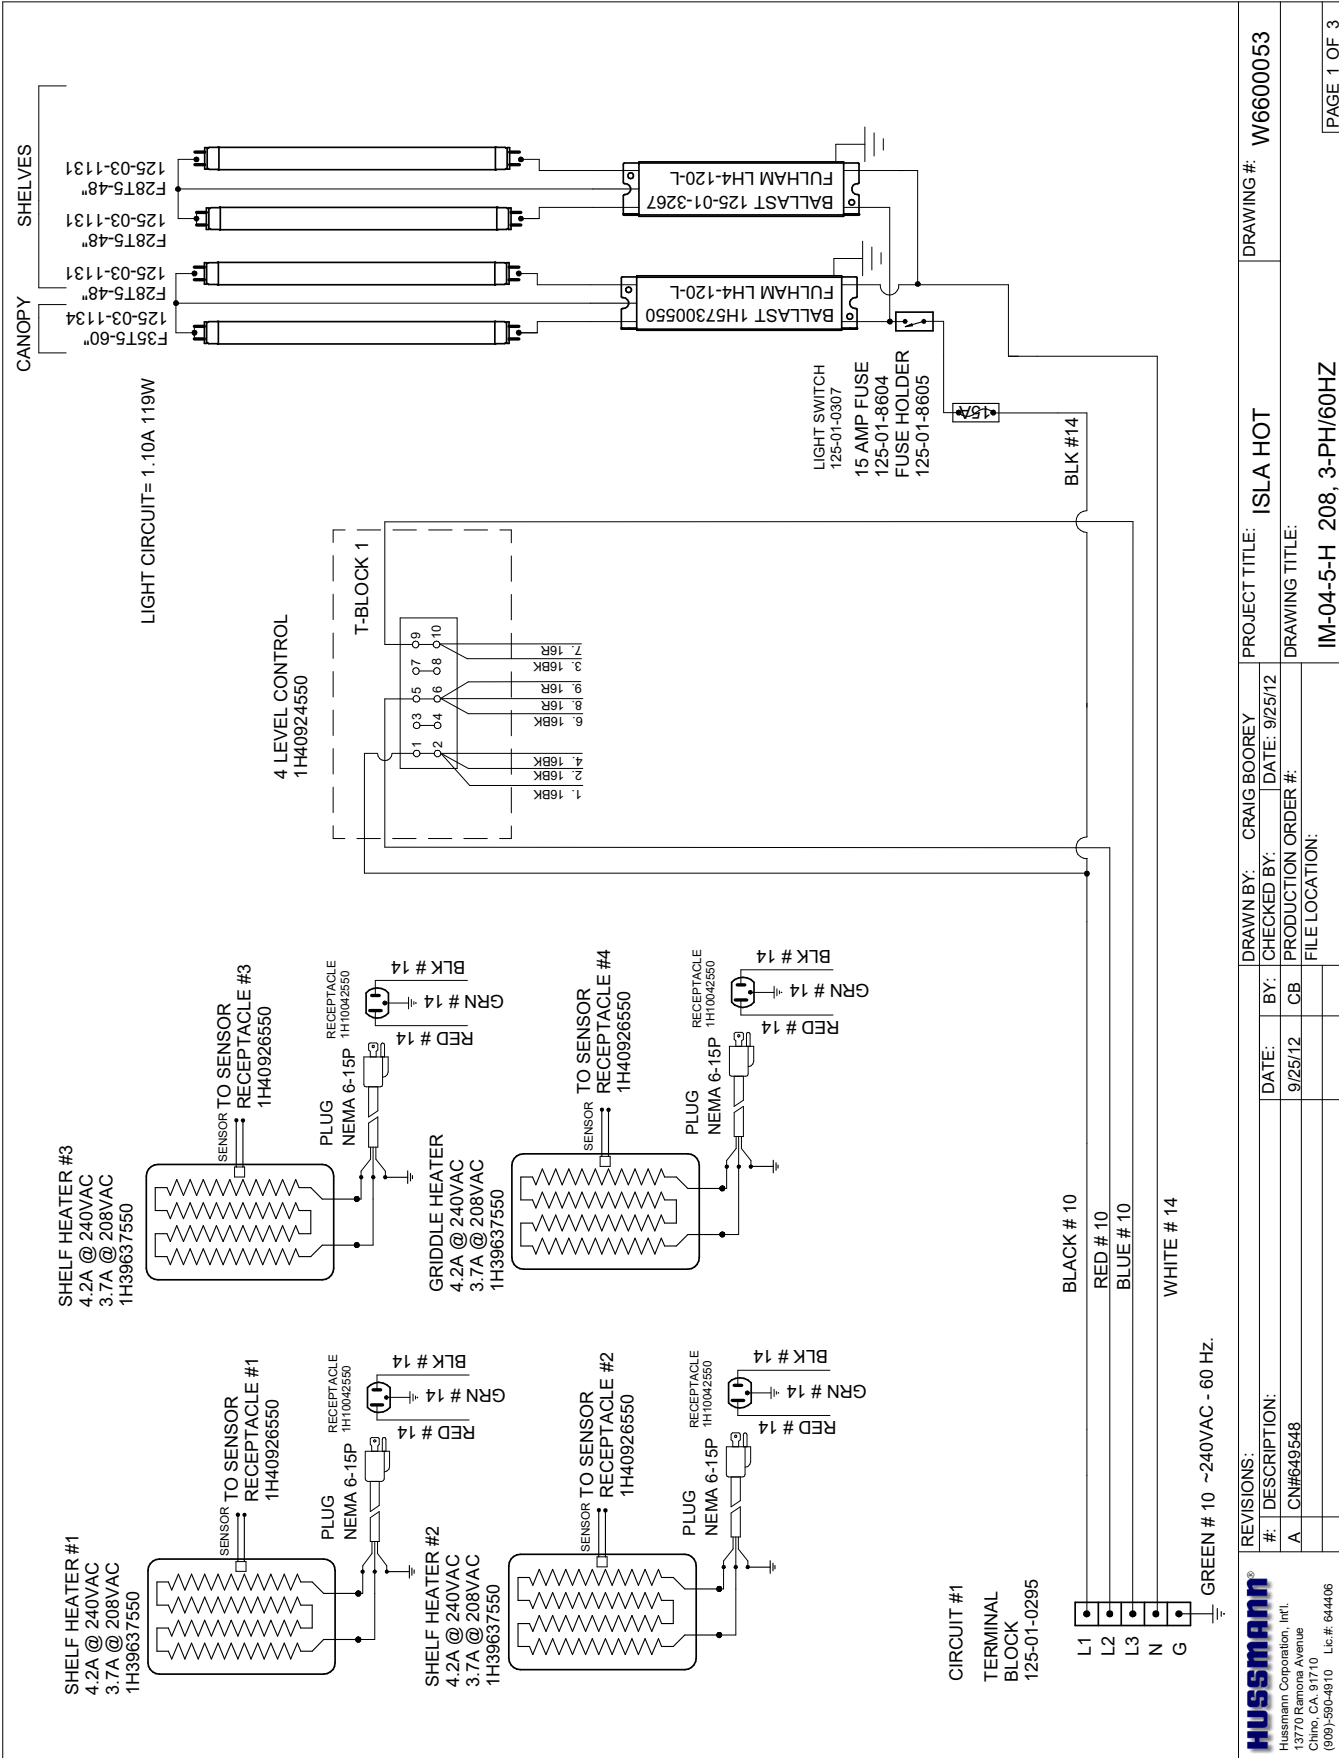

DRAWN BY: CRAIG BOOREY		PROJECT TITLE: ISLA HOT	DRAWING #: W6600053
DATE: 9/25/12	CHECKED BY:	DRAWING TITLE: IM-04-5-H 208, 3-PH/60HZ	
9/25/12	CB	FILE LOCATION:	PAGE 1 OF 3
REVISIONS:			
#	DESCRIPTION:		
A	CN#649548		
HUSSMANN Hussmann Corporation, Inc. 13770 Ramona Avenue Chino, CA 91710 (909) 390-4910 Lic.# 644406			


CIRCUIT #1	LOADING
	208 V 240V
L1	12.2
L2	11.1
L3	7.4

CIRCUIT #1
CONTINUED

3687W @ 208VAC


HEATER RECEPTACLE WIRING
CONTROL PANEL

NOTE: CASE MUST
BE GROUNDED

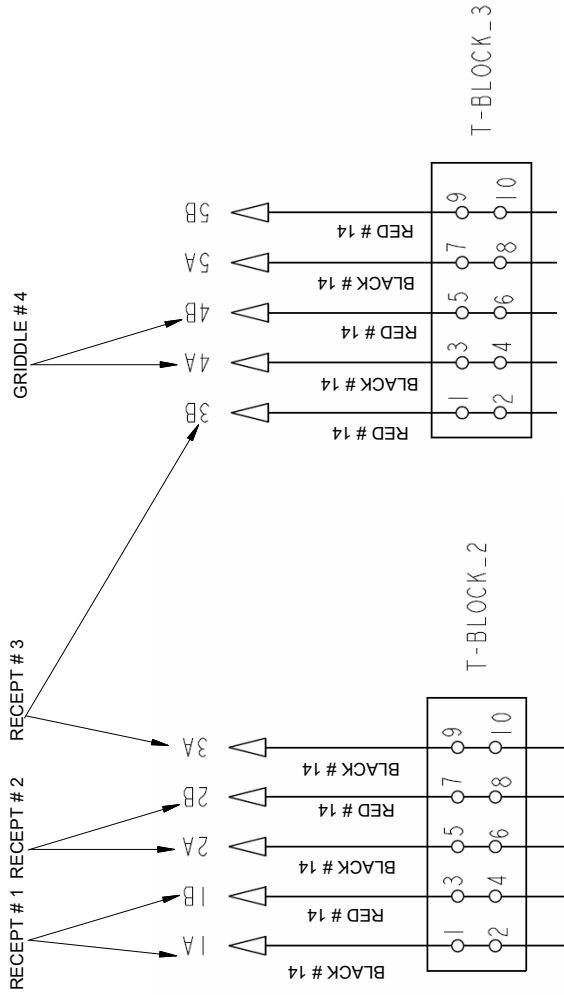


SENSOR RECEPTACLE WIRING
CONTROL PANEL

SENSOR RECEPTACLES TO BE WIRED
TO PIN #10 AND 11 AS SHOWN TO RESPECTIVE
CONTROL

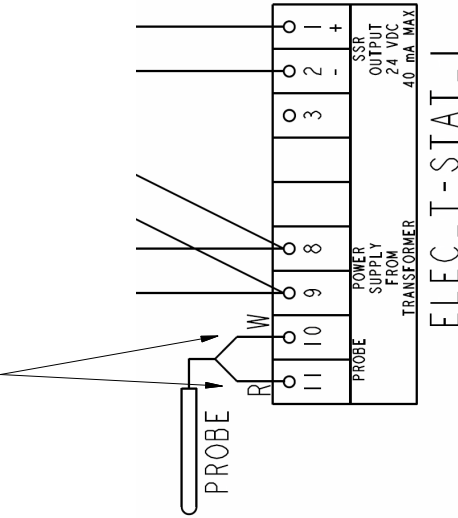

REVISIONS:		DRAWN BY: CRAIG BOOREY		PROJECT TITLE: ISLA HOT		DRAWING #: W6600053	
#:	DESCRIPTION:	DATE:	CHECKED BY:	DATE:	9/25/12		
A	CN#649548	9/25/12	CB	PRODUCTION ORDER #:			
				FILE LOCATION:			
							PAGE 2 OF 3

CIRCUIT # 1
CONTINUED

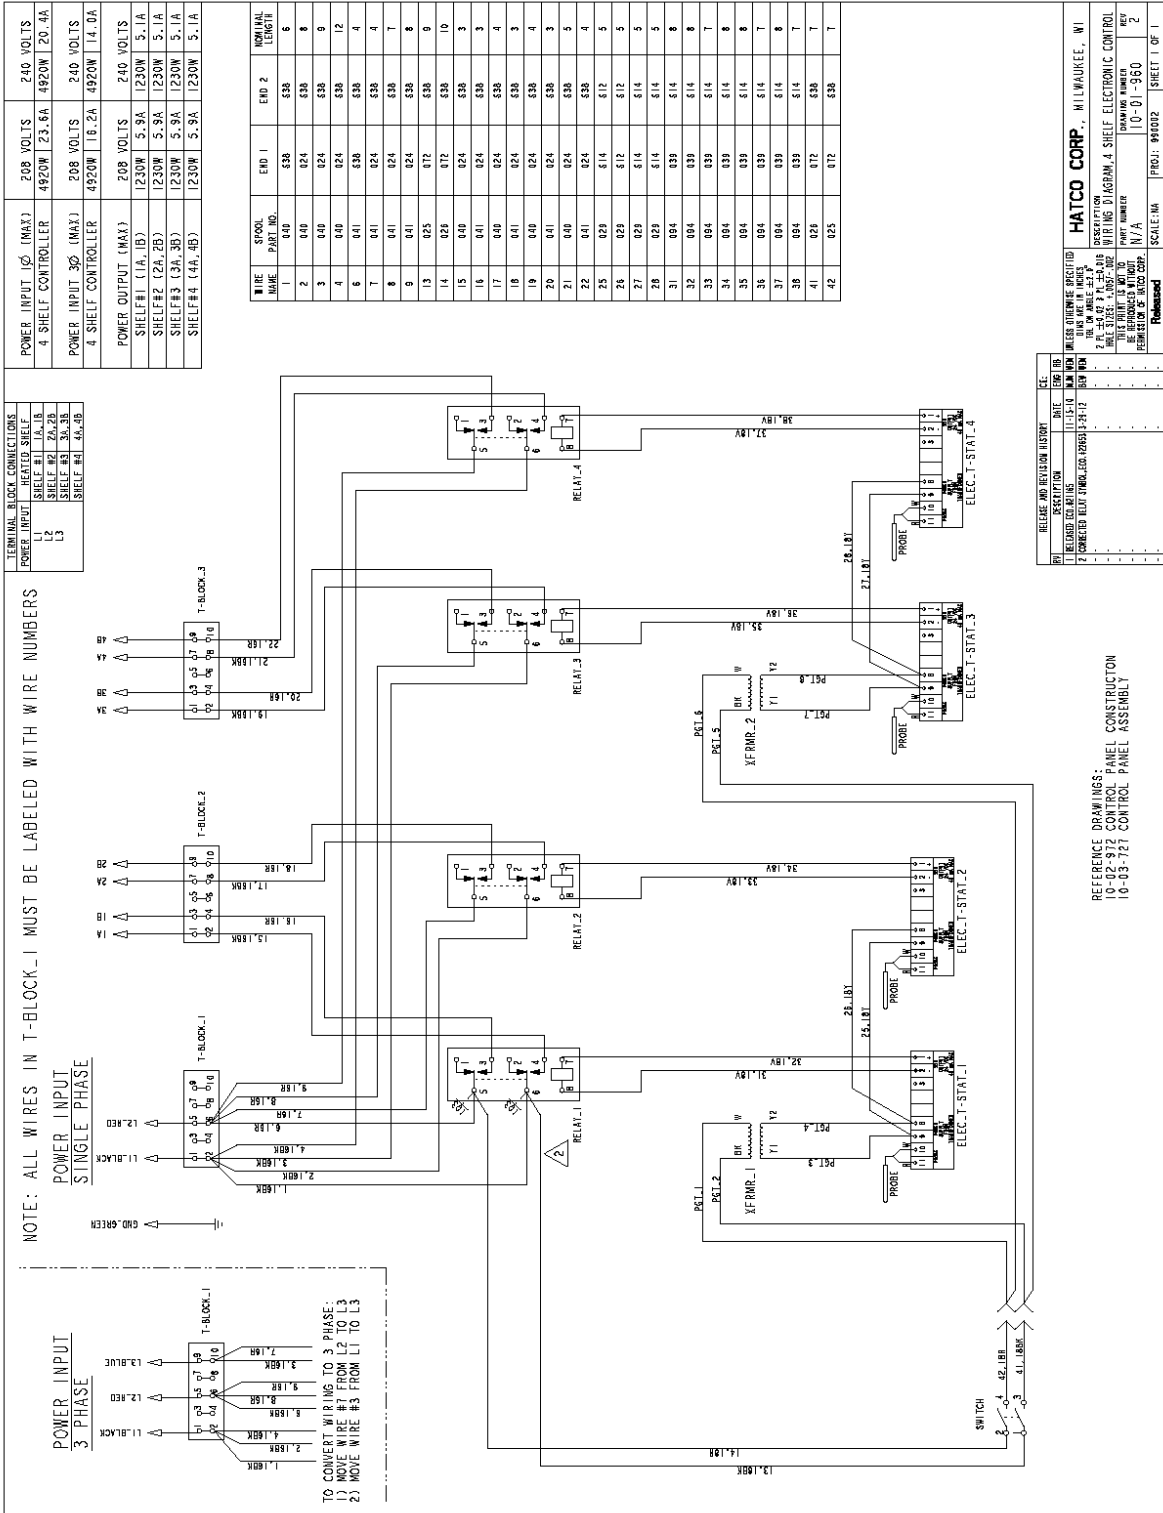

RELAY_1	RELAY_2	RELAY_3	RELAY_4
YFRMR_1	YFRMR_2	YFRMR_3	YFRMR_4
ELEC-T-START_1	ELEC-T-START_2	ELEC-T-START_3	ELEC-T-START_4

WIRE NUMBER	SPOOL PART NO.	END 1	END 2	QUANTITY LENGTH
1	040	538	538	6
2	040	024	538	8
3	040	024	538	9
4	040	024	538	12
6	041	024	538	4
7	041	024	538	4
8	041	024	538	7
9	041	024	538	8
13	025	072	538	0
14	029	072	538	10
15	040	024	538	3
16	041	024	538	3
17	040	024	538	4
18	041	024	538	3
19	040	024	538	4
20	041	024	538	3
21	040	024	538	5
22	041	024	538	4
25	029	014	612	5
26	029	014	612	5
27	029	014	614	5
28	029	014	614	5
31	004	039	614	8
32	004	039	614	8
33	004	039	614	7
34	004	039	614	8
35	004	039	614	8
36	004	039	614	7
37	004	039	614	8
38	004	039	614	7
41	029	072	538	7
42	025	072	538	7

RELEASE AND REVISION HISTORY

REV.	DESCRIPTION	DATE	BY	CHKD BY
1	RELEASED FOR FAB	11-15-12	WJW	WJW
2	CONNECTED RELAY TERMINALS TO SHELF #1-4	03-12	WJW	WJW


HATCO CORP., MILWAUKEE, WI
 DESCRIPTION: 10-02-972 CONTROL PANEL CONSTRUCTION
 WIRING DIAGRAM #4 SHELF ELECTRONIC CONTROL
 DRAWING NUMBER: 10-0-360
 SCALE: 1:1
 SHEET 1 OF 1

REVISIONS:

DATE:	9/25/12	BY:	CB
DESCRIPTION:		FILE LOCATION:	

DRAWN BY: CRAIG BOOREY
 CHECKED BY: ISLA HOT
 DATE: 9/25/12
 PRODUCTION ORDER #: CN#649548
 PROJECT TITLE: ISLA HOT
 DRAWING #: W6600053
 IM-04-E5-H, 208 3-PH/60HZ

HUSSMANN®
 Hussmann Corporation, Inc.
 13770 Ramona Avenue
 Chino, CA 91710
 (909) 590-4910 Ltr.#: 644406

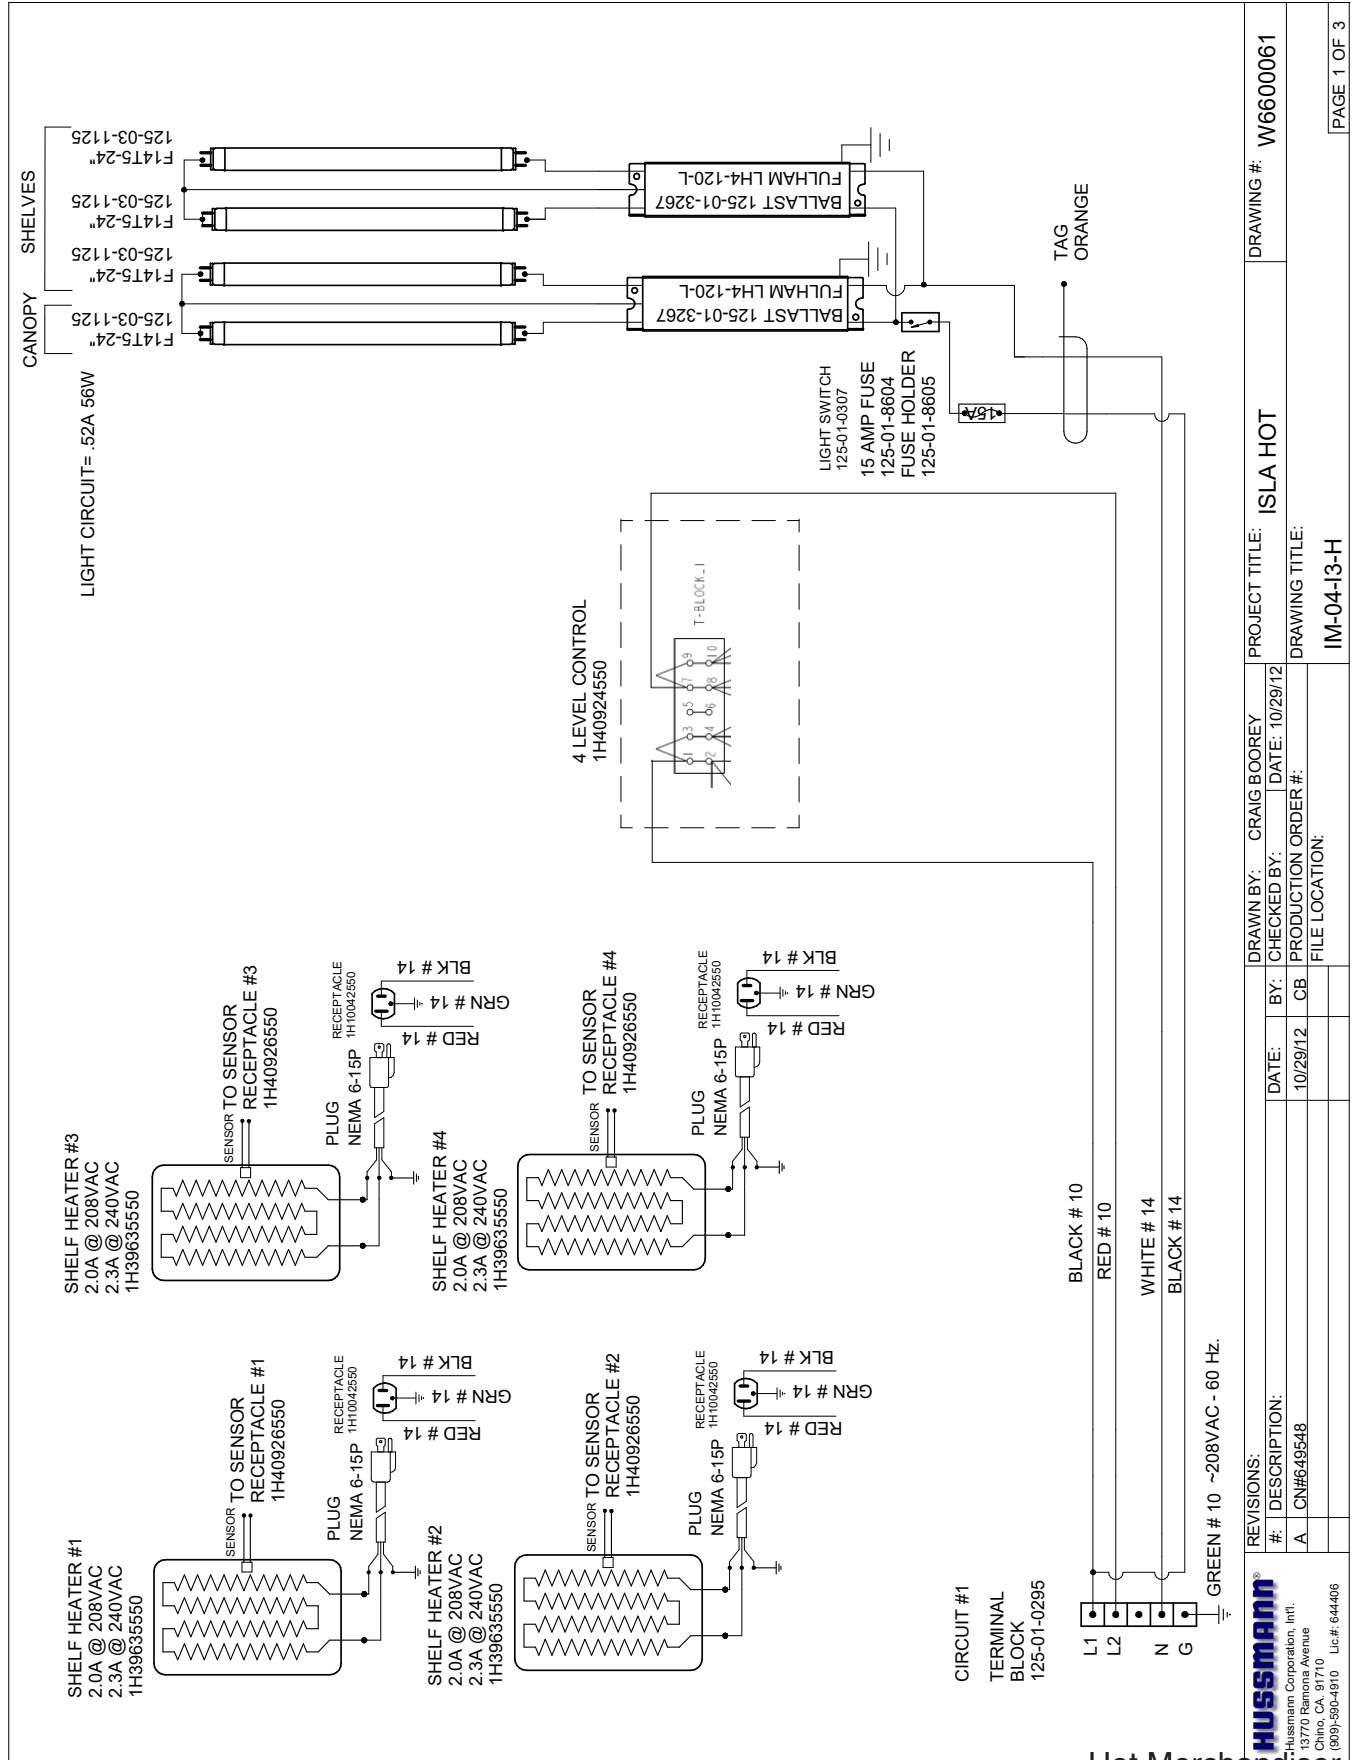

DRAWN BY: CRAIG BOOREY		PROJECT TITLE: ISLA HOT		DRAWING #: W6600061	
DATE: 10/29/12	CHECKED BY: CB	PRODUCTION ORDER #:	DRAWING TITLE: IM-04-I3-H		
FILE LOCATION:	PAGE 1 OF 3				
<p>HUSSMANN Hussmann Corporation, Int. 13770 Ramona Avenue Chino, CA, 91710 (909) 590-4910 Lic.#: 644506</p>					

CIRCUIT #1


LOADING	208 V	240V
L1	8.4	9.7
L2	8.0	9.2

NOTE: CASE MUST BE GROUNDED


CIRCUIT #1 CONTINUED

1747W @ 208VAC
2328W@240VAC

HEATER RECEPTACLE WIRING CONTROL PANEL

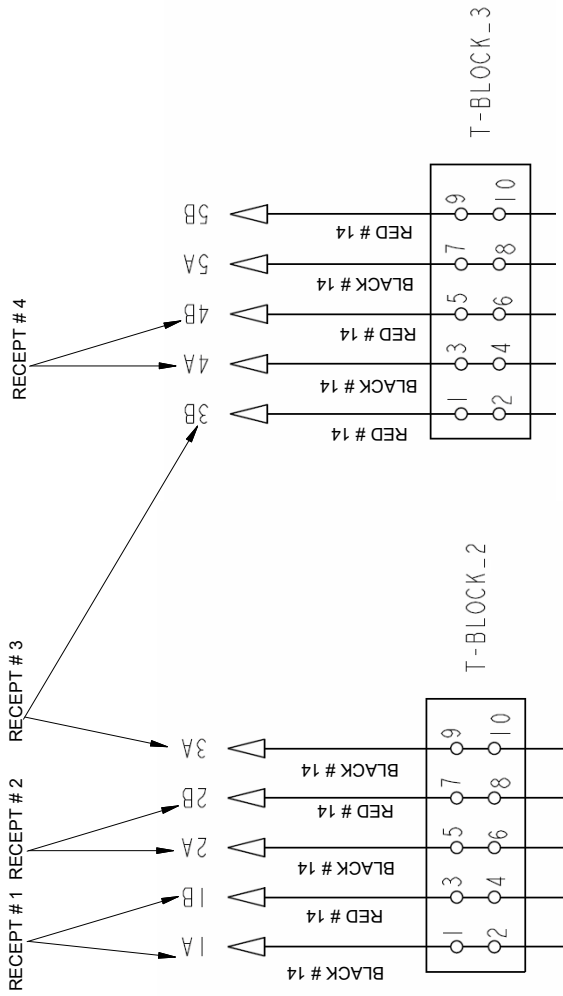

SENSOR RECEPTACLE WIRING CONTROL PANEL

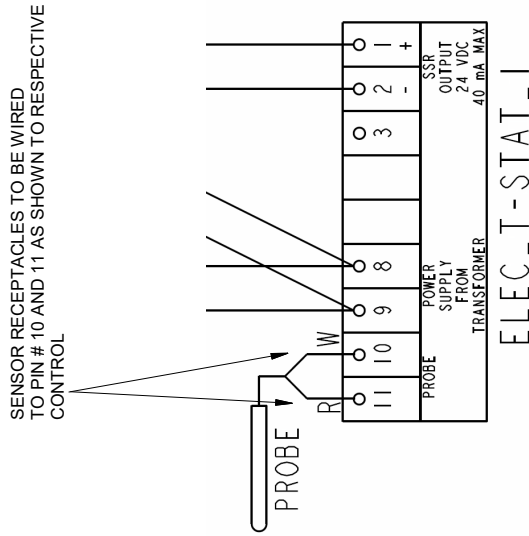

ELEC_T-STAT_1

HUSSMANN
Hussmann Corporation, Intl.
13770 Ramona Avenue
Chino, CA 91710
(909) 590-4910 Lic.#: 64406

REVISIONS:
DESCRIPTION:
A CN#6439548

DATE: 10/29/12
BY: CB
CHECKED BY: CRAIG BOOREY
PRODUCTION ORDER #:
FILE LOCATION:


PROJECT TITLE: ISLA HOT
DRAWING TITLE: IM-04-13-H

DRAWING # W6600061

PAGE 2 OF 3

CIRCUIT # 1
CONTINUED

CONTROL PANEL WIRING

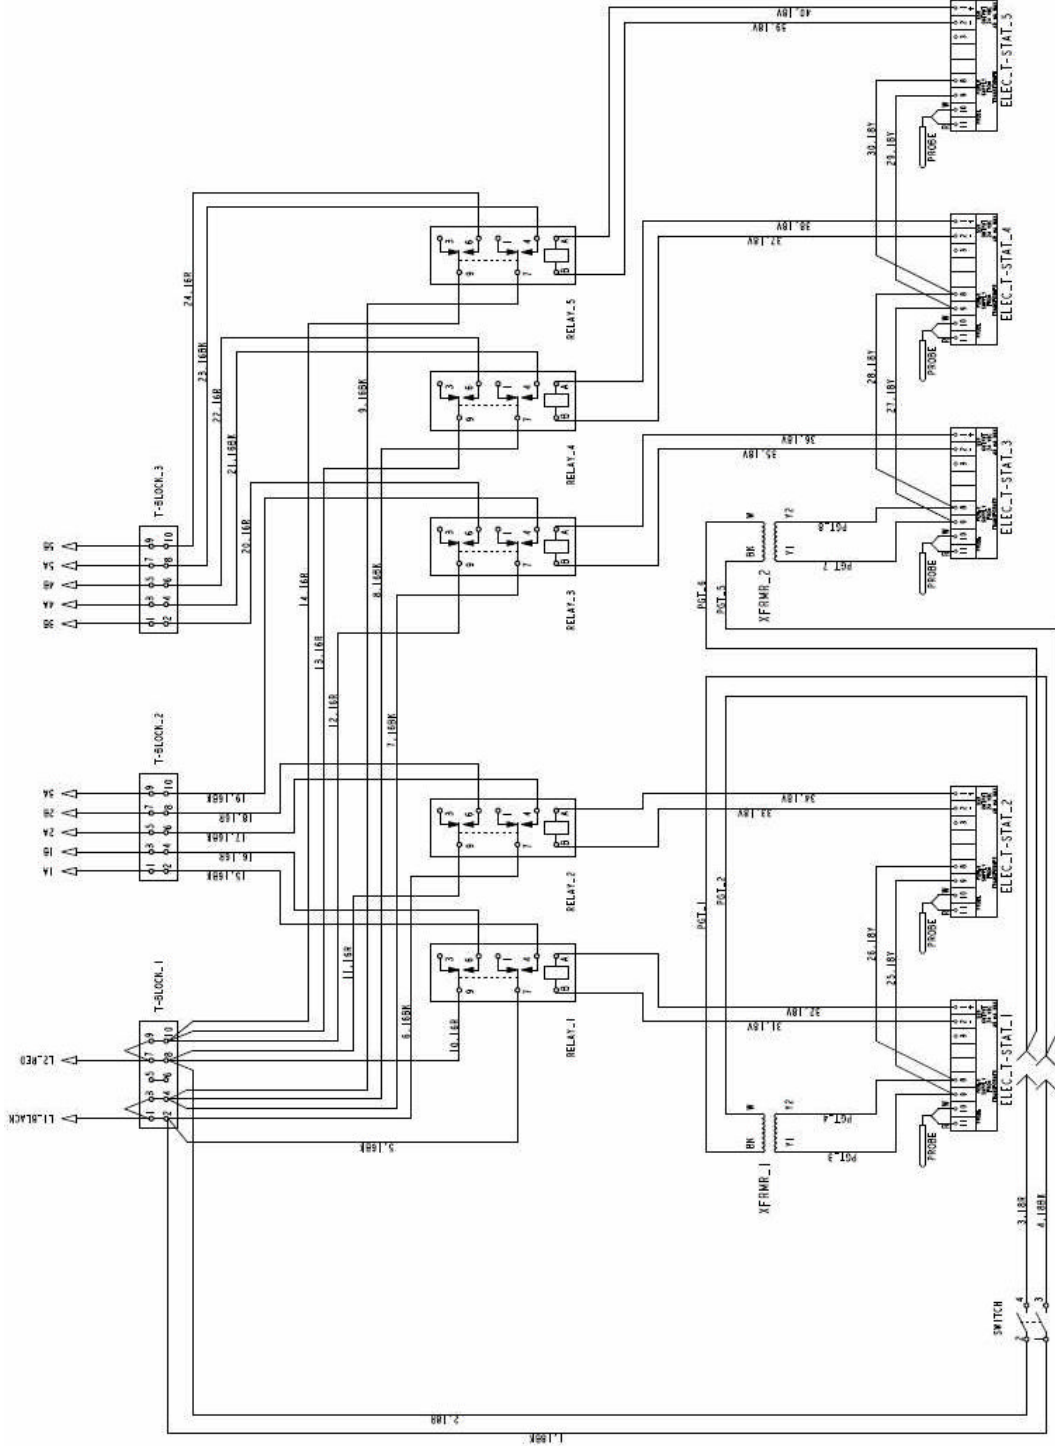

REVISIONS: #1 DESCRIPTION: A CN#649548		DRAWN BY: CRAIG BOOREY CHECKED BY:	PROJECT TITLE: ISLA HOT DRAWING #: W6600061
DATE: 10/29/12 PRODUCTION ORDER #:		DATE: 10/29/12 FILE LOCATION: IM-04-I3-H	
HUSSMANN® Hussmann Corporation, Int'l. 13770 Ramona Avenue Chino, CA, 91710 (909) 590-4910 Lic#: 644406		PAGE 3 OF 3	

7. Troubleshooting Guide



HUSSMANN Tech Support: 866-785-8499

HATCO TECH SUPPORT: 800-558-0607

INFORMATION REQUIRED WHEN CALLING FOR ASSISTANCE	Hatco Model Number	Store Contact Phone Number
	Hatco Serial Number	Complaint/issue
	Store Location	

HEATED SHELVES

Symptom	Probable Cause	Corrective Action
Product not holding temperature	Ambient conditions may be affecting the case operation.	Check case position in store. Is the case located near an open door, window, electric fan or air conditioning vent that may cause air currents? Case must be located minimum of 15 Ft away from doors or windows. Cases are designed to operate at 55% Relative Humidity and a temperature of 75°F.
	Heat settings too low.	Adjust shelf control setting.
	Product not hot when placed in case.	"Place prepackaged hot food in case. Measure food temperature when placed in case. Internal product temperature must be 160°F or greater when placed in case."
	Incorrect product packaging.	Some product packaging may impact the ability to hold product temperature. Use only approved containers.
	Product not placed correctly in case.	Load product in single layer, in direct contact with shelves.
	Unit not preheated.	Preheat case before loading product.
	Low voltage.	Dispatch Hatco authorized service agent
	Product held too long	Hold product for recommended time.
No shelf heat	Faulty shelf heater.	Dispatch Hatco authorized service agent
	Faulty control.	Dispatch Hatco authorized service agent
	Loose wiring on heater.	Dispatch Hatco authorized service agent
	Temperature setting turned "Off".	Increase shelf heat setting.
Main power switch on, but case is inoperative	Open circuit.	Check to see that cord is plugged in if plug is provided.
		Dispatch Hatco authorized service agent
		Dispatch Hatco authorized service agent
		Dispatch Hatco authorized service agent

continued on next page...

Trouble Shooting Guide Cont'd

HEATED SHELVES		
Symptom	Probable Cause	Corrective Action
Controller flashes a "PR1" error code	Shelf not installed or unplugged	If all shelves are installed, but LED controller light is flashing 'PR1' for that shelf, check the connection inside the case; insure it is plugged in securely. If the LED controller continues to flash, dispatch Hatco authorized service agent. <i>(When a heated shelf is removed/not plugged in, the controller will flash a "PR1" error code. If this a shelf was removed at the factory (requested by customer), a static cling label "NOT IN USE" should have been placed over the flashing controller.)</i>
Lights do not come on.	Ballast/light socket wiring.	Dispatch Hatco authorized service agent
	Ballast needs to be replaced.	Dispatch Hatco authorized service agent
	Lamp socket needs to be replaced.	Dispatch Hatco authorized service agent
	Lamp needs to be replaced.	See Maintenance Section of Installation and Operation Manual.
	Light Switch needs to be replaced.	Dispatch Hatco authorized service agent
	HHL display lamps do not come on:	Check fuses in the ballast / fuse slide-out tray.

8. Hatco Limited Warranty

1. PRODUCT WARRANTY

Hatco warrants the products that it manufactures (the "Products") to be free from defects in materials and workmanship, under normal use and service, for a period of one (1) year from the date of purchase when installed and maintained in accordance with Hatco's written instructions or 18 months from the date of shipment from Hatco. Buyer must establish the Product's purchase date by returning Hatco's Warranty Registration Card or by other means satisfactory to Hatco in its sole discretion.

Hatco warrants the following Product components to be free from defects in materials and workmanship from the date of purchase (subject to the foregoing conditions) for the period(s) of time and on the conditions listed below:

- a) **One (1) Year Parts and Labor PLUS One (1) Additional Year Parts-Only Warranty:**
 Conveyor Toaster Elements (metal sheathed)
 Drawer Warmer Elements (metal sheathed)
 Drawer Warmer Drawer Rollers and Slides
 Food Warmer Elements (metal sheathed)
 Display Warmer Elements (metal sheathed air heating)
 Holding Cabinet Elements (metal sheathed air heating)
 Built-In Heated Well Elements — HWB and HWBI Series (metal sheathed)
- b) **One (1) Year Parts and Labor PLUS Four (4) Years Parts-Only Warranty on pro-rated terms that Hatco will explain at Buyer's request:**
 3CS and FR Tanks
- c) **One (1) Year Parts and Labor PLUS Nine (9) Years Parts-Only Warranty on:**
 Electric Booster Heater Tanks
 Gas Booster Heater Tanks
- d) **Ninety (90) Day Parts-Only Warranty:**
 Replacement Parts

All Hatco products are assigned a ten digit serial number at the time of manufacture. This serial number is shown on the product specification label that is attached to the unit. **When contacting Hatco for assistance, it is very important and helpful that the serial number be provided.**

The last four digits of a Hatco serial number are the manufacturing date code:

Example = Serial number 9625060951 has a date code of "0951" which indicates the following:



In addition to the date code, a complete serial number provides a link to other specific unit information. **Please provide the unit serial number when contacting Hatco for assistance.**

THE FOREGOING WARRANTIES ARE EXCLUSIVE AND IN LIEU OF ANY OTHER WARRANTY, EXPRESSED OR IMPLIED, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OR PATENT OR OTHER INTELLECTUAL PROPERTY RIGHT INFRINGEMENT. Without limiting the generality of the foregoing, SUCH WARRANTIES DO NOT COVER: Coated incandescent light bulbs, fluorescent lights, heat lamp bulbs, coated halogen light bulbs, halogen heat lamp bulbs, glass components, and fuses; Product failure in booster tank, fin tube heat exchanger, or other water heating equipment caused by liming, sediment buildup, chemical attack, or freezing; or Product misuse, tampering or misapplication, improper installation, or application of improper voltage.

2. LIMITATION OF REMEDIES AND DAMAGES

Hatco's liability and Buyer's exclusive remedy hereunder will be limited solely, at Hatco's option, to repair or replacement using new or refurbished parts or Product by Hatco or a Hatco-authorized service agency (other than where Buyer is located outside of the United States, Canada, United Kingdom, or Australia, in which case Hatco's liability and Buyer's exclusive remedy hereunder will be limited solely to replacement of part under warranty) with respect to any claim made within the applicable warranty period referred to above. Hatco reserves the right to accept or reject any such claim in whole or in part. In the context of this Limited Warranty, "refurbished" means a part or Product that has been returned to its original specifications by Hatco or a Hatco-authorized service agency. Hatco will not accept the return of any Product without prior written approval from Hatco, and all such approved returns shall be made at Buyer's sole expense. HATCO WILL NOT BE LIABLE, UNDER ANY CIRCUMSTANCES, FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES, INCLUDING BUT NOT LIMITED TO LABOR COSTS OR LOST PROFITS RESULTING FROM THE USE OF OR INABILITY TO USE THE PRODUCTS OR FROM THE PRODUCTS BEING INCORPORATED IN OR BECOMING A COMPONENT OF ANY OTHER PRODUCT OR GOODS.



9. Hussmann Warranty



HUSSmann®

**To obtain warranty information
or other support, contact your
Hussmann representative.
Please include the model and
serial number of the product.**

Hussmann Corporation, Corporate Headquarters: Bridgeton, Missouri, U.S.A. 63044-2483 01 October 2012

10. Service Record

Last service date: By:

_____	_____
_____	_____
_____	_____
_____	_____
_____	_____
_____	_____
_____	_____

HUSSMANN®

Additional copies of this publication may be obtained by contacting:
Hussmann® Chino or going to our website

13770 Ramona Avenue • Chino, California 91710
(909) 628-8942 FAX
(909) 590-4910
(800) 395-9229

Hussmann Corporation
12999 St. Charles Rock Road
Bridgeton, MO 63044-2483
(800) 922-1919

www.hussmann.com

The *MODEL NAME* and *SERIAL NUMBER* is required in order to provide you with the correct parts and information for your particular unit.
They can be found on a small metal plate on the unit.
Please note them below for future reference.

MODEL: _____

SERIAL NUMBER: _____

HATCO SERIAL No: _____
