

HUSSMANN®/CHINO R3H, R3HTO, R3HA, R3 COMBO, R3H-HF HOT TOP W/SELF SERVICE HEATOR REFRIGERATOR	Installation & Operation Manual REV. 1123
--	--

HUSSMANN®

R3H, R3HTO, R3HA, R3Combo, R3H-HF

**HOT SERVICE/SELF
SERVICE/CASE WITH
SELF SERVICE FRONT**



R3, R3H, R3P, R3HA, R3H-HF

INSTALLATION & OPERATION GUIDE

1. General Instructions

HUSSMANN®/CHINO

A publication of HUSSMANN® Chino

13770 Ramona Avenue • Chino, California 91710

(909) 628-8942 FAX

(909) 590-4910

(800) 395-9229

www.hussmann.com

This Booklet Contains Information on:

R3H: Hot Service/Refrigerated Self-Service Case

R3HA/R3HATO: Circulating Hot Air Case

R3 Combo: any combination of Hot and/or Cold Service with Self Service Refrigerated Front

Shipping Damage

All equipment should be thoroughly examined for shipping damage before and during unloading.

This equipment has been carefully inspected at our factory and the carrier has assumed responsibility for safe arrival. If damaged, either apparent or concealed, claim must be made to the carrier.

Apparent Loss or Damage

If there is an *obvious loss or damage*, it must be noted on the freight bill or express receipt and signed by the carrier's agent; otherwise, carrier may refuse claim. The carrier will supply necessary claim forms.

Concealed Loss or Damage

When loss or damage *is not apparent until after equipment is uncrated*, a claim for concealed damage is made. Make request in writing to carrier for inspection within 15 days, and retain all packaging. The carrier will supply inspection report and required claim forms.

Shortages

Check your shipment for any possible shortages of material. If a shortage should exist and is found to be the responsibility of Hussmann Chino, *notify Hussmann Chino*. If such a shortage involves the carrier, *notify the carrier immediately*, and request an inspection. Hussmann Chino will acknowledge shortages within ten days from receipt of equipment.

Hussmann Chino Product Control






The serial number and shipping date of all equipment has been recorded in Hussmann's files for warranty and replacement part purposes. All correspondence pertaining to warranty or parts ordering must include the serial number of each piece of equipment involved, in order to provide the customer with the correct parts.

Keep this booklet with the case at all times for future reference.

2. Table of Contents

1. General Instructions.....	2
2. Table of Contents	3
3. Cut and Plan Views	4
4. Installation.....	5
5. Plumbing	10
6. Refrigeration	10
7. Electrical.....	12
8. User Information.....	14
9. Specification Sheets.....	22
10. Wiring Diagram Index.....	25
11. Wiring Diagrams	26
12. Troubleshooting Guide	78
13. Appendices	80

3. Cut and Plan Views

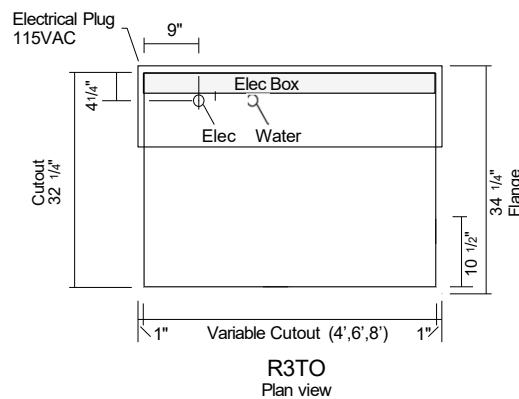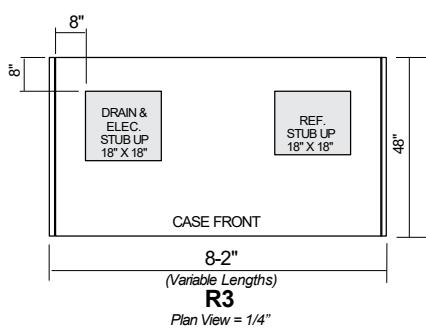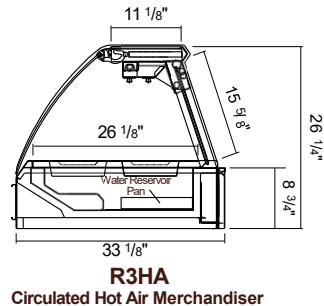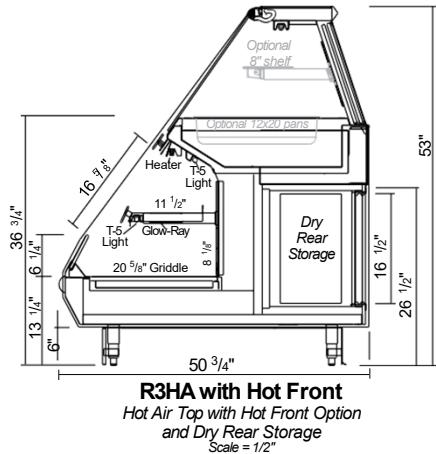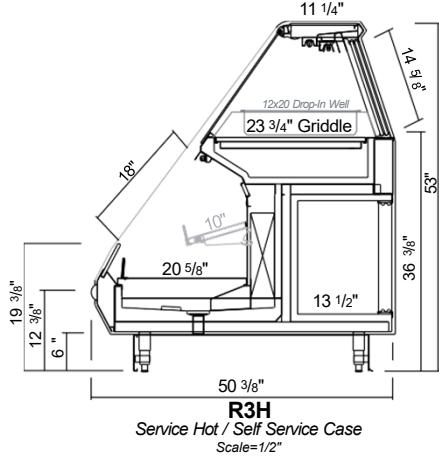

4. Installation

Location

The refrigerated merchandisers have been designed for use only in air conditioned stores where temperature and humidity are maintained at or below 75°F and 55% relative humidity. DO NOT allow air conditioning, electric fans, open doors, ovens, open doors or windows (etc.) to create air currents around the merchandiser, as this will impair its correct operation.

Product temperature should always be maintained at a constant and proper temperature. This means that from the time the product is received, through storage, preparation and display, the temperature of the product must be controlled to maximize life of the product.

Uncrating the Stand

Place the fixture as close to its permanent position as possible. Remove the top of the crate. Detach the walls from each other and remove from the skid. Unbolt the case from the skid. The fixture can now be lifted off the crate skid. **Lift only at base of stand!**

Exterior Loading

These models have **not** been structurally designed to support excessive external loading. **Do not walk on their tops;** This could cause serious personal injury and damage to the fixture.



Glass Adjustment

During shipment, the lubricant inside the cylinders may have settled. This settling may cause excessive or uneven tension on the glass - to the point of breakage. To avoid any damage, please follow these three easy steps:

1. Slowly raise and lower each glass section 6 times to a height of 6 inches.
2. Increase the height to 12 inches, and raise and lower the glass 6 more times.
3. Finally raise the glass to its full extension, and lower.

These steps should release any settled lubricant within the cylinders and prevent any stress on the front glass.

Setting and Joining

The sectional construction of these models enable them to be joined in line to give the effect of one continuous display. A joint trim kit is supplied with each joint.

Leveling

IMPORTANT! IT IS IMPERATIVE THAT CASES BE LEVELED FROM FRONT TO BACK AND SIDE TO SIDE PRIOR TO JOINING. A LEVEL CASE IS NECESSARY TO INSURE PROPER OPERATION, WATER DRAINAGE, PLEXIGLASS ALIGNMENT.

- NOTE:**
- A. To avoid removing concrete flooring, begin lineup leveling from the highest point of the store floor.
 - B. When wedges are involved in a lineup, set them first.

Joining R3H, R3HA, R3 Combo's

All cases were leveled and joined prior to shipment to insure the closest possible fit when cases are joined in the field. When joining, use a carpenters level and shim legs accordingly. Case must be raised correctly, under legs where support is best, to prevent damage to case.

1. Check level of floor where cases are to be set. Determine the highest point of the floor; cases will be set off this point.
2. Set first case, and adjust legs over the highest part of the floor so that case is level. Prevent damage - case must be raised under leg or by use of 2x6 or 2x4 leg brace. Remove side and back leg braces after case is set.
3. Set second case as close as possible to the first case and level case **to the first** using the instructions in step one.
4. Apply masking tape 1/8" in from end of case on inside and outside rear mullion on both cases to be joined.
5. Apply liberal bead of case joint sealant (butyl) to (dotted area shown in figure) of first case. Apply heavy amount to cover entire shaded area.

DO NOT USE PERMAGUM!



6. Slide second case up to first case snugly. Then level second case to the first case so glass front, bumper and top are flush.
7. To compress silicone at joint, use two Jurgenson wood clamps. Make sure case is level from front to back and side to side on inside bulkheads at joint.

Installation (Cont'd)

8. Attach sections together via a 2 bolts located in the base of the case. Secure the overhead structure by bolting the bracket, located inside behind lights.
9. Apply bead of silicone to top of bulkheads and slip on stainless steel bulkhead cap. Also apply silicone to seam between overhead light tubes.
10. Use finger to smooth silicone as thin as possible at masking tape on inside and outside of rear mullion (apply additional silicone if necessary). Remove tape applied on line #3.

Corner Wedges

Corner wedges are attached via front and rear camlocks. Use a 7mm allen wrench to turn the locks. Do not overtighten! Join the top by using a joint bracket (included in joint kit) with 3/8" bolts.

Scale Stand Installation Instructions



1.- Set Scale Stand to desire location



2.- Drill holes and screw in place
(with screws provided – Hex Tek S/S
10-16 X 1/2")



Note: Use hole pattern

Joint Trim

After cases have been leveled and joined, and refrigeration, electrical, and wasted piping work completed, install the splashguards. Fasten along the top edge, or center, with #10 X 3/3" sheet metal screws.

DO NOT SEAL JOINT TRIM TO FLOOR!

Installing R3HTO, R3HATO

All cases were tested at a level state before shipping. When joining, use a carpenters level and shim enclosing or supporting cabinet accordingly.

1. Make sure the cabinet you are installing the R3HATO on is level.
2. Wire unit according to local codes.

Installation (Cont'd)

Wrapping Boards Installation Instructions



Step 1: Measure 6 inches from wrapping board end.

Note: Line up 6 inch mark with 10 inch mark.




Step 2: Measure 10 inches from top of the case.




Step 3: Use bracket center hole to align with cross mark.

Note: Use pencil/marker to mark hole pattern.

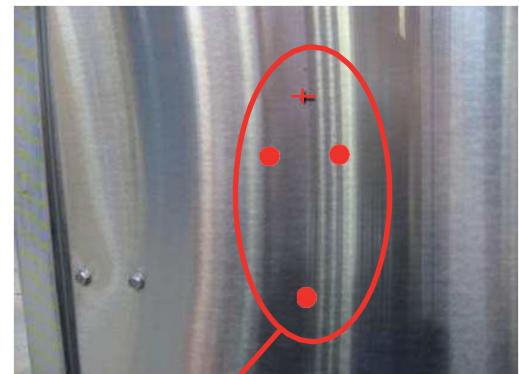


Step 4: Drill holes (7/32")

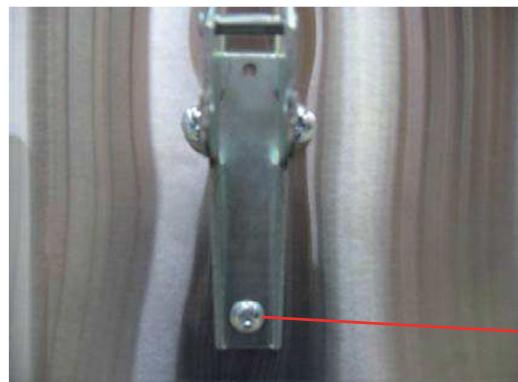

Step 5: Install bracket with screws (provided)

Note: Repeat Steps 1 Thru 5 for Second Bracket Installation.

Installation (Cont'd)

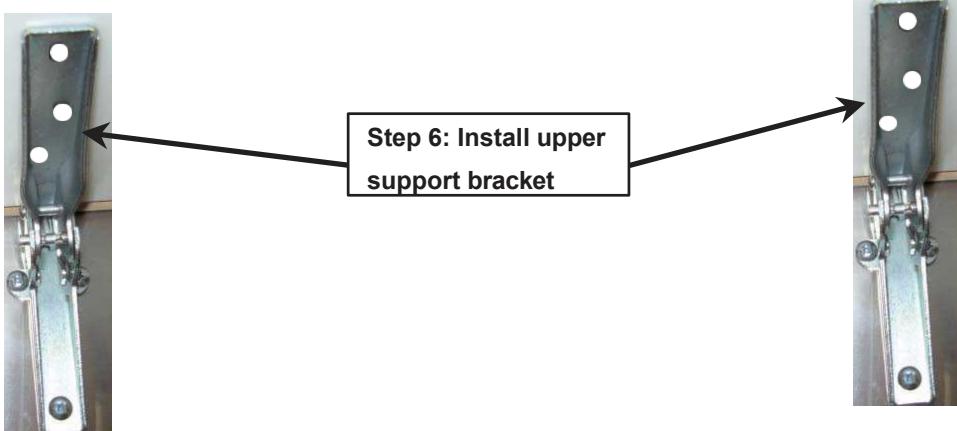

Step 7: Mount wrap board on top of bracket using a $\frac{1}{4}$ " spacer to have a gap between rear wall and board.

Step 8: Screw bracket into wrap board
(screws provided -#8 X 1 $\frac{1}{4}$ ")



Installation Complete

Installation (Cont'd)

Bumper Installation Instructions




Step 1: Make sure the aluminum channel and end caps are installed.



Step 2: Use silicone lubricant to help the bumper slide into the channel.



Step 3: Starting on one end: while inserting the bumper, push it up against the end cap to prevent the bumper from shrinking after installation (when it gets cold).

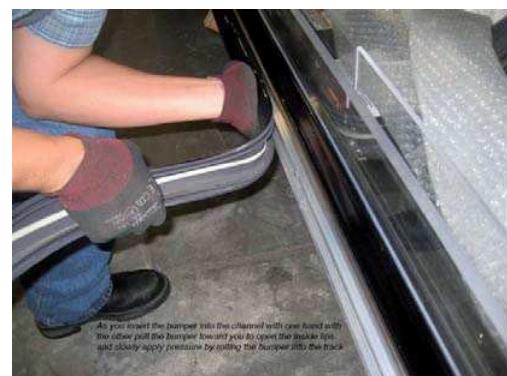

Step 4: As you insert the bumper into the channel with one hand, pull the bumper toward you with the other to open the inside lips. Slowly apply pressure by rolling the bumper into the track.

5. Plumbing

Waste Outlet and P-TRAP

The waste outlet is located off the center of the case on one side allowing drip piping to be run lengthwise under the fixture. There are 2 drains in each fixture that can be easily located.

P-traps must be installed at the base of all refrigerated cases. The 1 ½" P-TRAP and threaded adapter must be installed to prevent air leakage and insect entrance into the fixture.

Installing Condensate Drain

Poorly or improperly installed condensate drains can seriously interfere with the operation of this refrigerator, and result in costly maintenance and product losses. Please follow the recommendations listed below when installing condensate drains to insure a proper installation:

1. Never use pipe for condensate drains smaller than the nominal diameter of the pipe or P-TRAP supplied with the case.
 2. When connecting condensate drains, the P-TRAP must be used as part of the condensate drain to prevent air leakage or insect entrance. Store plumbing system floor drains should be at least 14" off the center of the case to allow use of the P-TRAP pipe section. Never use two water seals in series in any one line. Double P-TRAPS in series will cause a lock and prevent draining.
 3. Always provide as much down hill slope ("fall") as possible; 1/8" per foot is the preferred minimum.
- PVC pipe, when used, must be supported to

maintain the 1/8" pitch and to prevent warping.

4. Avoid long runs of condensate drains. Long runs make it impossible to provide the "fall" necessary for good drainage.
5. Provide a suitable air break between the flood rim of the floor drain and outlet of condensate drain. 1" is ideal.
6. Prevent condensate drains from freezing:
 - a. Do not install condensate drains in contact with non-insulated suction lines. Suction lines should be insulated with a non absorbent insulation material such as Armstrong's Armaflex.
 - b. Where condensate drains are located in dead air spaces (between refrigerators or between a refrigerator and a wall), provide means to prevent freezing. The water seal should be insulated to prevent condensation.

Water Supply

Tap water contains more minerals and will contribute to the mineral residue and buildup which may impair the case's performance and create undesirable cleaning issues. It is recommended that a 5 micro particle filter be used to filter the incoming water supply. Be sure to flush the water line before hooking it up to the filter to prevent blocking the filter.

6. Refrigeration

Refrigerant Type

Check the serial plate on the case for information.

Piping

The refrigerant line outlets are located under the case. Locate first the electrical box, the outlets are then on the same side of the case but at the opposite end. Insulate suction lines to prevent condensation drippage.

Refrigeration Lines

Liquid	Suction
3/8" O.D.	5/8" O.D.

NOTE: The standard coil is piped at 5/8" (suction); however, the store tie-in may vary depending on the number of coils and the draw the case has. Depending on the case setup, the connecting point in the store may be 5/8", 7/8", or 1 1/8". Refer to the particular case you are hooking up.

Refrigerant lines should be sized as shown on the refrigeration legend furnished by the store.

Oil traps must be installed at the base of all suction line vertical risers on refrigerated cases.

Pressure drop can rob the system of capacity. To keep the pressure drop to a minimum, keep refrigerant line run as short as possible, using the minimum number of elbows. Where elbows are required, use long radius elbows only.

Control Settings

See R3H, R3HA/R3HATO, R3 Combo technical data sheet for the appropriate settings for your merchandiser. Maintain these parameters to achieve near constant product temperatures. Product temperature should be measured first thing in the morning, after having been refrigerated overnight. Defrost times should be as follows: OFF CYCLE - Defrost times should be as directed in the R3H, R3HA/R3HATO, R3 Combo technical data sheet. The number of defrosts per day and the duration of the defrost cycle may be adjusted to meet conditions present at your location.

Refrigeration (Cont'd)

Access to TX Valves and Drain Lines

Mechanical - Remove product from end of case. Remove product racks. Remove refrigeration and drain access panels (labeled). TX valve (mechanical only) and drain are located under each access panel at end of the case.

Electronic - The Electronic Expansion valve master and slave cylinder(s) are located within the electrical access panel(s).

Electronic Expansion Valve (Optional)

A wide variety of electronic expansion valves and case controllers can be utilized. Please refer to EEV and controller manufacturers information sheet. Sensors for electronic expansion valves will be installed on the coil inlet, coil outlet, and in the discharge air. (Some supermarkets require a 4th sensor in the return air). Case controllers will be located in the electrical raceway or under the case. The front Self Service Evaporator has an EPR valve installed to maintain a constant discharge temperature. It is located in the front at the right side of the case under the fan plenum near the TX valve.

Thermostatic Expansion Valve Location

This device is located on the same side as the refrigeration stub. A Sporlan balanced port expansion valve model is furnished as standard equipment, unless otherwise specified by customer.

Expansion Valve Adjustment

Expansion valves must be adjusted to fully feed the evaporator. Before attempting any adjustments, make

sure the evaporator is either clear or very lightly covered with frost, and that the fixture is within 10°F of its expected operating temperature.

Measuring the Operating Superheat

1. Determine the suction pressure with an accurate pressure gauge at the evaporator outlet.
2. From a refrigerant pressure temperature chart, determine the saturation temperature at the observed suction pressure.
3. Measure the temperature of the suction gas at the thermostatic remote bulb location.
4. Subtract the saturation temperature obtained in step No. 2 from the temperature measured in step No. 3. The difference is superheat.
5. Set the superheat for 5°F - 7°F.

Evaporator Pressure Regulator

An Evaporator Pressure Regulator is installed in the front of the self service section to maintain a constant discharge temperature. It is located at the front right side of the case, under the fan plenum near the TX Valve.


Service Case Temperature Control

Temperature control in the upper section of the R3 with the Service Option is done by means of a thermostat and suction solenoid valve. This controls both temperature and humidity.


T-STAT Location

T-STATS are located within the electrical raceway. Refer to diagram below.

WARNING!
Do NOT apply thread sealer to ABS P-Trap.

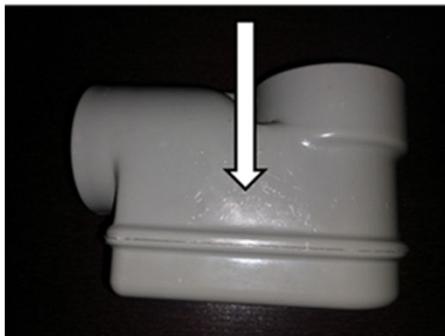

7. Electrical

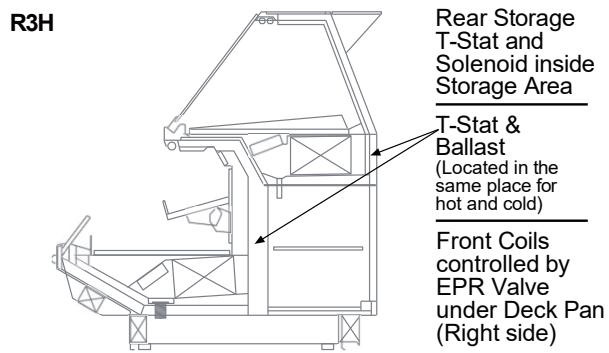

Wiring Color Code

STANDARD CASE WIRE COLOR CODE CODIGO DE COLORES DE LOS ALAMBRES PARA LAS VITRINAS ESTANDAR CODE COULEUR POUR FILS DE BOITIER NORMALISE		
COLOR DESCRIPTION	DESCRIPCION	DESCRIPTION
GROUND	TIERRA MASA	MASSE
ANTI-SWEAT	ANTICONDENSACION	ANTI-SUINETEMENT
LIGHTS	LUCES	ECLAIRAGE
RECEPTACLES	ENCHUFES	PRISE DE COURANT
T-STAT/SOLENOID 230VAC	TERMOSTATO/SOLENOIDE (230VAC)	SOUPAPE A SOLENOID (230 VAC)
T-STAT/SOLENOID 115VAC	TERMOSTATO/SOLENOIDE (115VAC)	SOUPAPE A SOLENOID (115 VAC)
T-STAT/SOLENOID 24VAC	TERMOSTATO/SOLENOIDE (24VAC)	SOUPAPE A SOLENOID (24 VAC)
FAN MOTORS	VENTILADORES	VENTILATEUR
BLUE CONDENSING UNIT	UNIDAD DE CONDENSACION	UNITE DE CONDENSATION

USE COPPER CONDUCTORS ONLY
UTILISEZ LES CONDUCTEURS DE CUIVRE SEULEMENT
UTILICE LOS CONDUCTORES DE COBRE SOLAMENTE
430-01-0338 R101003

Hot

L1	BLACK
L2	RED
L3	BLUE
NEUTRAL	WHITE

CASE MUST BE GROUNDED

NOTE: Refer to label affixed to case to determine the actual configuration as checked in the "TYPE INSTALLED" boxes.

Electrical Circuit Identification

Standard lighting for all models will be full length fluorescent lamps located within the case at the top.

The switch controlling the lights, the plug provided for digital scale, and the thermometer are located at the rear of the case mullion.

The receptacle that is provided on the exterior back of these models is intended for computerized scales with a five amp maximum load, not for large motors or other high wattage appliances. It should be wired to a dedicated circuit.

Electrical Service Receptacles (When Applicable)

The receptacles located on the exterior of the merchandiser are intended for scales and lighted displays. They are not intended nor suitable for large motors or other external appliances.



DANGER

BEFORE SERVICING
ALWAYS DISCONNECT ELECTRICAL
POWER AT THE MAIN DISCONNECT
WHEN SERVICING OR REPLACING ANY
ELECTRICAL COMPONENT.

This includes (but not limited to) Fans, Heaters
Thermostats, and Lights.

Field Wiring and Serial Plate Amperage

Field Wiring must be sized for component amperes printed on the serial plate. Actual ampere draw may be less than specified. Field wiring from the refrigeration control panel to the merchandisers is required for refrigeration thermostats. Case amperes are listed on the wiring diagram, but always check the serial plate.

Ballast Location

Ballasts are located within the access panel that runs the length of the rear of the case. Refer to diagram on page 14.

Electrical (Cont'd)



CAUTION

Fluorescent Lamps contain mercury vapor. Mercury exposure at high levels can harm the brain, heart, kidneys, lungs and immune system of people of all ages. Do not break or puncture fluorescent lamps. Dispose of, or store, all fluorescent lamps in accordance with Federal (40 CFR 273), State and local hazardous waste requirements. Refer to <http://www.epa.gov/mercury/about.htm>

Fluorescent Lamp Disposal: The United States Environmental Protection Agency has information regarding environmentally-safe fluorescent lamp waste management programs.

On the Net: EPA Website:

[http://www.epa.gov/osw/hazard/wastetypes/
universal/lamps/recycle.htm](http://www.epa.gov/osw/hazard/wastetypes/universal/lamps/recycle.htm)

8. User Information

Stocking Refrigerated Sections

Improper temperature and lighting will cause serious product loss. Discoloration, dehydration and spoilage can be controlled with proper use of the equipment and handling of product. Product temperature should always be maintained at a constant and proper temperature. This means that from the time the product is received, through storage, preparation and display, the temperature of the product must be controlled to maximize life of the product. Hussmann cases were not designed to "heat up" or "cool down" product - but rather to maintain an item's proper temperature for maximum shelf life. To achieve the protection required always:

1. Minimize processing time to avoid damaging temperature rise to the product. Product should be at proper temperature.
2. Keep the air in and around the case area free of foreign gasses and fumes or food will rapidly deteriorate.
3. Maintain the display merchandisers temperature controls as outlined in the refrigerator section of this manual.
4. Do not place any product into these refrigerators until all controls have been adjusted and they are operating at the proper temperature. Allow merchandiser to operate a minimum of 6 hours before stocking with any product.
5. When stocking, never allow the product to extend beyond the recommended load limit. **Air discharge and return air flow must be unobstructed at all times to provide proper refrigeration.**
6. Keep the service doors closed (when applicable). Refrigeration performance will be seriously affected if left open for a prolonged period of time.
7. Avoid the use of supplemental flood or spot lighting. Display light intensity has been designed for maximum visibility and product life at the factory. The use of higher output fluorescent lamps (H.O. and V.H.O.), will shorten the shelf life of the product.

Food Handling and Hot Food Equipment

These hot tables are for short-term holding and display of precooked hot foods. They are not intended to cool or reheat food. The temperature of the food should be approximately 155°F per NSF when first put into the hot table. Pans need to be Pre-heated before placed in. These hot tables are best suited when used in a cafeteria type application where the food is held and served rapidly, within a few hours. Any attempt to use the hot table to display large amounts of food for long periods of time will result in dehydrated, overcooked and unsafe food. The quality of food will progressively worsen as the length of

time increases.

The deterioration of product quality is a function of time and temperature. All products are affected even though in a gravy or other liquid. They may appear to withstand the temperature better than "dry" foods such as fried chicken but this is not necessarily true. ALL foods will continue to be affected by prolonged exposure to elevated temperatures.

The following guidelines are provided only as a general guide for the use of this equipment. The local health agency for your area can provide specific temperature requirements.

Critical attention must be given to the heat controls for these hot tables. Both the upper and lower heat controls must be adjusted to achieve proper food temperatures. Hot foods should be held at a minimum product temperature of at least 135° F (57° C) according to 2009 FDA Food Code. However, increasing the temperature too high will also cause the food to overcook, dry out, lose its flavor, texture and color. Food held for prolonged periods at high temperatures will also lose some of their nutritional value. Different foods will require different control settings. The type of food, the quantities of food and length of time that it is to remain in the hot table must be considered when establishing control settings. Therefore, it must be the user's responsibility to establish the correct control settings to maintain the food at the safest, tastiest and most saleable condition.

Food temperatures can be accurately determined only through the use of food thermometers!

Important Operation Tips:

- Preheat case 30 minutes before loading product using higher settings.
- Never place food directly into warmer. Always use an inset pan.
- Never pour water into a dry preheated warmer. This may damage the unit. Always pour water into warmer BEFORE preheating. Always use water in case wells, as it provides even heat and humidity.
- Too much water or too much heat will cause excessive condensation on the front glass, decreasing visibility.
- Make sure all pans are in the well units no matter the configuration.
- **Using thermometer**, check product before loading in case (150°-160°F).
- Always use warmer in wet operation when warming thick food items.
- Stir thick foods such as chili, fudge and chowders often to keep foods uniformly heated and prevent

User Information (Cont'd)

scorching.

- At start, set wells to "7". After loading, recheck temperature every 1/2 hour to see that unit is operating properly. Adjust the thermostat (a higher number for hotter and a lower number for cooler) to maintain product temperature of 135° F (57° C) minimum. The setting will depend on the type of product being displayed and how much there is in the well. Be sure to test product temperature with a thermometer frequently for good product maintenance.
- Food must always be placed into an inset pan over the well, never directly into the well. Using rock inserts may adversely impact product temperature.
- Food should not be stacked above the top of the pan. Food above the top of the pan will dry out rapidly.
- Food juice or gravy should be stirred frequently and any meats should be basted with the gravy. Stir and rotate foods as needed. Wipe up spills immediately for aesthetic appeal, and easier cleaning later.
- Food should be rotated periodically from the bottom to top.
- If practical, the food should be covered during slack sale periods to reduce dehydration.
- At end of the day, remove product and let case cool. Then clean with soap and water (use oven cleaner on the difficult spots). Polish and clean glass with a good glass cleaner.

Cleaning Glass and Mirrors

Only use a soft cloth and mild glass for cleaning any glass or mirrored components. Be sure to rinse and/or dry completely.

Never use hot water on cold glass surfaces! It may shatter and cause serious injury! Allow glass surfaces to warm first.

Replacing Fluorescent Lamps

Fluorescent lamps are furnished with a shatterproof protective coating. The same type of lamp with protective coating must be used if replaced.

HUSSMANN®

ENCAPSULITE

SHATTERPROOF COATING - SA 10645

- Complies with FDA USDA & OSHA Regulations

for replacement call:
1-800-395-9229



→ Turn switch off then on after replacing bulb ←

Plexiglass and Acrylic Care

Improper cleaning not only accelerates the cleaning cycle but also degrades the quality of this surface. Normal daily buffing motions can generate static cling attracting dust to the surface. Incorrect cleaning agents or cleaning cloths can cause micro scratching of the surface, causing the plastic to haze over time.

Cleaning

Hussmann recommends using a clean damp chamois, or a paper towel marketed as dust and abrasive free with **210® Plastic Cleaner and Polish** available by calling Sumner Labs at **1-800-542-8656**. Hard, rough cloths or paper towels will scratch the acrylic and should not be used.

Antistatic Coatings

The **210®** has proven to be very effective in not only cleaning and polishing the Plexiglass surface, but also providing anti-static and anti-fog capabilities. This product also seals pores and provides a protective coating.

CAUTION

CLEANING PRECAUTIONS

When cleaning:

- Do not use high pressure water hoses
- Do not introduce water faster than waste outlet can drain
- NEVER INTRODUCE WATER ON SELF CONTAINED UNIT WITH AN EVAPORATOR PAN
- NEVER USE A CLEANING OR SANITIZING SOLUTION THAT HAS AN OIL BASE (these will dissolve the butyl sealants) or an AMMONIA BASE (this will corrode the copper components of the case)
- TO PRESERVE THE ATTRACTIVE FINISH:
- DO USE WATER AND A MILD DETERGENT FOR THE EXTERIOR ONLY
- DO NOT USE A CHLORANIZED CLAENER ON ANY SURFACE
- DO NOT USE ABRASIVES OR STEEL WOOL SCOURING PADS (these will mar the finish)

Evaporator Fans

The evaporator fans are located at the center front of these *merchandisers directly beneath the display pans*. Should fans or blades need servicing, always replace fan blades with the raised embossed side of the blade *TOWARD THE MOTOR*.

Copper Coils

The copper coils used in Hussmann merchandisers may be repaired in the field. Materials are available from local refrigeration wholesalers.

Hussmann recommends using #15 Sil-Fos for repairs.

Tips and Troubleshooting

Before calling for service, check the following:


1. Check electrical power supply to the equipment for connection.
2. Check fixture loading. Overstocking case will affect

User Information (Cont'd)

- its proper operation.
3. If frost is collecting on fixture and/or product, check that no outside doors or windows are open allowing moisture to enter store. These merchandisers were designed for use in stores where temperature & humidity does not exceed 75° F and 55% H.

Controls

The controls are located at the rear of the case.

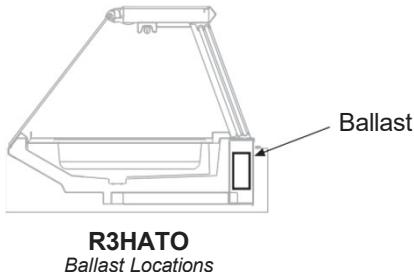

Stainless Steel Cleaning and Care

There are three basic things, which can break down your stainless steel's passivity layer and allow corrosion.

1. Mechanical Abrasion

Mechanical Abrasion means those things that will scratch the steel's surface. Steel Pads, wire Brushes, and Scrapers are prime examples.

2. Water

Water comes out of our tap in varying degrees of hardness. Depending on what part of the country you live in, you may have hard or soft water. Hard water may leave spots. Also, when heated, hard water leaves deposits behind that if left to sit, will break down the passive layer and rust your stainless steel. Other deposits from food preparation and service must be properly removed.

3. Chlorides

Chlorides are found nearly everywhere. They are in water, food and table salt. One of the worst perpetrators of chlorides can come from household and industrial cleaners.

Don't Despair! Here are a few steps that can help prevent stainless steel rust.

1. Use the Proper Tools

When cleaning your stainless steel products, take care to use non-abrasive tools. Soft Clothes and plastic scouring pads will NOT harm the steel's passive layer. Stainless steel pads can also be used but the scrubbing motion must be in the same direction of the manufacturer's polishing marks.

2. Clean With the Polish Lines

Some stainless steels come with visible polishing lines or "grain". When visible lines are present, you should ALWAYS scrub in a motion that is parallel to them. When the grain cannot be seen, play it safe

and use a soft cloth or plastic scouring pad.

3. Use Alkaline or Non-chloride Containing Cleaners

While many traditional cleaners are loaded with chlorides, the industry is providing an ever increasing choice of non-chloride cleaners. If you are not sure of your cleaner's chloride content contact your cleaner supplier. If they tell you that your present cleaner contains chlorides, ask for an alternative. Also, avoid cleaners containing quaternary salts as they also can attack stainless steel & cause pitting and rusting.

4. Treat your Water

Though this is not always practical, softening hard water can do much to reduce deposits. There are certain filters that can be installed to remove distasteful and corrosive elements. If you are not sure of the proper water treatment, call a treatment specialist.

5. Keep your Food Equipment Clean

Use alkaline or non-chlorinated cleaners at recommended strength. Clean frequently to avoid build-up of hard, stubborn stains. If you boil water in your stainless steel equipment, remember the single most likely cause of damage is chlorides in the water. Heating cleaners that contain chlorides has a similar effect.

6. RINSE, RINSE, RINSE

If chlorinated cleaners are used you must rinse, rinse, rinse and wipe dry immediately. The sooner you wipe off standing water, especially when it contains cleaning agents, the better. After wiping the equipment down, allow it to air dry for the oxygen helps maintain the stainless steel's passivity film.


7. Never Use Hydrochloric Acid (Muriatic Acid) on Stainless Steel.

8. Regularly Restore/Passivate Stainless Steel.

User Information (Cont'd)

Hot Well/Soup Well Operating Instructions

Each hot unit has an individual heater with a separate control. These are thermostatically controlled with an indicator light showing when the heater has cycled on and is heating. The light above each control knob indicates when the well heater is heating.

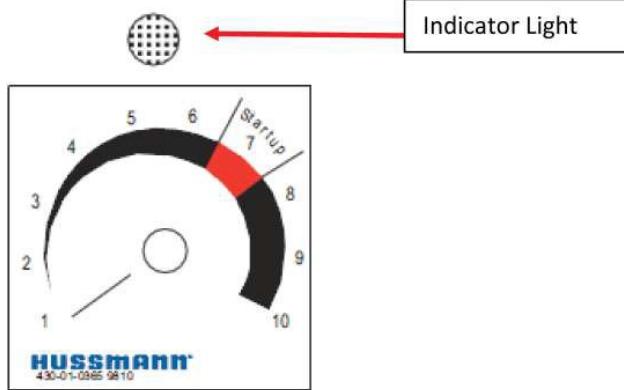

These units are for short-term holding and display of precooked hot foods. They are not intended to cool or reheat food. The temperature of the food entering the display should be approximately $155^{\circ}\text{F} \pm 5^{\circ}$ when first inserted.

Any attempt to use the hot unit to display large amounts of food or soup for long periods of time will result in dehydrated, overcooked and unsafe food. The quality of the food will

progressively worsen as the length of time increases. The deterioration of product quality is a function of time and temperature. All products are affected even though in gravy or other liquid. They may appear to withstand the temperature better than "dry" foods such as fried chicken but this is not necessarily true. All foods will continue to be affected by prolonged exposure to elevated temperatures.


The following guidelines are provided only as a general guide for the use of this equipment. The local health agency for your area can provide specific temperature requirements.

Critical attention must be given to the heat controls for these hot tables/soup bars. Both the upper and lower heat controls (soup only require lower control) must be adjusted to achieve proper food temperatures. Hot foods should be held at a constant temperature of at least 140°F (60°C) (minimum FDA requirements to prevent spoiling). However, increasing the temperature too high will also cause the food to overcook, dry out, lose its flavor, texture and color. Food held for prolonged periods at high temperatures will also lose some of their nutritional value.

Different foods require different control settings. The type of food, the quantities of food and length of time that it is to remain in the hot table must be considered when establishing control settings. Therefore, it must be the user's responsibility to establish the correct control settings to maintain the food at the safest, tastiest and saleable condition.

User Information (Cont'd)

Startup:

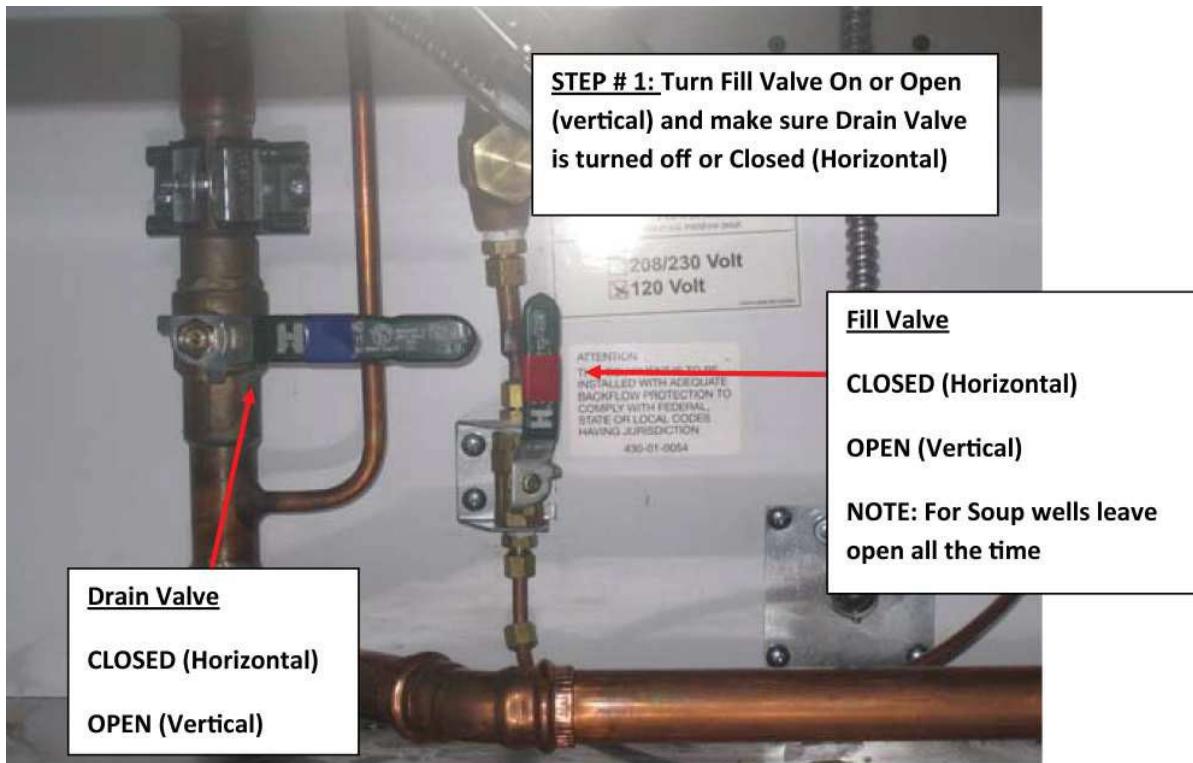


To fill the well:

- Turn the fill valve to open position.
- Close the drain valve.

To drain the well:

- Turn the fill valve to the closed position.
- Open the drain valve.

User Information (Cont'd)

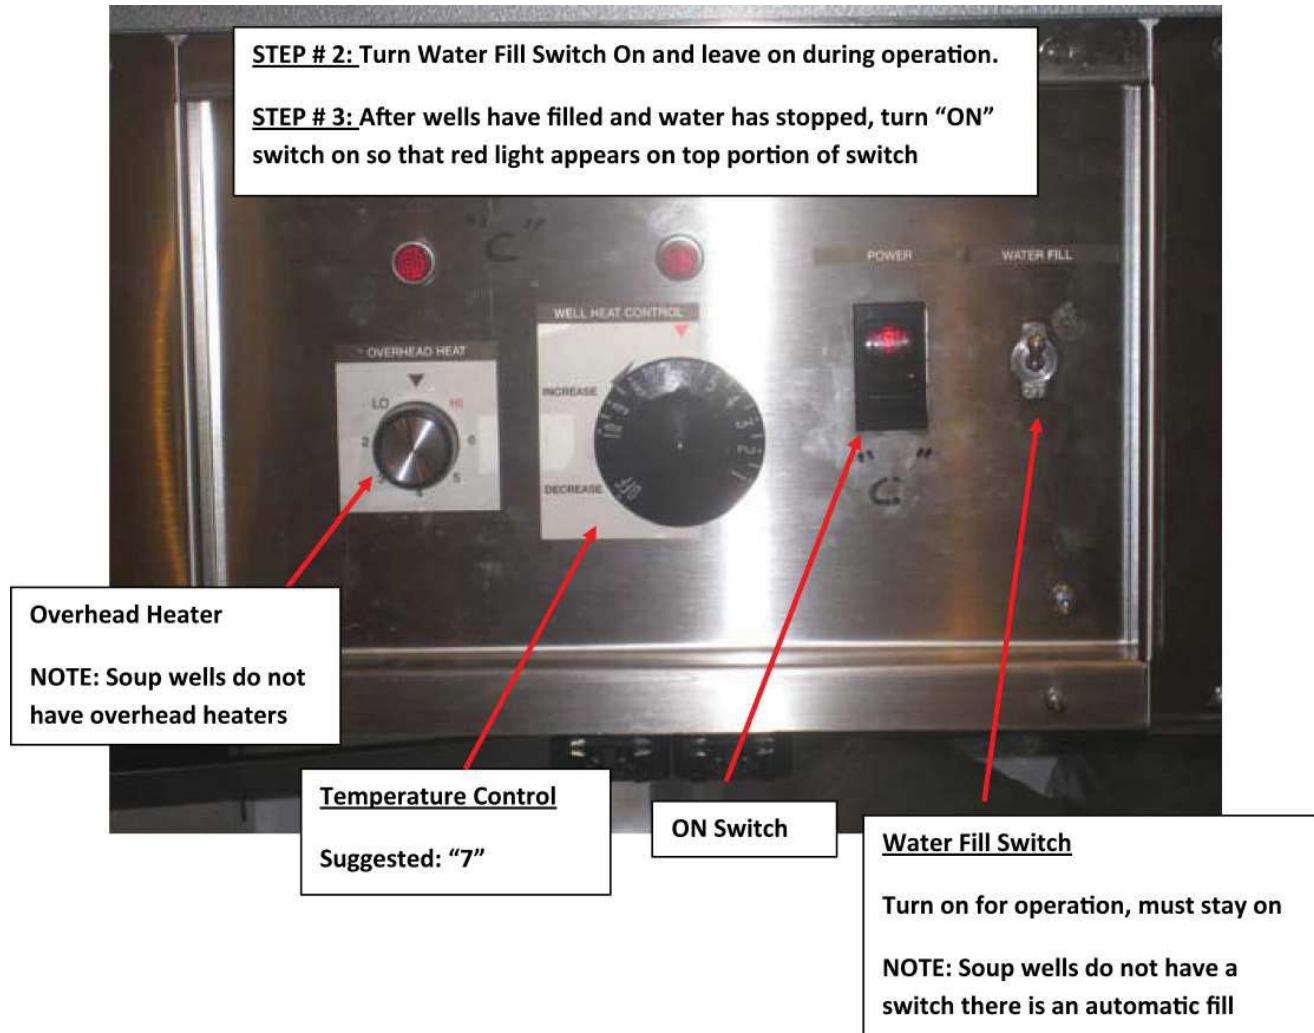

Operation:

- Turn the water fill switch on.
- After wells have filled turn "ON" switch on.
- Set temperature control to '7" setting. Adjust as necessary.
- Adjust overhead heater as necessary.

Shutting down:

- Turn "ON" switch off.
- Turn water fill switch off.
- Close fill valve.
- Open drain valve.
- Once the water is drained, close the drain valve.

User Information (Cont'd)

Overhead Heating System

Overhead heaters and fluorescent lights are located above each well to provide both top heat and illumination.

To obtain the proper food temperatures, the well heater and overhead heater must be adjusted. Maximum limits should be avoided to prevent overcooking or drying out of food.

Note: Soup Wells do not have overhead heaters.

Food temperatures can be accurately determined only through the use of food thermometers!

Important Food Handling Tips:

1. Preheat case 30 minutes before loading product.
2. Never place food directly into the warmer. Always use an inset.
3. Food must be displayed in a single layer, in contact with the heat source at all times.
4. Using thermometer, check product before loading in case (150°-160°).
5. At start, set control to "7". After loading, recheck temperature every ½ hour to see that unit is operating properly. Adjust the temperature to maintain a product temperature of 140°F (60°C)

and above. The setting will depend on the type and quantity of product being displayed. Be sure to test product temperature with a thermometer frequently for good product maintenance.

6. Food should be rotated periodically.
7. At the end of the day, remove product and let case cool. Then clean with soap and water.




CAUTION

Do not run hot wells without any water!

User Information (Cont'd)

R3HA, R3HATO Hot Circulation Air Startup and Operation

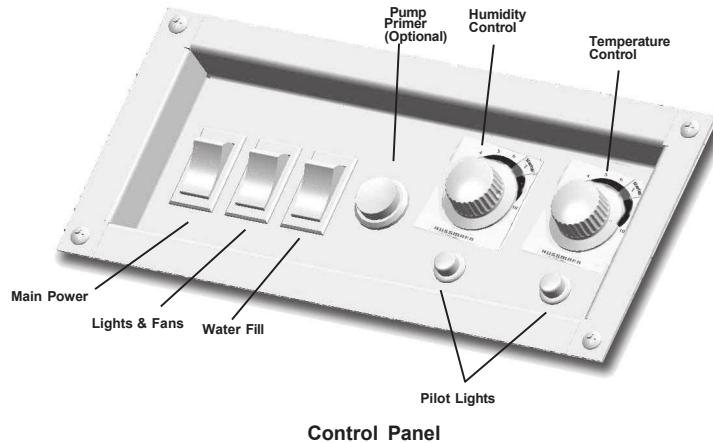

Startup:

1. Turn the **Main Power Switch ON**. (This will enable all other switches in the case).
2. Turn **Lights & Fans Switch ON**.
3. Turn **Water Fill System ON**. (For 100% DRY Heat leave water system OFF).
4. Press "**PUMP PRIME**" for **approximately 10 seconds** (optional) to self-prime the humidity system. The water reservoir (pan) INSIDE the case should **ALWAYS** be half full.
5. Turn **Humidity Control knob to # 7, "STARTUP"**, for maximum humidity conditions - over 7 may cause condensation on the glass. This control will continually pump water into the water reservoir (pan) INSIDE the case
7. Turn **Temperature Control knob to # 7, "STARTUP"**, for initial temperature settings. (This will guarantee over 140°F safe FDA temperatures).

Temperature Adjustment:

Adjust temperature up or down as required to maintain safe FDA Hot Food Temperatures. After adjustment, allow adequate time for change to take place. Allow 30 minutes for product to respond. Although a discharge air temperature of approximately 170°F will guarantee safe food temperatures throughout the case, use a thermometer to check food temperature periodically according to FDA guidelines.

Humidity Adjustment:

Adjust humidity up or down as desired for the appropriate food texture desired. More humidity for moist foods, less humidity or none for crispy foods.

Be patient, humidity adjustments to higher or lower levels are not immediate, as existing moisture (or water content) within the hot environment of the case rises or lowers at a slow pace.

9. Specification Sheets






SERVICE / SELF-SERVICE
HUSSMANN - R3H / CR3H (CHINO)

DOE 2017
Energy Efficiency
Compliant

Hussmann refrigerated merchandisers configured for sale
for use in the United States meet or surpass the requirements
of the DOE 2017 energy efficiency standards.

REVISION DATE 06/27/18

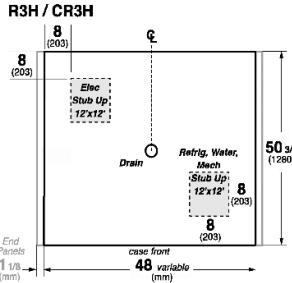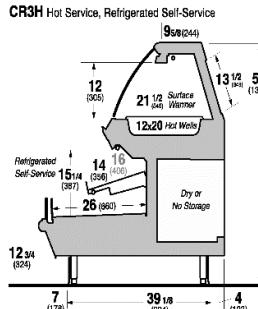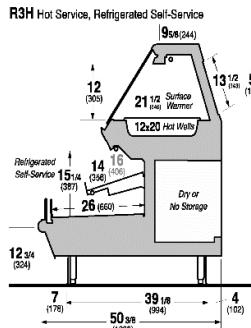

REFRIGERATION DATA:

CASE LENGTHS	CASE USAGE	CAPACITY FRONT ---(BTU/HRF/FT)		TEMPERATURE (°F)		VELOCITY FRONT (FT/MIN)	
		RATING CONDITION	NSF 7 AHRI 1200	EVAPORATOR NSF 7 AHRI 1200	DISCHARGE AIR FRONT (°F)		
4' 5' 6' 8' 10' 12'	DELI	590	530	20	24	29-31	175-200
REAR STORAGE	DELI	110	90	20	26	28-32	600-700

**FRONT DISCHARGE AIR MEASURED INSIDE AIR CURTAIN HONEYCOMB

***REFRIGERATION NOTES:

- 1) BTU'S INCLUDE CANOPY LIGHTS. ADD 10 BTUS/SHELF/FT FOR EACH SHELF (LIGHT)
- 2) AHRI 1200 RATING POINT FOR ENERGY CONSUMPTION COMPARISON ONLY
- 3) USE DEW POINT FOR HIGH GLIDE REFRIGERANTS. CARE SHOULD BE TAKEN TO USE THE DEW POINT IN P/T TABLES FOR MEASURING AND ADJUSTING SUPERHEAT. ADJUST EVAPORATOR PRESSURE AS NEEDED TO MAINTAIN THE DISCHARGE AIR TEMPERATURE SHOWN.
- 4) RATING CONDITION IS NSF TYPE I, 75°F/55% RH

LOCATION	REFRIGERATION DATA CONTINUED: ELEC. THERMOSTAT / AIR SENSOR SETTINGS		DEFRO ST TYPE	TIME (MIN)	DEFROST FREQ (#/DAY)	TERM. TEMP (°F) COIL ONLY	DRIP TIME	DEFROST WATER (LBS/DAY/FT)	
	USAG E (°F)	CUT IN CUT OUT (°F)							
FRONT	DELI	31	28	OFF	40	4	48	N/A	2.8
REAR STORAGE	DELI	37	36	TIME			38		0.2

CASE LENGTH S	EST. REFG. CHRG. (R404A) (LBS)	20°F GLYCOL 6° RISE			
		FRONT GPM	PSI	REAR GPM	PSI
4'	0.5	0.9	2.1	0.2	0.0
5'	0.7	1.0	3.4	0.2	0.1
6'	0.7	1.2	4.8	0.2	0.2
8'	1.0	1.6	2.2	0.3	0.5
10'	1.4	2.0	3.9	0.4	0.7
12'	1.3	2.4	4.6	0.4	0.9

# OF END PNLS	END PANEL WIDTH KEY	
	END PNL # OF PNL WIDTH INCHES	TOTAL ADDED LENGTH (IN.)
1	1.125	1.125
2	1.125	2.25

ELECTRICAL DATA:

STANDARD FANS, HEATERS, LED LIGHTS (115 VOLT)

CASE LENGTH	SELF-SERVICE SECTION EVAPORATOR FANS			REFRIGERATED REAR STORAGE EVAPORATOR FANS (OPTIONAL)		CANOPY LIGHTS LED		OPTIONAL LED SHELF LIGHTS		MAX. LED LOAD (W/ ALL OPTIONS)		ANTI-SWEAT HEATERS		CONVENIENCE OUTLETS (OPTIONAL)				
	# OF EVAP FANS	BLADE DIA. (IN.)	BLADE PITCH (°)	AMPS	WATTS	AMPS	WATTS	AMPS	WATTS	AMPS	WATTS	AMPS	WATTS	# OUTLET S	VOLTS	AMPS		
4'	2	6.75	15	0.2	16	0.3	8.8	0.1	10	0.1	10	0.2	21	0.84	97	1	115	15
5'	2	6.75	20	0.2	16	0.3	8.8	0.1	13	0.1	13	0.2	26	1.06	122	1	115	15
6'	3	6.75	15	0.4	24	0.3	8.8	0.1	15	0.1	15	0.3	31	1.28	147	1	115	15
8'	4	6.75	15	0.5	32	0.3	8.8	0.2	21	0.2	21	0.4	41	1.71	197	1	115	15
10'	4	6.75	20	0.5	32	0.3	8.8	0.2	26	0.2	26	0.5	52	2.15	247	1	115	15
12'	6	6.75	15	0.7	48	0.3	8.8	0.3	31	0.3	31	0.5	62	2.58	297	2	115	30

HOT TOP SECTION, 60HZ 1 PHASE OR 3 PHASE AS NOTED INCLUDES LIGHTS AND FANS



CASE LENGTH	SURFACE WARMER / HOT WELLS 208V			SURFACE WARMER / HOT WELLS 240V				
	L1	L2	L3	WATTS	L1	L2	L3	WATTS
4'	13.0	11.6	N/A	2711	15.1	13.4	N/A	3624
5'	TBD	TBD	TBD	TBD	TBD	TBD	TBD	TBD
6'	14.1	12.9	N/A	2933	16.3	14.9	N/A	3912
8'	23.8	20.9	9.4	6497	27.0	24.2	10.8	8591
10'	29.9	31.6	17.9	9535	34.5	36.5	20.7	12706
12'	25.8	27.8	25.7	9522	29.8	32.1	29.6	12678

OPTIONAL HIGH OUTPUT LED LIGHTS (115 VOLT)

CASE LENGTH	CANOPY LIGHTS H.O. LED		OPTIONAL SHELF LIGHTS		MAX. H.O. LED LOAD	
	AMPS	WATTS	AMPS	WATTS	AMPS	WATTS
4'	0.1	10	0.1	10	0.2	21
5'	N/A	N/A	N/A	N/A	N/A	N/A
6'	0.1	15	0.1	15	0.3	31
8'	0.2	21	0.2	21	0.4	41
10'	N/A	N/A	N/A	N/A	N/A	N/A
12'	0.3	31	0.3	31	0.5	62

Specification Sheets (cont'd)

  SERVICE/ SELF-SERVICE
HUSSMANN - R3H-HF / CR3-HF (CHINO)

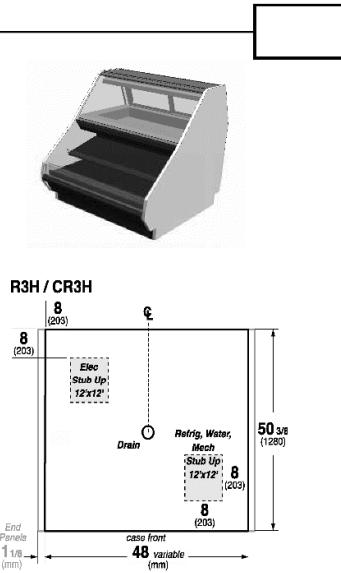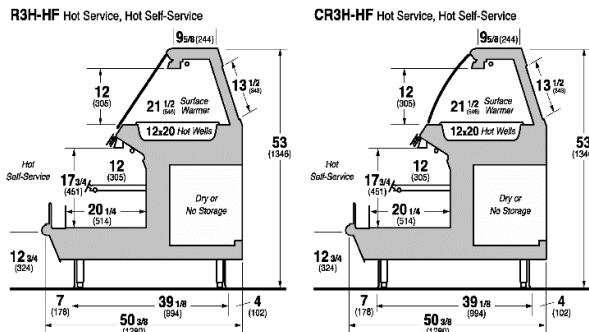

HOT CASE DATA: 60HZ, 3-PHASE

CASE LENGTH	CIRCUIT#1				CIRCUIT#1				CIRCUIT#2				CIRCUIT#2			
	208V		240V		208V		240V		208V		240V		208V		240V	
	L1	L2	L3	WATTS												
4'	16.5	15.2	14.3	5524	18.9	17.5	16.5	7330	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A
5'	13.7	19.8	19.9	6413	15.8	22.9	23	8549	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A
6'	23.2	22.4	23.5	8298	26.6	27.1	25.9	11029	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A
8'	11.1	14.4	12	4503	12.8	16.6	13.9	6000	20.8	20.8	9.3	6112	24.1	24.1	10.7	8161
10'	15.4	22.3	15.9	6437	17.5	25.8	18.3	8535	24	24	11.1	7097	27.7	27.7	12.8	9450
12'	21	23.1	18.4	7505	23.8	26.7	21.3	9949	16.1	16.1	16.1	5800	18.6	18.6	18.6	7732

# OF END PANELS	END PANEL WIDTH (IN.)	TOTAL ADDED LENGTH (IN.)
1	1.125	1.125
2	1.125	2.25

LEGEND

N/A - NOT AVAILABLE
TBD - TO BE DETERMINED

*** LOADS INCLUDE SINGLE ROW CANOPY LIGHTS FOR BOTH TOP AND FRONT, SINGLE ROW FOR SHELVES

TOTAL WATTS

CASE LENGTH	208V	240V
	WATTS	WATTS
4'	5524	7330
5'	6413	8549
6'	8298	11029
8'	10615	14161
10'	13534	17985
12'	13305	17681

LIGHTING DATA:

T-5 LIGHTING (120 VOLT)

CASE LENGTH	# EVAP. FANS **	TOTAL FANS		DRAIN PAN HEATERS		CANOPY LIGHTS T-5 FRONT		SHELF LIGHTS (OPTIONAL) T-5		CANOPY LIGHTS T-5 TOP (HOT SECTION)		LEDGE LIGHTS		TOTAL LIGHTS			
		208V		240V		AMPS		WATTS		AMPS		WATTS		AMPS		WATTS	
		12 AMPS EA EE	AMPS	WATTS	AMPS	WATTS	AMPS	WATTS	#SHLV	AMPS	WATTS	AMPS	WATTS	AMPS	WATTS	AMPS	WATTS
4'	N/A	N/A	N/A	N/A	N/A	N/A	0.26	28	1	0.26	28	0.26	28	N/A	N/A	0.78	84
5'	N/A	N/A	N/A	N/A	N/A	N/A	0.32	35	1	0.32	35	0.32	35	N/A	N/A	0.96	105
6'	N/A	N/A	N/A	N/A	N/A	N/A	0.39	42	1	0.39	42	0.39	42	N/A	N/A	1.17	126
8'	N/A	N/A	N/A	N/A	N/A	N/A	0.52	56	1	0.52	56	0.52	56	N/A	N/A	1.56	168
10'	N/A	N/A	N/A	N/A	N/A	N/A	0.65	70	1	0.65	70	0.65	70	N/A	N/A	1.95	210
12'	N/A	N/A	N/A	N/A	N/A	N/A	0.78	84	1	0.78	84	0.78	84	N/A	N/A	2.34	252


ELECTRICAL DATA CONTINUED:

CASE LENGTH	CONDENSING UNIT VOLTS / PHASE			DRAIN/EVAP PAN 120V		CONVENIENCE OUTLETS		
	208/1	240/1	H.P.	AMPS	WATTS	#OUTLETS	VOLTS	AMPS
4'	N/A	N/A	N/A	N/A	N/A	1	115	15
5'	N/A	N/A	N/A	N/A	N/A	1	115	15
6'	N/A	N/A	N/A	N/A	N/A	1	115	15
8'	N/A	N/A	N/A	N/A	N/A	1	115	15
10'	N/A	N/A	N/A	N/A	N/A	1	115	15
12'	N/A	N/A	N/A	N/A	N/A	1	115	15

OPTIONS/NOTES:

- 1) GFCI receptacles are optional and furnished with case when ordered
- 2) Metallic in-use cover shipped loose - installed in field

Specification Sheets (cont'd)

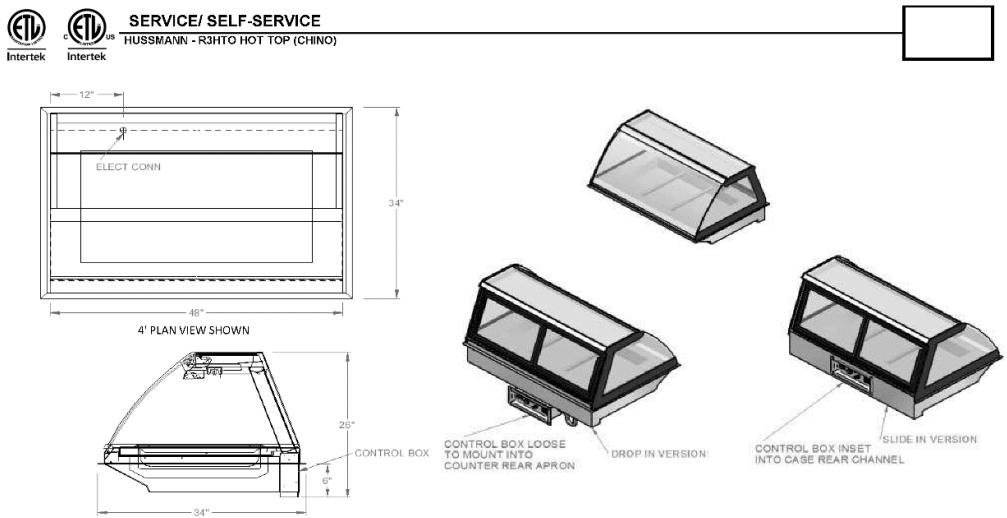

OPTIONS/NOTES:

1) GFCI receptacles are optional and furnished with case when ordered
 2) Metallic in-use cover shipped loose - installed in field

B3H HOT TOP REFRIGERATED FRONT

122614

10. Electrical Wiring Diagrams

CR3H-HF-4	Top 4" dry well and 14" self front lower section	4'	W8700029
CR3H-HF-4	Top 4" dry well and 10" self front lower section	4'	W6600078
CR3H-HF-4	Top 4" dry well and 12" self front lower section	4'	W6600476
R3H-HF-5		5'	W6600024
CR3H-HF-6	4" dry upper well and 12" lower shelves	6'	W6600026
CR3H-HF-6	4" dry upper well and 10" lower shelves	6'	W8700016
CR3H-HF-8	W/14" SHELF	8'	W8700021
CR3H-HF-8	W/10" SHELF	8'	W8700022
CR3H-HF-8	W/12" SHELF	8'	W8700030
CR3H-HF-8	W/OUT SHELF	8'	W6600227
CR3-HF-12	W/10" SHELF	12'	W6600066


R3H-4-REM	HATCO SURFACE WARMER	4'	W6600152
CR3H-4-REM		4'	W8700011
R3H-6-REM		6'	W1800191
R3H-6-REM	With 4100K L.E.D. Lights	6'	W1800195
CR3H-6-REM	Upper Hot Well	6'	W8700015
R3H-8-REM	With Dry Wells	8'	W1800189
R3H-8-REM	2' Griddle 6' Hot Well Alternate	8'	W1800192
R3H-8-REM	Upper 6' Hot Well	8'	W1800196
R3-HD-8-SH-4SW-4HW-R	UPPER HOT PANS AND SOUP WELLS	8'	W6600117
CR3H-8-REM	4" WELL With 4100K L.E.D. Lights	8'	W8700020
R3H-10-REM	With L.E.D. Lights, 4" WELL	10'	W6600050
R3H-12-REM	WITH 4" DRY WELL T-5	12'	W1800199
R3H-12-REM	WITH GRIDDLE TOP LED'S	12'	W6600113
R3H-12-REM	WITH 4" DRY WELL LED'S	12'	W6600020

CIRCUIT #1

LOADING	
208 V	240 V
L1 16.5	18.9
L2 15.2	17.5
L3 14.3	16.5

LIGHT CIRCUIT = .78A BAW

**NOTE: CASE MUST
BE GROUNDED**
5524W @ 208VAC
7330W @ 240VAC

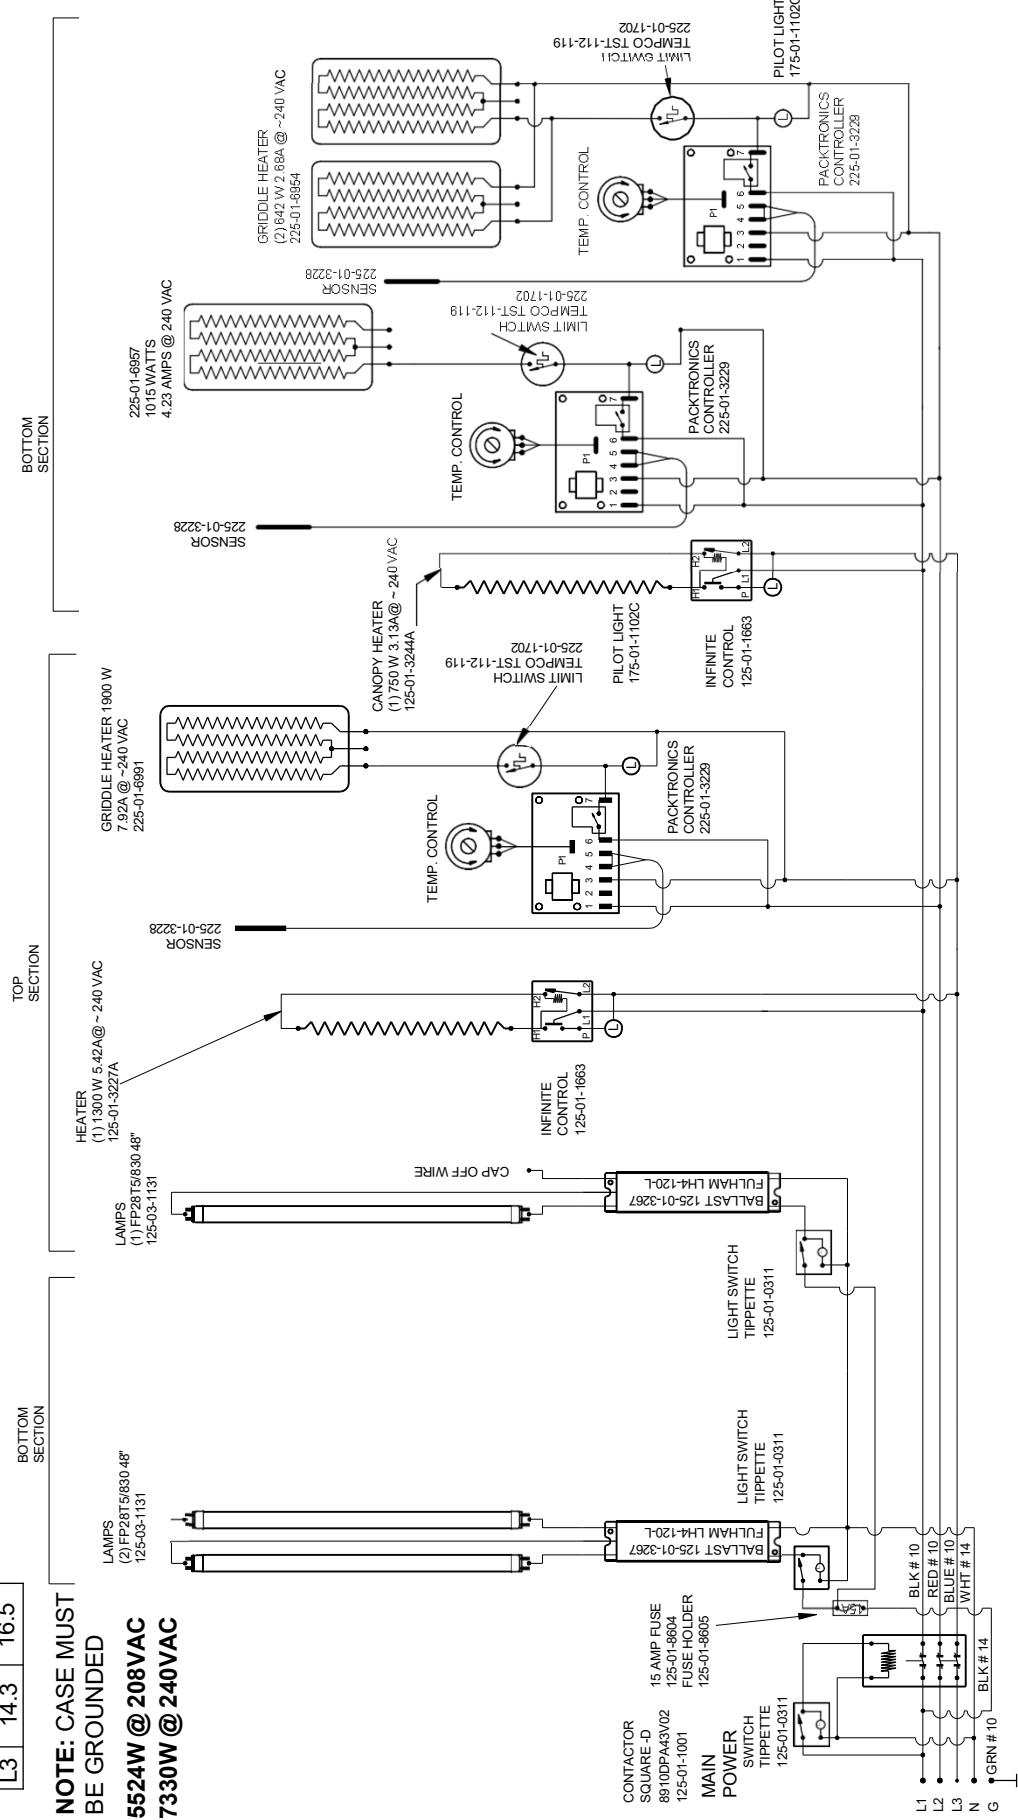

HUSSMANN®
 REVISIONS:
 #: DESCRIPTION: DATE: DRAWN BY: MATT GRAMATA
 B: Changed shelf control from 225-01-1700 to Packtronics 11/29/11 CHECKED BY: DATE: 4/4/11
 C: ECHNCAP-0011184 Added To Team Center 1/19/18 MG
 (909-580-4910 Lic.#: 644406 FILE LOCATION: CB

PROJECT TITLE: R3H DRAWING #: W8700029
 DRAWN BY: MATT GRAMATA
 CHECKED BY: MG
 PRODUCTION ORDER #: 564446 DRAWING TITLE:
 CR3H-HF-4 with 4" dry well and lower 14" shelf PAGE 1 OF 2

CIRCUIT #2


LOADING	
120 V	
L1	15.0

**NOTE: CASE MUST
BE GROUNDED**

RJ45 NETWORK JACK
125-01-0202



NOTE FOR GFCI PROTECTION: IF MORE THAN ONE
SINGLE RECEPTACLE IS USED IN CONJUNCTION WITH
A GFCI DUPLEX RECEPTACLE "DOWNSTREAM" ON
THE LOAD SIDE, THE SUM OF ALL RECEPTACLES
SHOULD NOT BE MORE THAN 15A

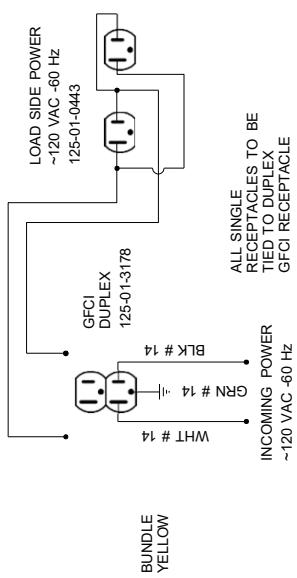

Hussmann®

REVISIONS:

#:	DESCRIPTION:	DATE:	BY:	DRAWN BY:	PROJECT TITLE:
B	Changed shelf control from 225-01-1700 to Packtronics	11/29/11	MG	MATT GRAMATA	R3H
				DATE: 4/4/11	DATE: 4/4/11

Hussmann Corporation, Inc.
13770 Ramona Avenue
Chino, CA 91710
(909) 590-4910 Lic.#: 644406

DRAWING #: W8700029

DRAWING TITLE:

CR3H-HF-4 with 4" dry well and lower 14" shelf


PAGE 2 OF 2

CIRCUIT #1

LOADING	
208 V	240 V
L1 10.2	11.8
L2 18.3	21.1
L3 14.2	16.4

LIGHT CIRCUIT = .78A 84W

**NOTE: CASE MUST
BE GROUNDED**
5128W @ 208VAC
6831W @ 240VAC

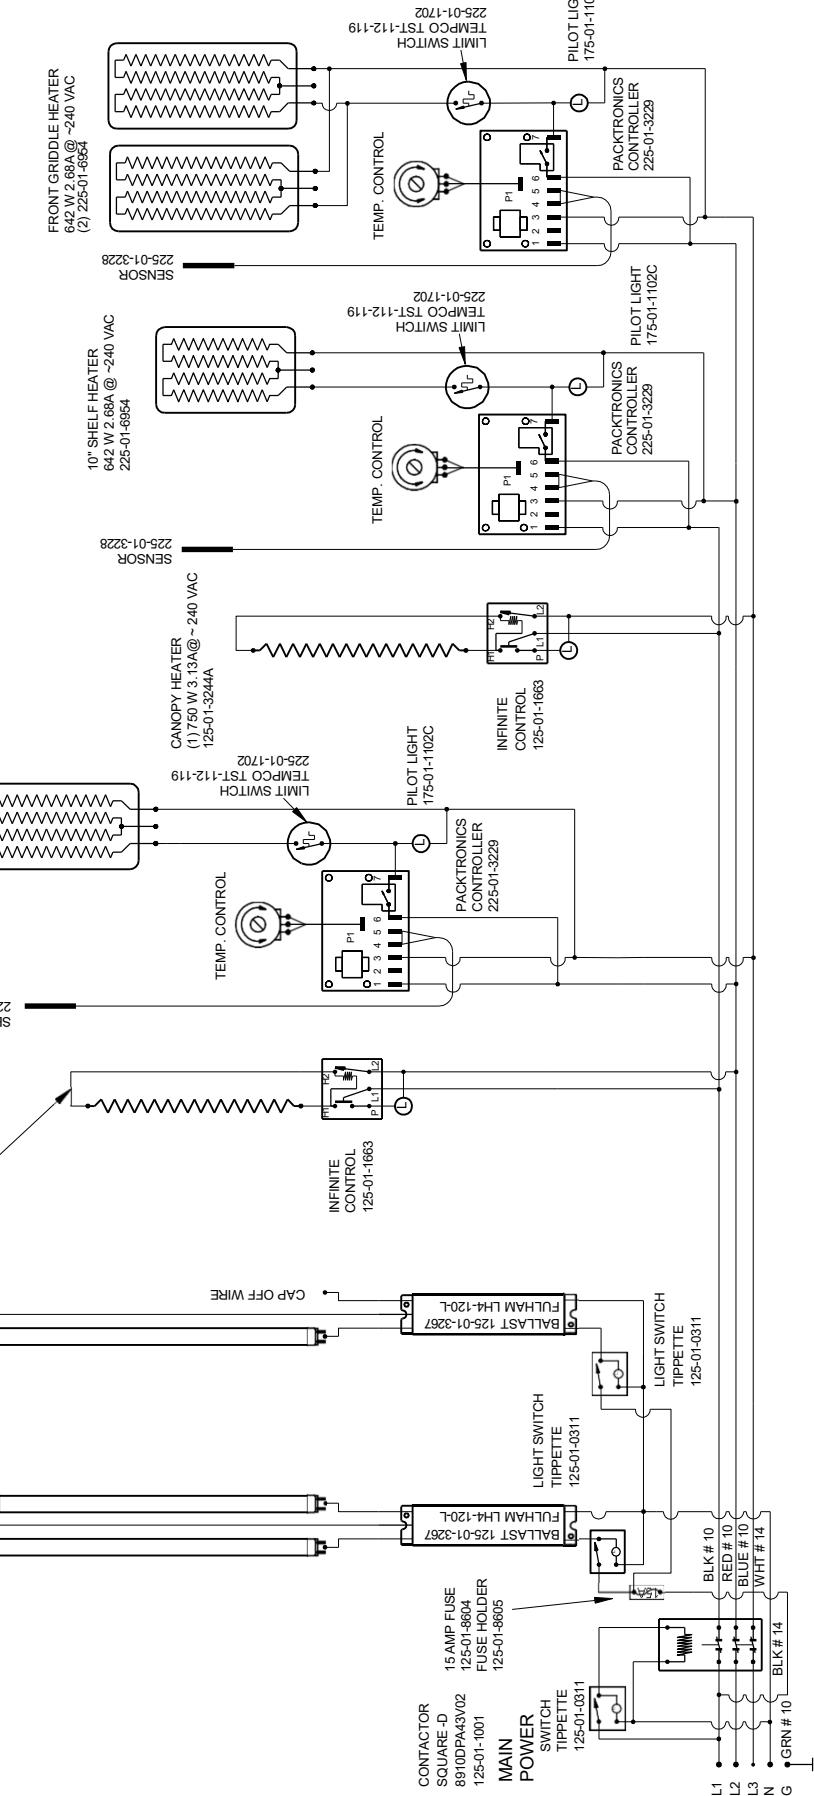

HUSSMANN®
 Hussmann Corporation, Inc.
 13770 Ramona Avenue
 Chino, CA 91714
 (909) 590-4910
 Lic. # 644406

REVISIONS:
 # DESCRIPTION: DATE: BY: DRAWN BY: CRAIG BOOREY
 A CN#906786 DATE: 4/24/13 CHECKED BY: _____
 B CN#919085 REVISED BOTTOM SECTION HTR FILE LOCATION: _____
 C CN#T005293 REVISED FRONT HEATERS FILE LOCATION: _____

PROJECT TITLE: R3H
 DRAWING #: W6600078

PROJECT TITLE: R3H
 DRAWING #: W6600078

R3H-HF-4 W/10" SHELF

PAGE 1 OF 2

CIRCUIT #2


LOADING	
120 V	
L1	15.0

**NOTE: CASE MUST
BE GROUNDED**

RJ45 NETWORK JACK
125-01-0202



NOTE FOR GFCI PROTECTION: IF MORE THAN ONE
SINGLE RECEPTACLE IS USED IN CONJUNCTION WITH
A GFCI DUPLEX RECEPTACLE "DOWNSTREAM" ON
THE LOAD SIDE, THE SUM OF ALL RECEPTACLES
SHOULD NOT BE MORE THAN 15A

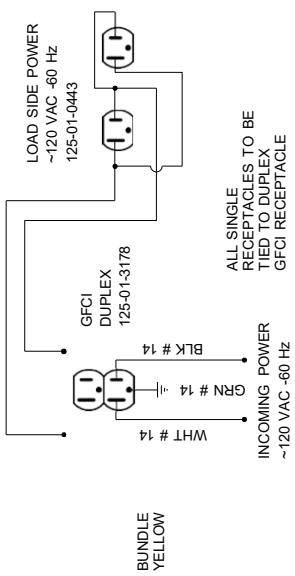

HUSSMANN®

REVISIONS:

#:

DESCRIPTION:

DATE:

BY:

CHECKED BY:

DATE:

4/24/13

CB

PRODUCTION ORDER #:

895052

DRAWING TITLE:

R3H

Hussmann Corporation, Int'l.
13770 Ramona Avenue
Chino, CA 91710
(909) 590-4910 Lic. # 644406

CN#917005 REVISED BOTTOM SECTION HTR
CN#f069263 REVISED FRONT HEATERS

FILE LOCATION:
8/19/14
10/23/15

CB CB CB

DRAWING #: W6600078

PAGE 2 OF 2

CIRCUIT #1

 LOADING
 208 V 240 V
 L1 1/4 131
 L2 1/4 224
 L3 1/4 164

LIGHT CIRCUIT = 784.64W
 208 V 240 VAC


5404W @ 208VAC
 719W @ 240VAC

LAMPS
 121 FP28T5630 48"
 125-03-1203

HEATER
 111300 W 542A @ ~240 VAC
 125-01-3227A

GRIDDLE HEATER 1900 W 7924
 @ ~240 VAC
 225-01-699


TOP SECTION
 BOTTOM SECTION

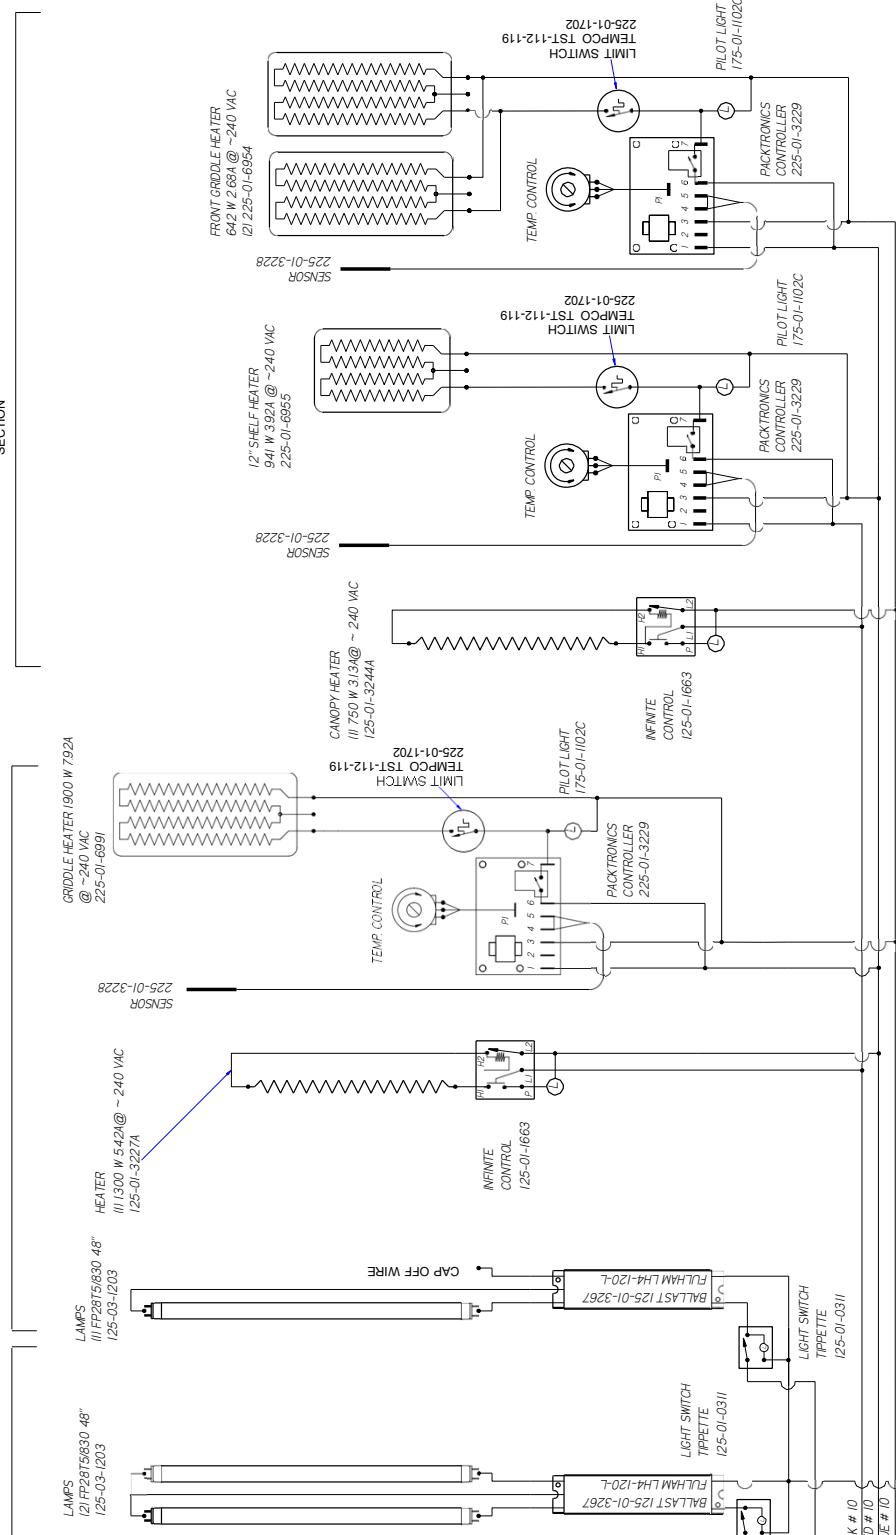

REVISION HISTORY					
REV	EDN	DATE	REVISION DESCRIPTION	REV BY	CHD BY APPR BY
A	EDN-CARL-0014345	20/8/11/06	RELEASED TO PRODUCTION	CB	CB

BOTTOM SECTION

TOP SECTION

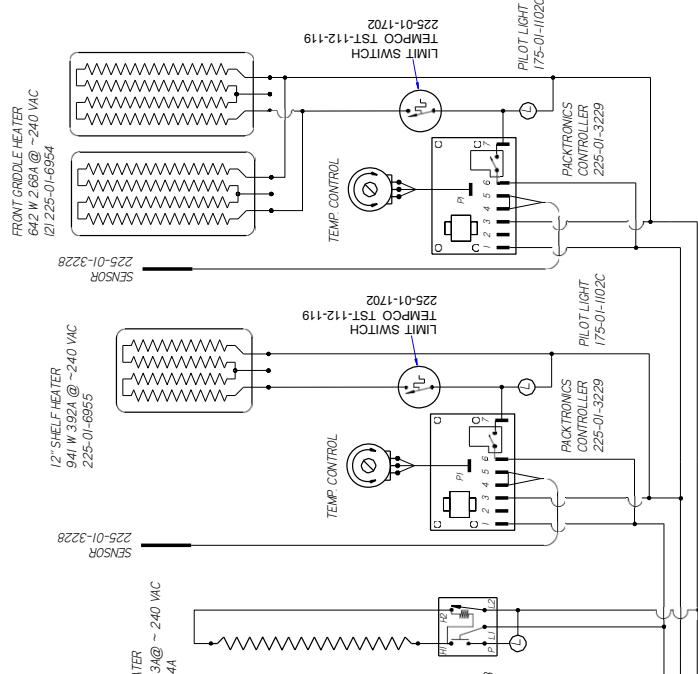

HUSSMANN®
 - DIAGRAM-R3H-HF-
 4 WI/12" SHELF

W6600476 A

MATERIAL - NA
 DATE DRAWN - 1/6/18
 DRAWN BY - CRAIG BOOREY
 REVIEWED BY - CRAIG BOOREY
 APPROVED BY - CRAIG BOOREY
 SHEET 1 OF 2
 UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES
 THREE ANGLES ± 0.010
 DECIMALS XX ± 0.3 XXX
 ANGLES ± 2°

NOTES:
 CASE MUST BE GROUNDED
 WHEN PASSING WIRES THROUGH METAL HOLES A GROMMET MUST BE USED

PROJECTION


REVISION HISTORY					
REV	ECN	DATE	REV BY	CHkd BY	APPR BY
A	ECN-CPL-0014945	20/01/16	RELEASED TO PRODUCTION	CB	CB

CIRCUIT #2

LOADING	120V
L1	150



NOTE FOR GFCI PROTECTION IF MORE THAN ONE SINGLE RECEPTACLE IS USED IN CONJUNCTION WITH A GFCI DUPLEX RECEPTACLE "DOWNSTREAM" ON THE LOAD SIDE, THE SUM OF ALL RECEPTACLES SHOULD NOT BE MORE THAN 15A

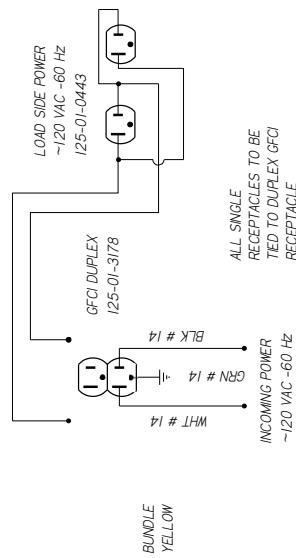

NOTES:
CASE MUST BE GROUNDED
WHEN PASSING WIRES THROUGH METAL HOLES A GROMMET MUST BE USED



Husmann®	DIAGRAM-R3H-HF-4 W/12" SHELF
MATERIAL - NA	DATE DRAWN - 1/6/18
DRAWN BY - CRAIG BODREY	EDN-CAP-0014945
REVIEWED BY - CRAIG BODREY	REF -
APPROVED BY - CRAIG BODREY	SHEET 2 OF 2
UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES	
DECIMALS XX ± 0.3 XXX	THD ANGL
±0.010	E
ANGLES ± 2°	PROJECTION
W6600476	A

CIRCUIT #1

LOADING	
208 V	240 V
L1 13.7	15.8
L2 19.8	22.9
L3 19.9	23.0

LIGHT CIRCUIT = 9.1A 98W

**NOTE: CASE MUST
BE GROUNDED**
6413W @ 208VAC
8549W @ 240VAC

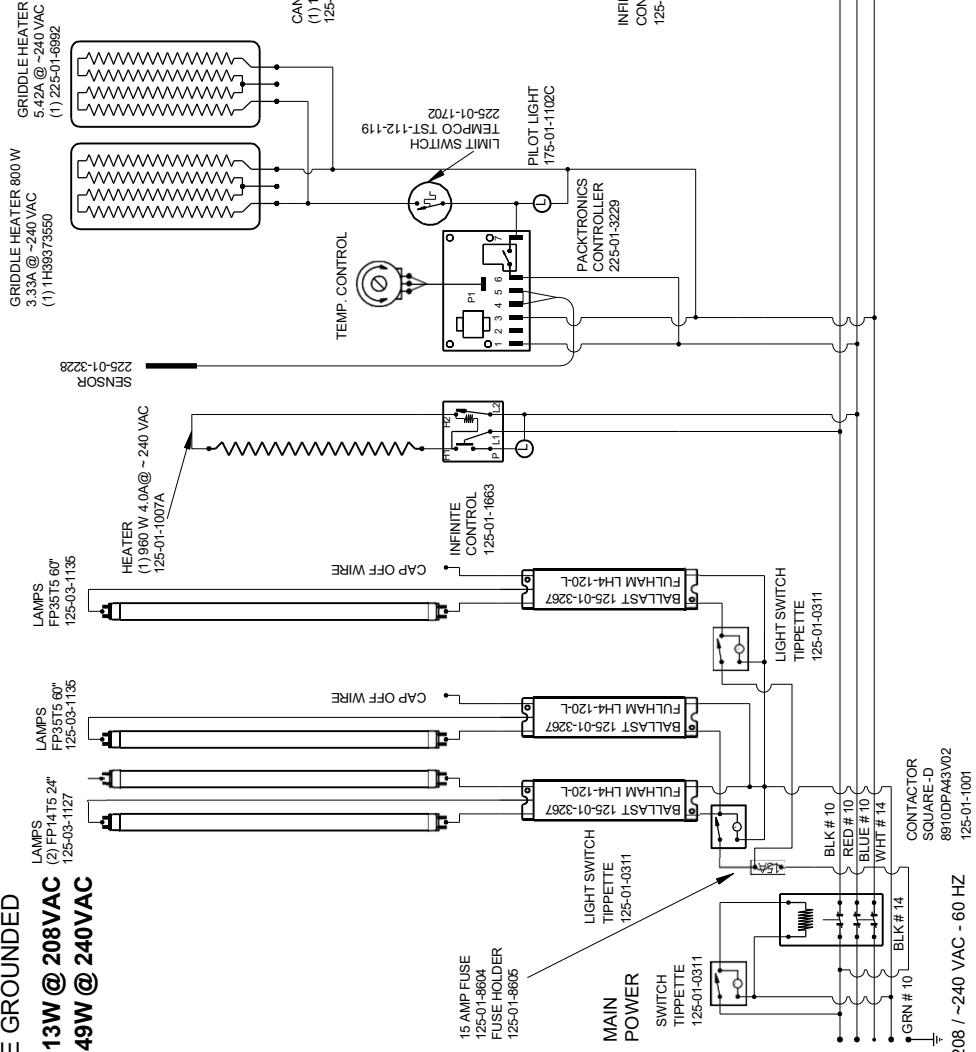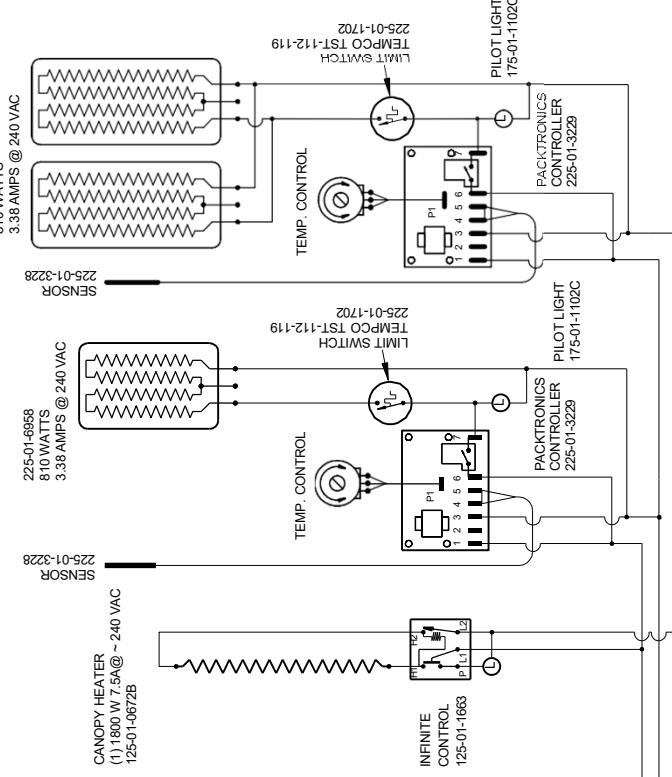TOP SECTION
L1 208V
L2 240V
L3 240VBOTTOM SECTION
L1 208V
L2 240V
L3 240V

MAIN POWER
SWITCH
TIPPIETTE
125-01-0311
G GRN # 10
BLK # 10
RED # 10
BLK # 14
WHT # 14

~208 / ~240 VAC - 60 Hz

CONTACTOR
SQUARE-D
8910DF/A43V02
125-01-1001

HUSSMANN®
Hussmann Corporation, Int'l.
Chino, CA 91710
(909) 590-4810
Lic. # 644406

REVISIONS:
DESCRIPTION: DATE: BY: DRAWN BY: CRAIG BOOREY
A CN#6054, NEW RELEASE DATE: 3/23/12 CHECKED BY: CB
C CN#634531, CHGD UPPER, LOWER GRIDDLE PADS FILE LOCATION: DRAWING TITLE: R3H
04/24/12 CB

DRAWING #: W6600024
PAGE 1 OF 2

R3H-HF-5

PAGE 1 OF 2

CIRCUIT #2


LOADING	
120 V	
L1	15.0

**NOTE: CASE MUST
BE GROUNDED**

RJ45 NETWORK JACK
125-01-0202



NOTE FOR GFCI PROTECTION: IF MORE THAN ONE SINGLE RECEPTACLE IS USED IN CONJUNCTION WITH A GFCI DUPLEX RECEPTACLE "DOWNSTREAM" ON THE LOAD SIDE, THE SUM OF ALL RECEPTACLES SHOULD NOT BE MORE THAN 15A

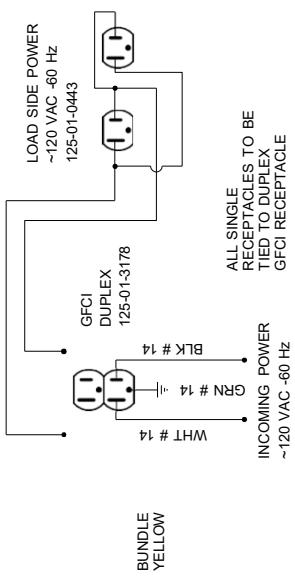

HUSSMANN®

REVISIONS:

#

DESCRIPTION:

DATE:

BY:

CHECKED BY:

DATE:

CB

PROJECT TITLE: R3H

FILE LOCATION: R3H-HF-5

CRAIG BOOREY
DRAWING #: W6600024

A CNP60549, NEW RELEASE
C CNP634531, CHGD UPPER, LOWER GRIDDLE PADS

03/23/12
04/24/12


CB
CB


DRAWING TITLE: R3H


FILE LOCATION: R3H-HF-5


Hussmann Corporation, Int'l.
13770 Ramona Avenue
Chino, CA 91710
(909) 590-4910 Lic. # 644406

PAGE 2 OF 2

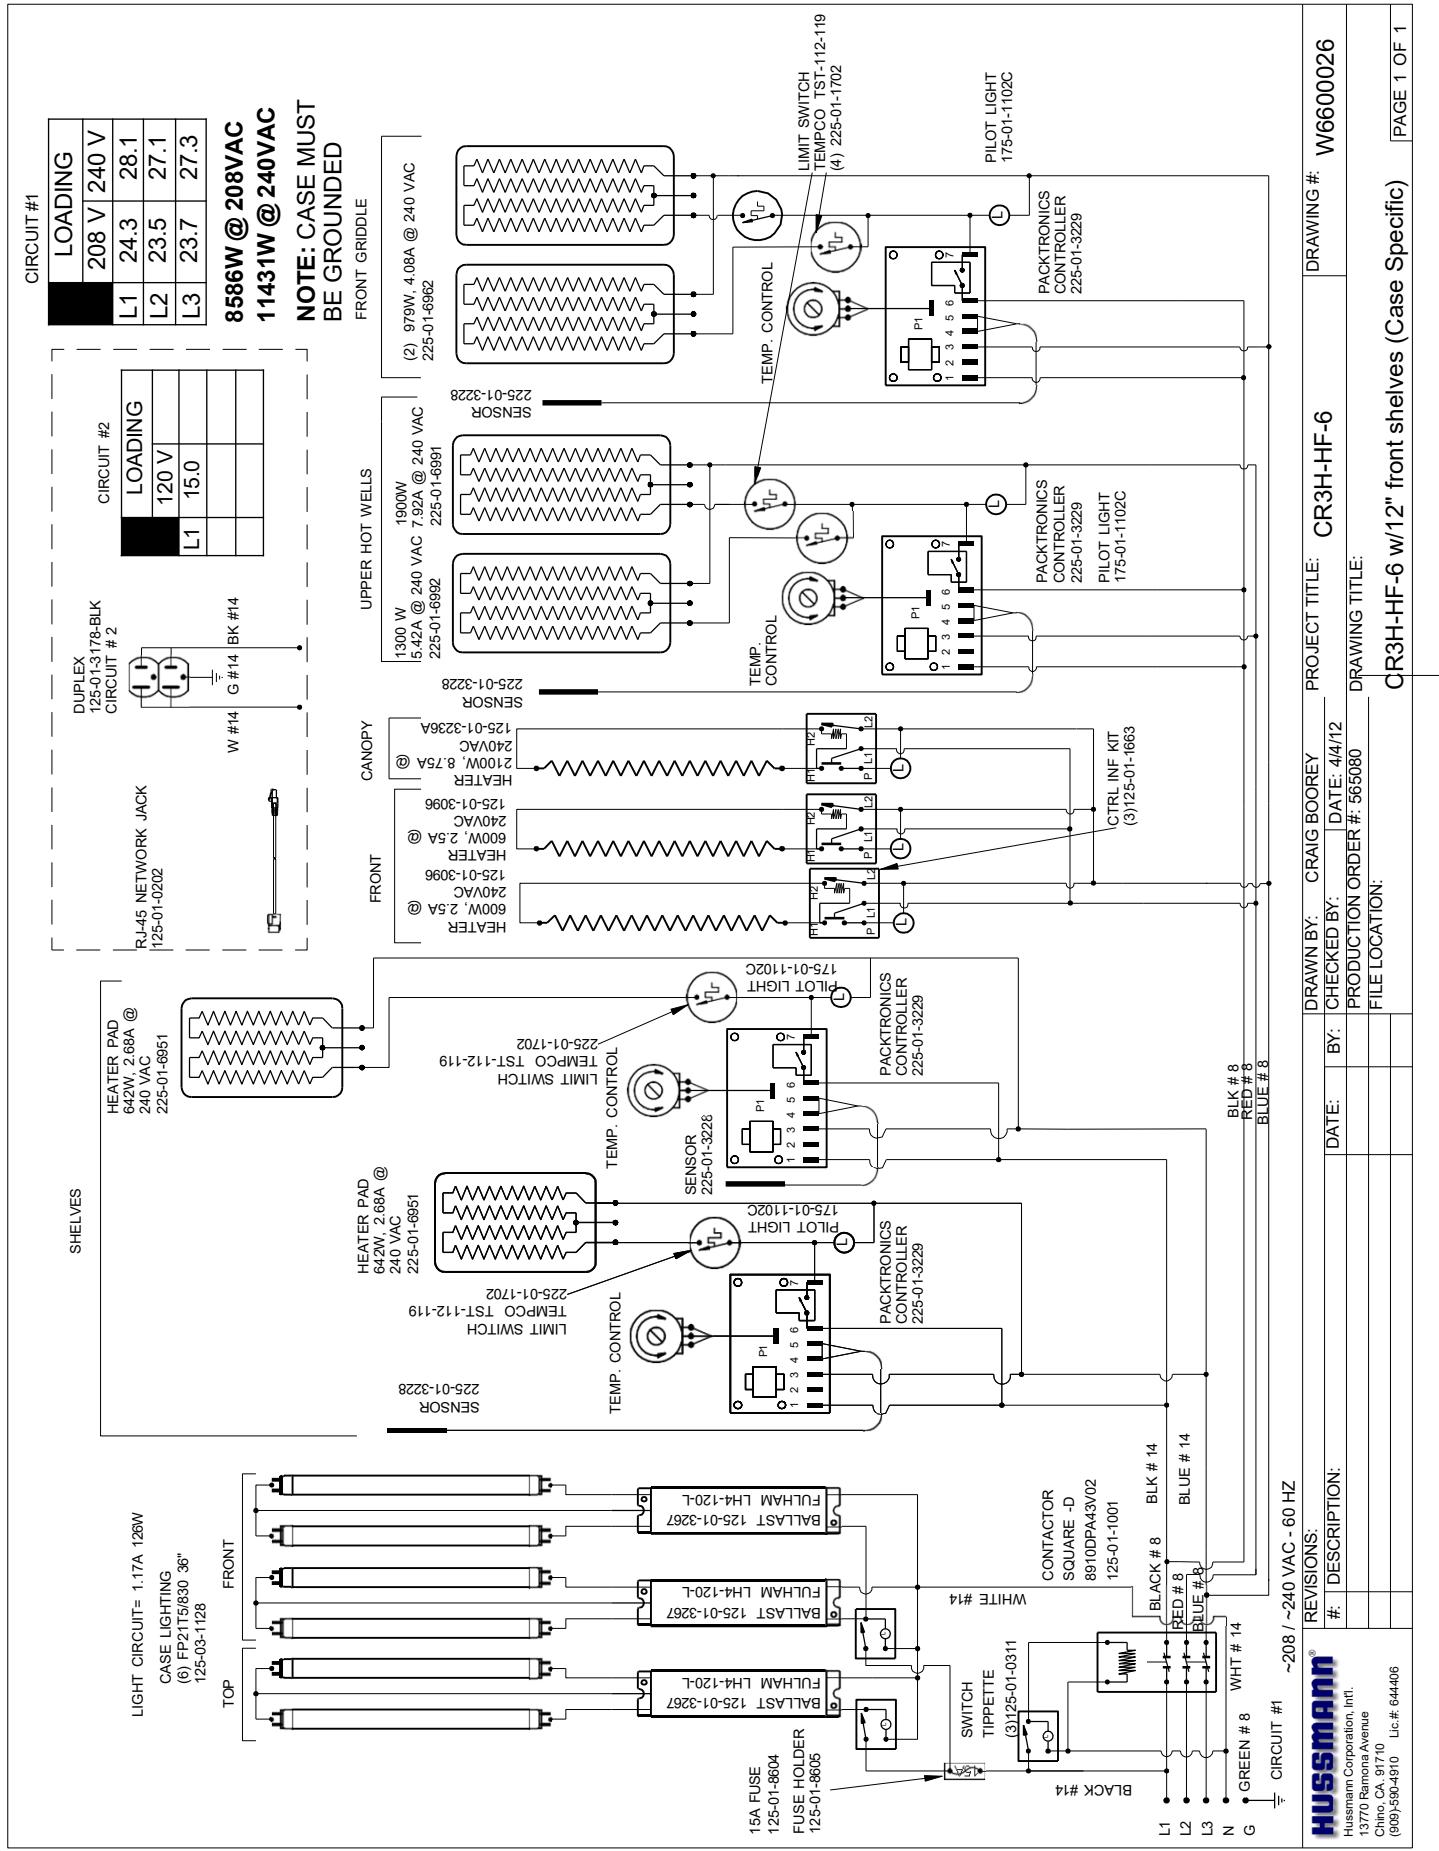

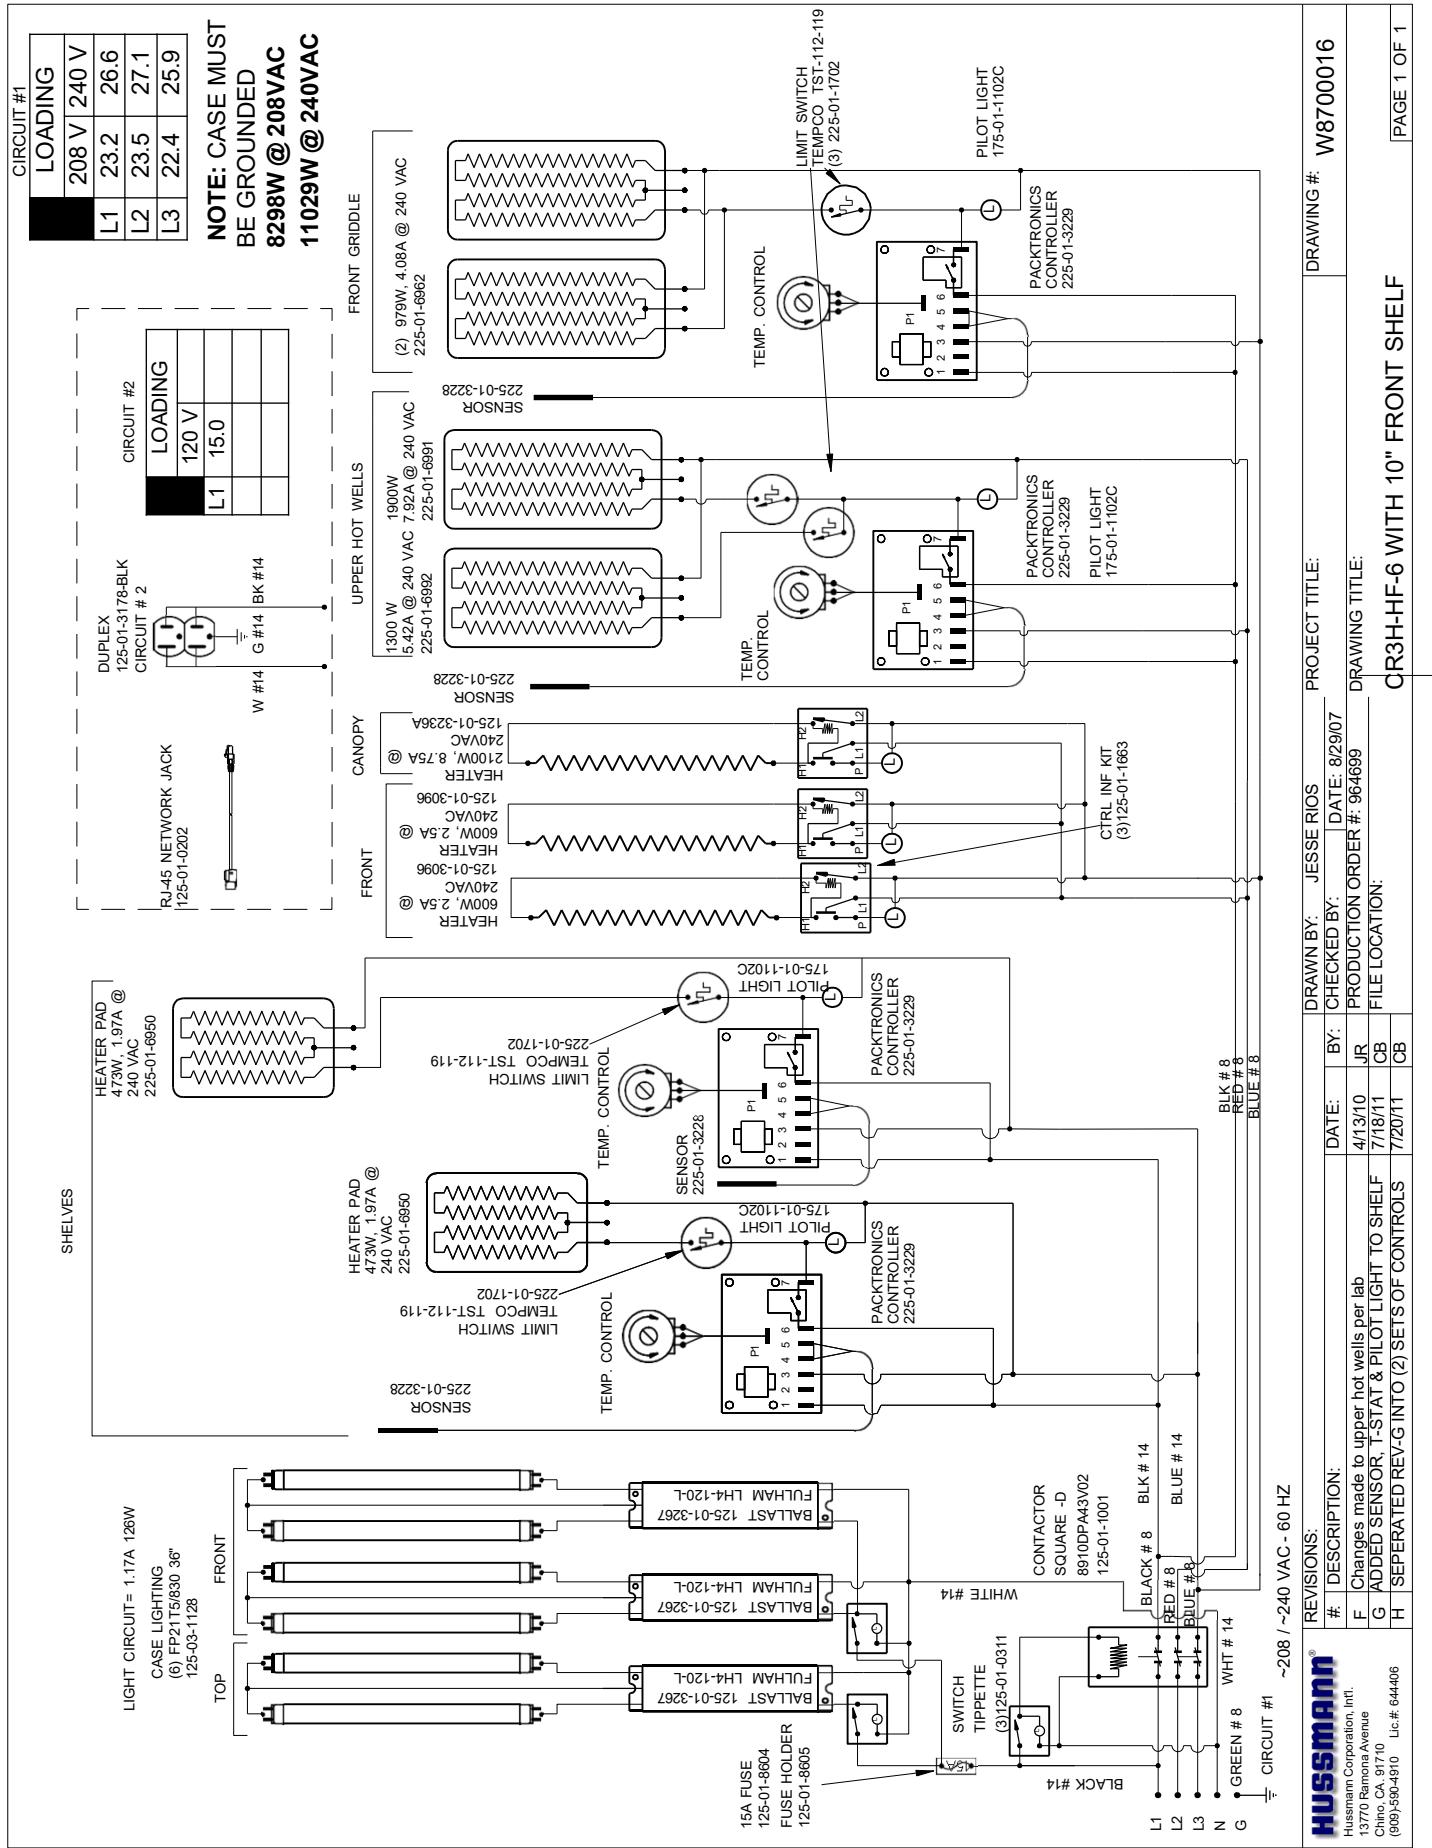

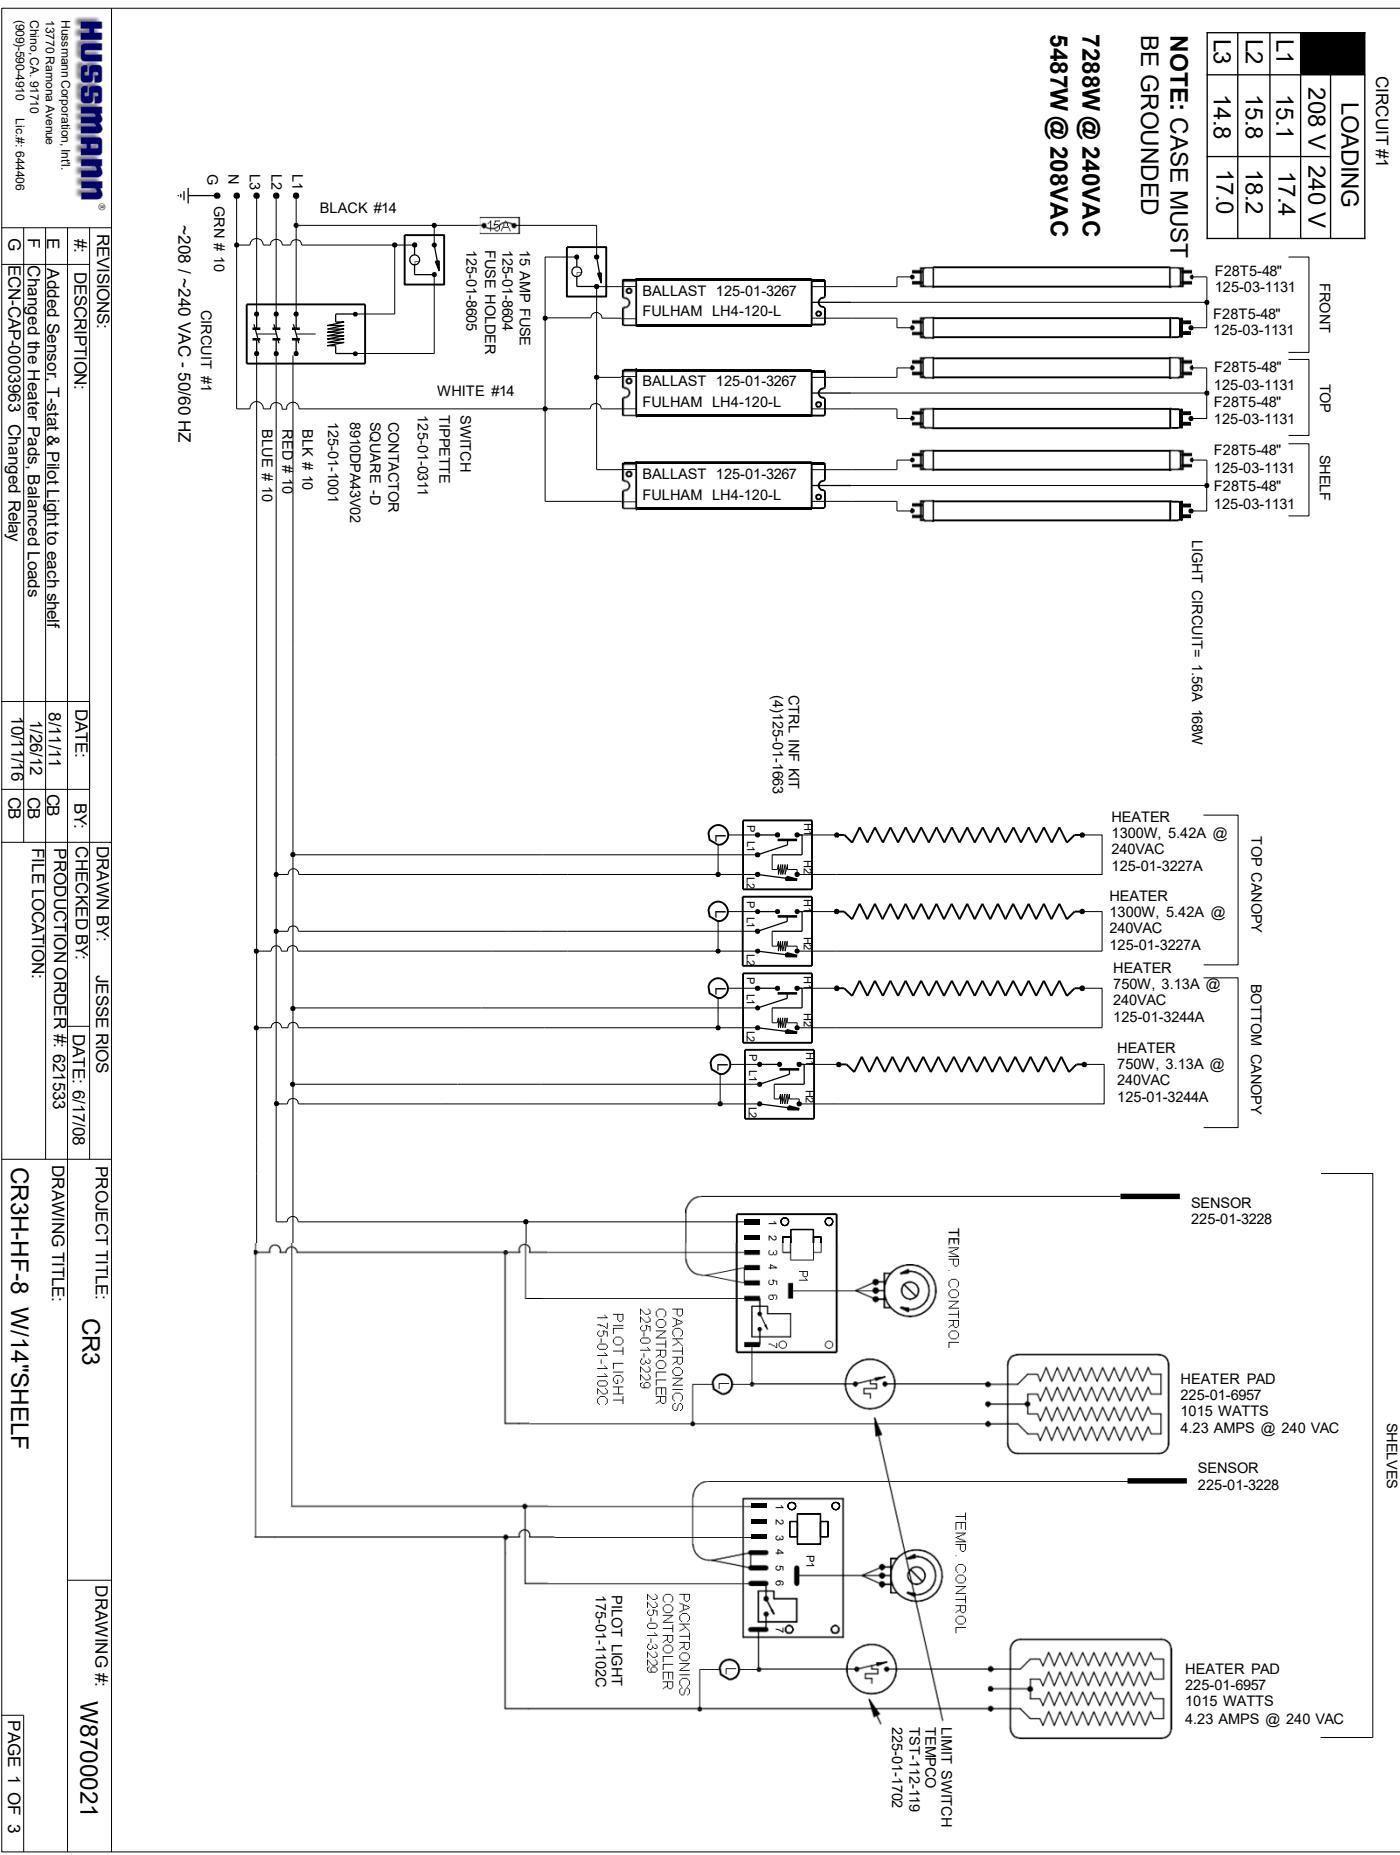

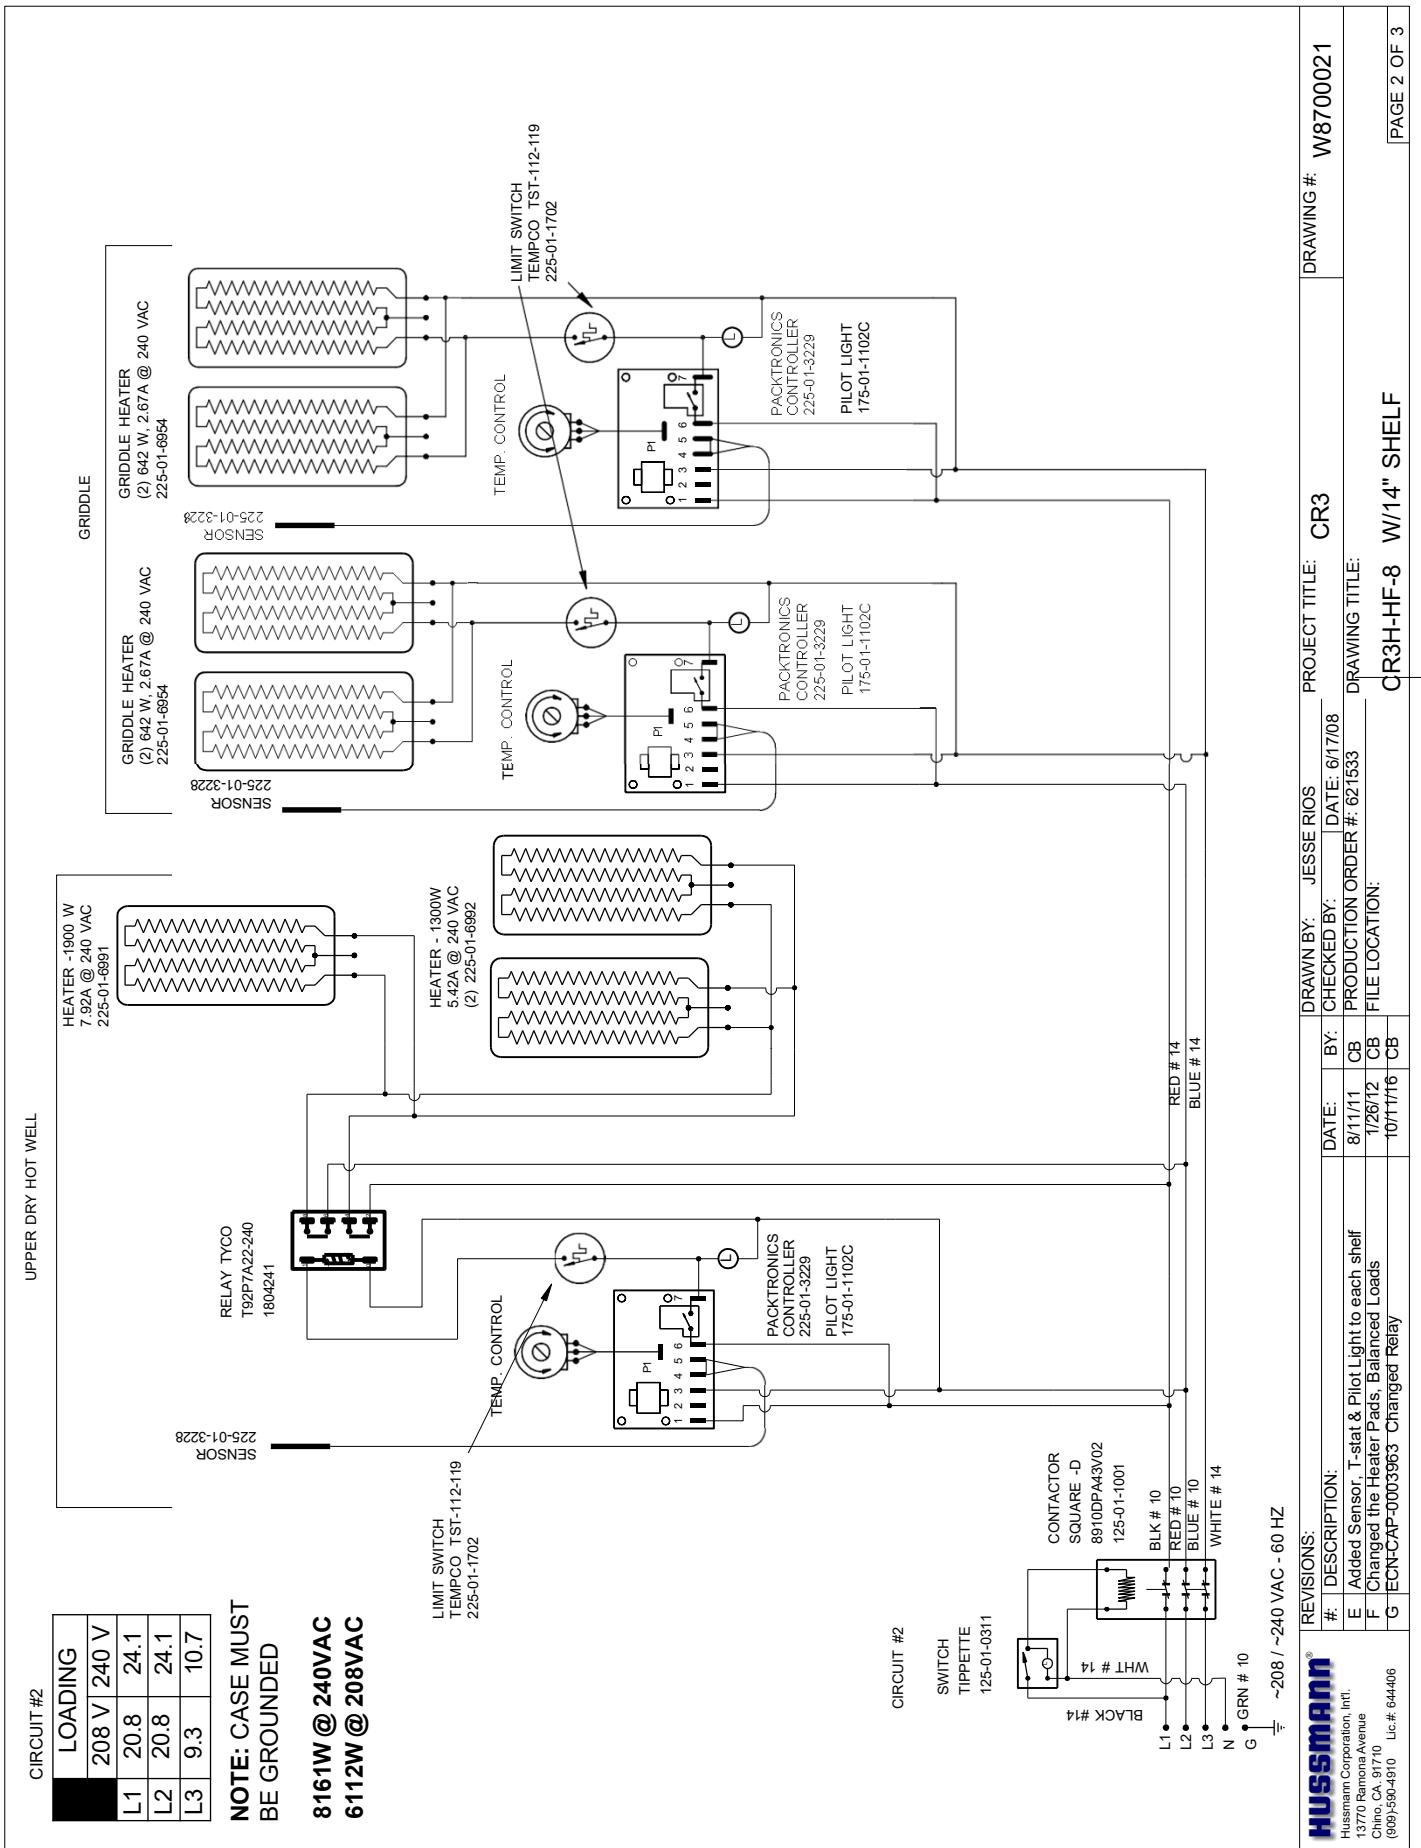

CIRCUIT #3


LOADING	
120 V	
L1	15.0

**NOTE: CASE MUST
BE GROUNDED**

RJ-45 NETWORK JACK
125-01-0202



NOTE FOR GFCI PROTECTION: IF MORE THAN ONE SINGLE RECEPTACLE IS USED IN CONJUNCTION WITH A GFCI DUPLEX RECEPTACLE "DOWNSTREAM" ON THE LOAD SIDE, THE SUM OF ALL RECEPTACLES SHOULD NOT BE MORE THAN 15A

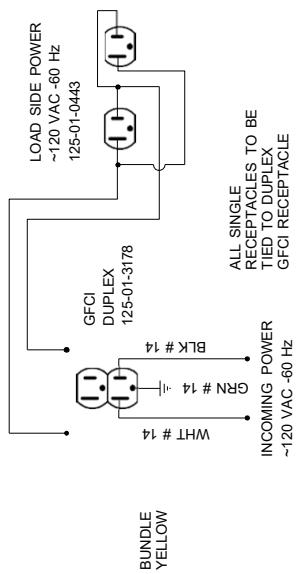

REVISIONS:		DRAWN BY: JESSE RIOS		PROJECT TITLE: CR3		DRAWING #: W8700021	
#:	DESCRIPTION:	DATE:	BY:	CHECKED BY:	DATE:	6/17/08	
E	Added Sensor, T-stat & Pilot Light to each shelf	8/11/11	CB			6/21/33	DRAWING TITLE:
F	Changed the Heater Pads, Balanced Loads	1/26/12	CB				FILE LOCATION:
G	ECN-CAP-0003963 Changed Relay	10/11/16	CB				CR3H-HF-8 W/14" SHELF
							PAGE 3 OF 3

Hussmann®

Hussmann Corporation, Int'l.
13770 Ramona Avenue
Chino, CA 91710
(909) 590-4910 Lic. # 644406

CIRCUIT #1		
LOADING		
208 V	240 V	
L1	11.1	12.8
L2	14.4	16.6
L3	12.0	13.9


NOTE: CASE MUST BE GROUNDED


**6000W @ 240VAC
4503W @ 208VAC**

FRONT TOP SHELF LIGHT CIRCUIT = 1.56A 188W

TOP CANOPY BOTTOM CANOPY

SHELVES

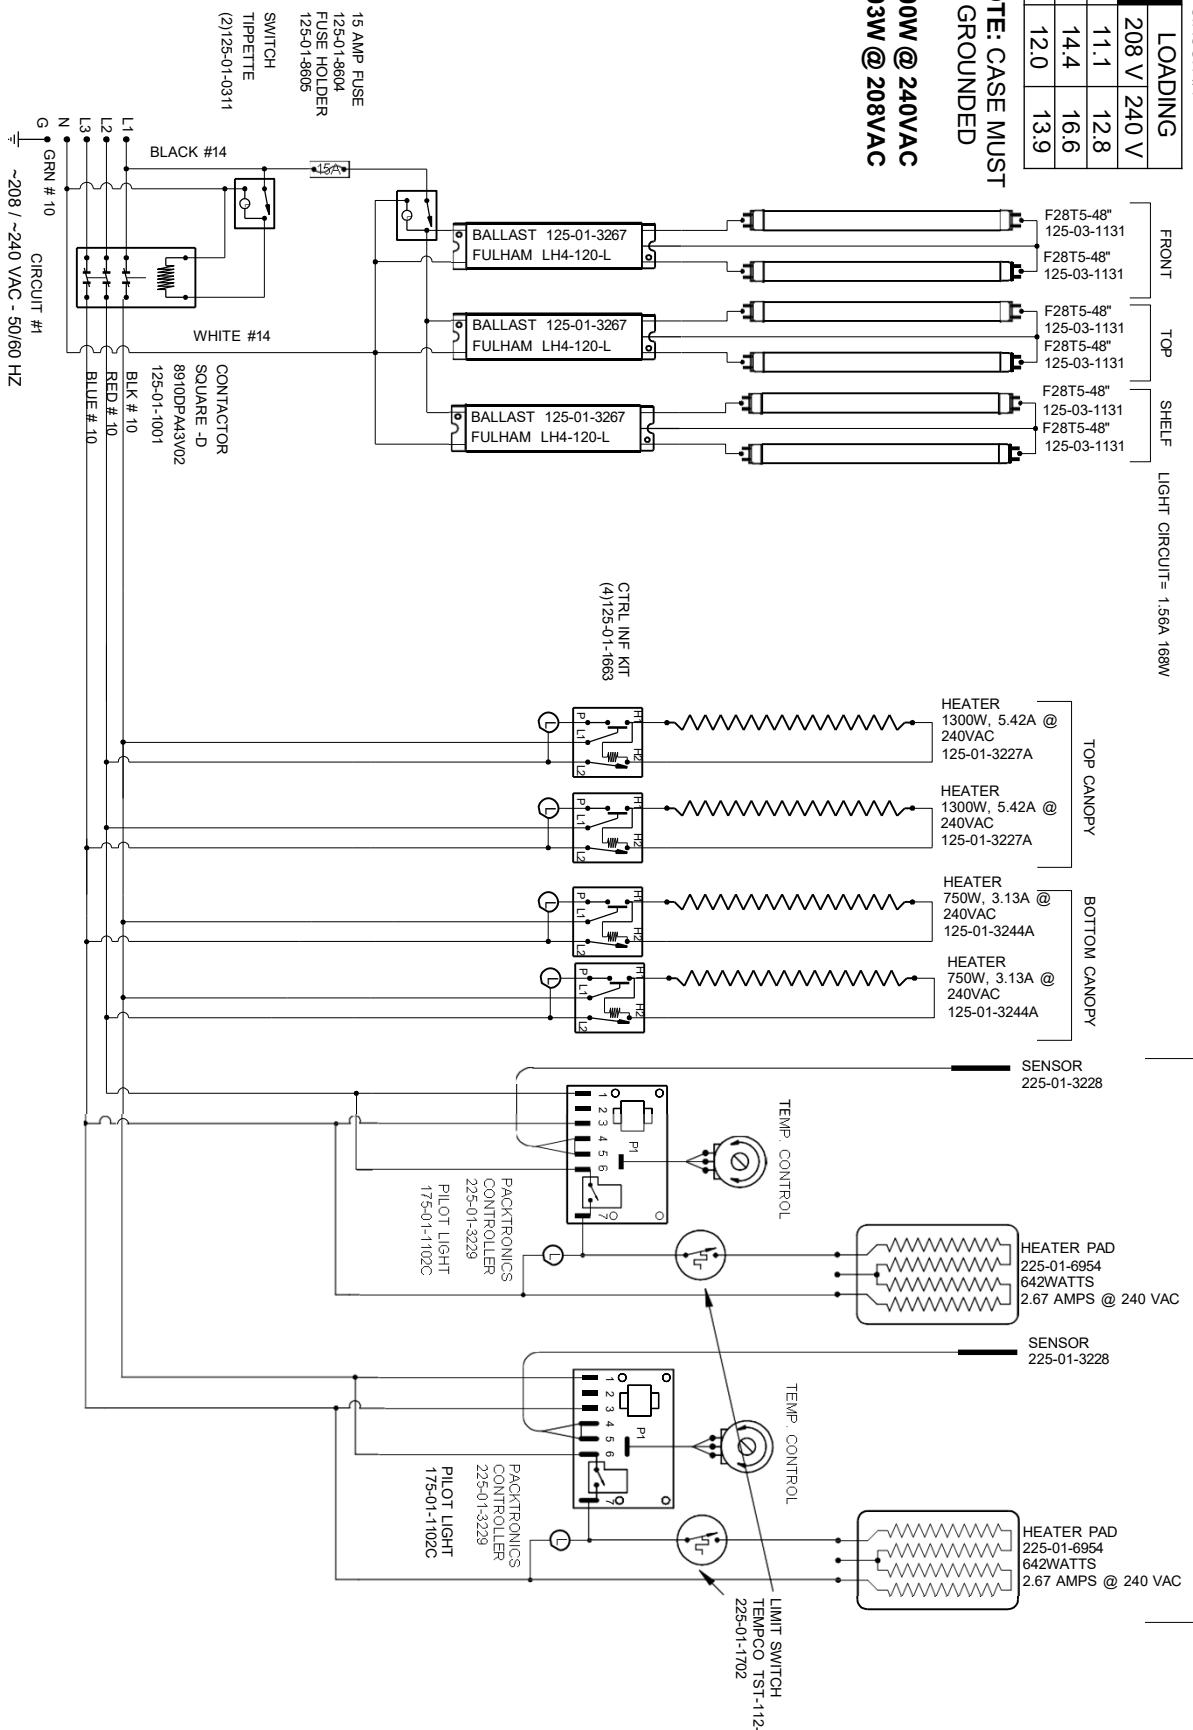

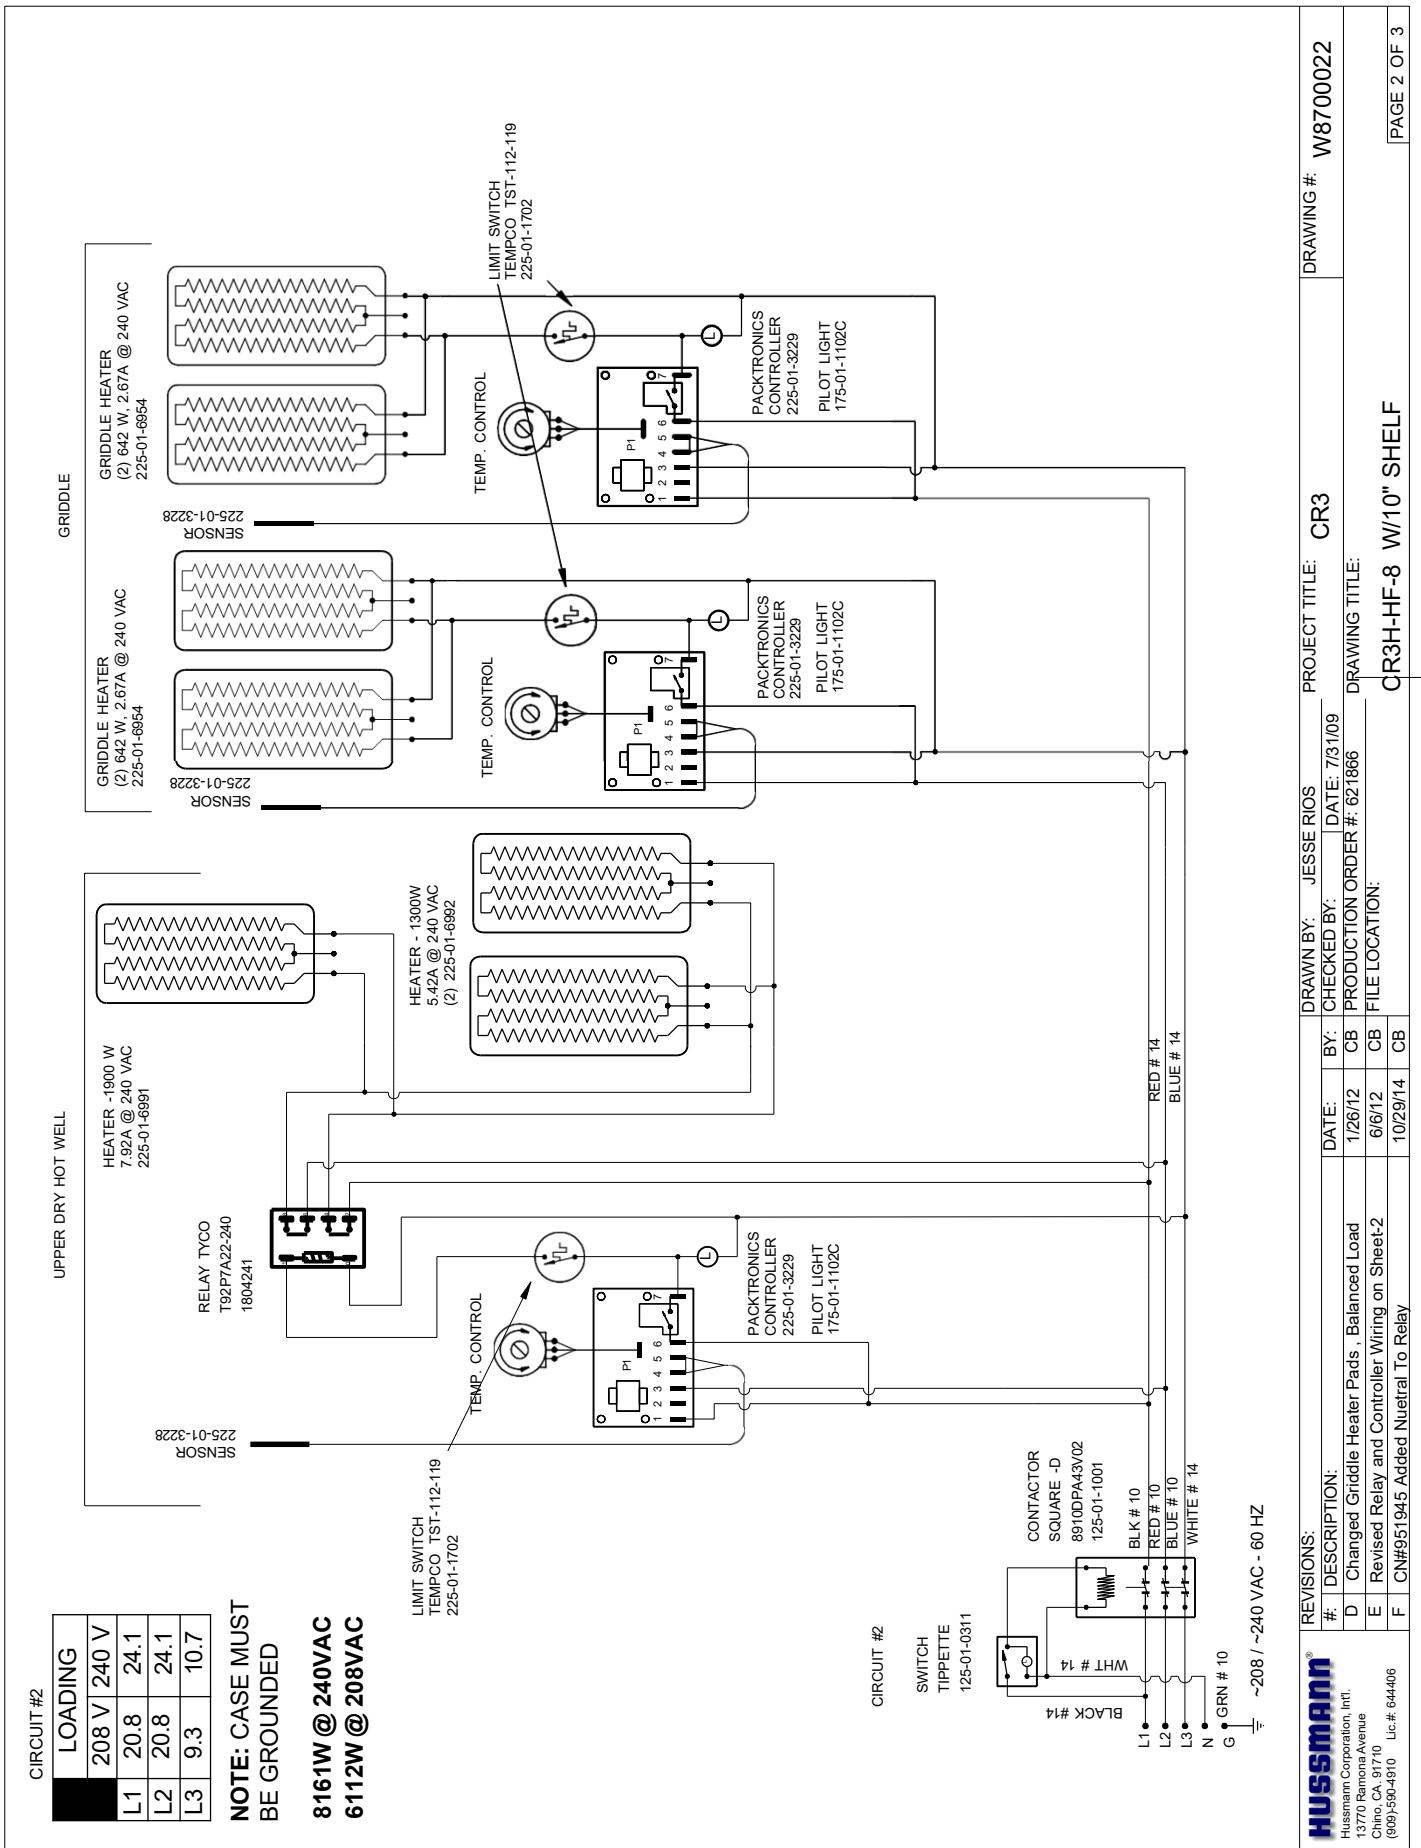

CIRCUIT #3


LOADING	
120 V	
L1	15.0

**NOTE: CASE MUST
BE GROUNDED**

RJ-45 NETWORK JACK
125-01-0202



NOTE FOR GFCI PROTECTION: IF MORE THAN ONE
SINGLE RECEPTACLE IS USED IN CONJUNCTION WITH
A GFCI DUPLEX RECEPTACLE "DOWNSTREAM" ON
THE LOAD SIDE, THE SUM OF ALL RECEPTACLES
SHOULD NOT BE MORE THAN 15A

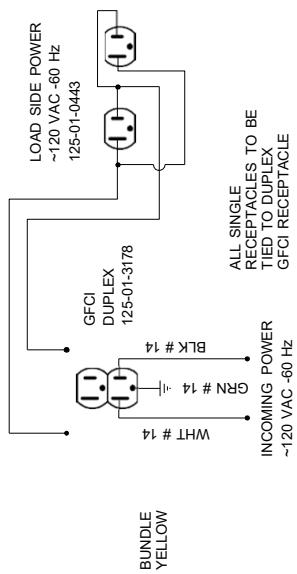


HUSSMANN®


REVISIONS:

#:	DESCRIPTION:	DATE:	DRAWN BY:	PROJECT TITLE:
D	Changed Grididle Heater Pads , Balanced Load	1/26/12	BY: CB	CHEKED BY: DATE: 7/31/09
E	Revised Relay and Controller Wiring on Sheet-2	6/6/12	FILE LOCATION:	PRODUCTION ORDER #: 62166 DRAWING TITLE:
F	CN#951945 Added Neutral To Relay	10/29/14	CB	

DRAWING #: W8700022

PAGE 3 OF 3

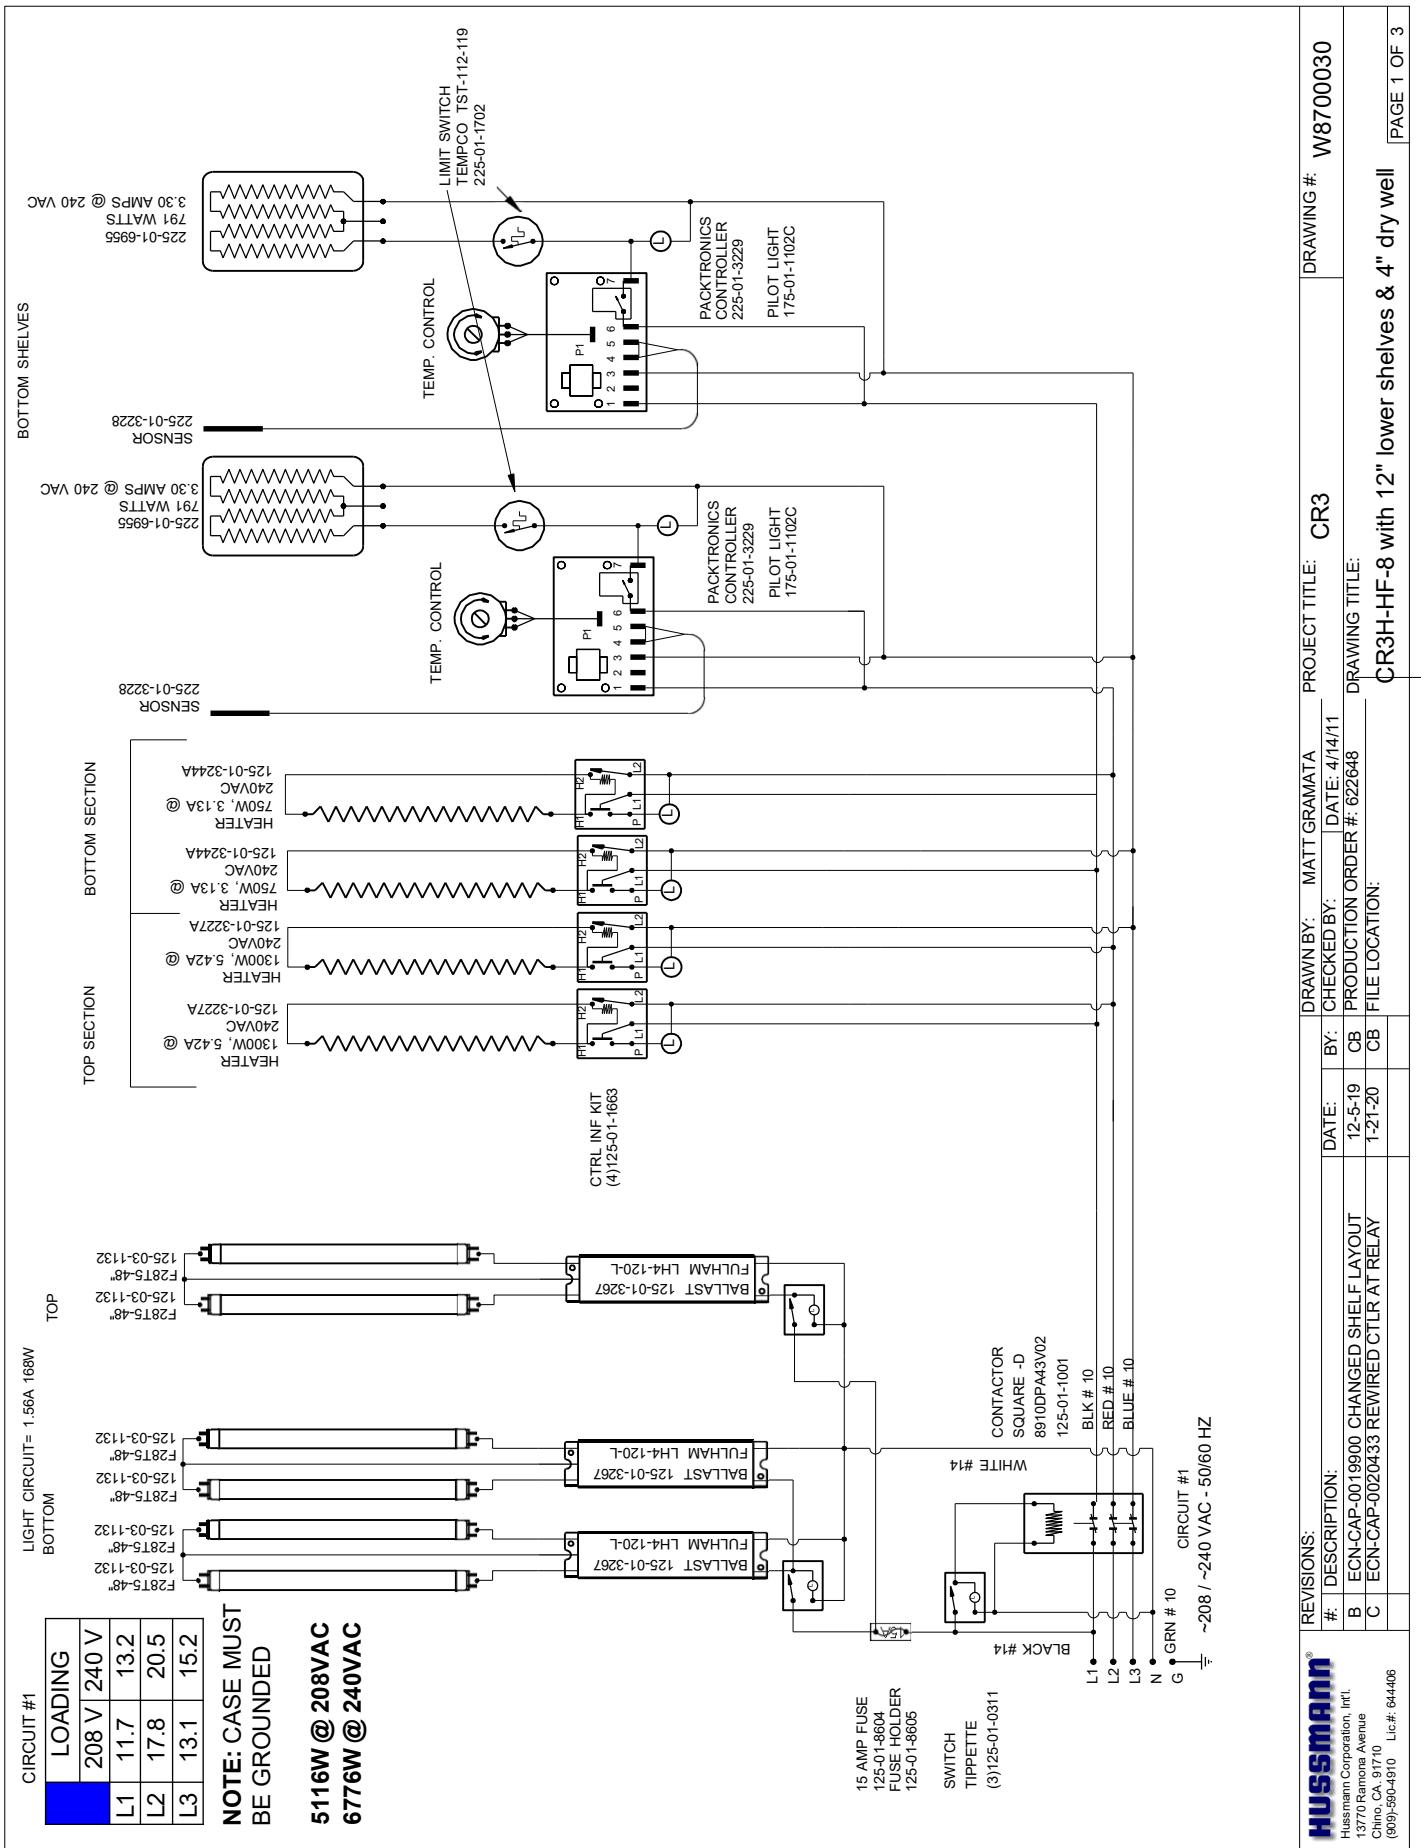

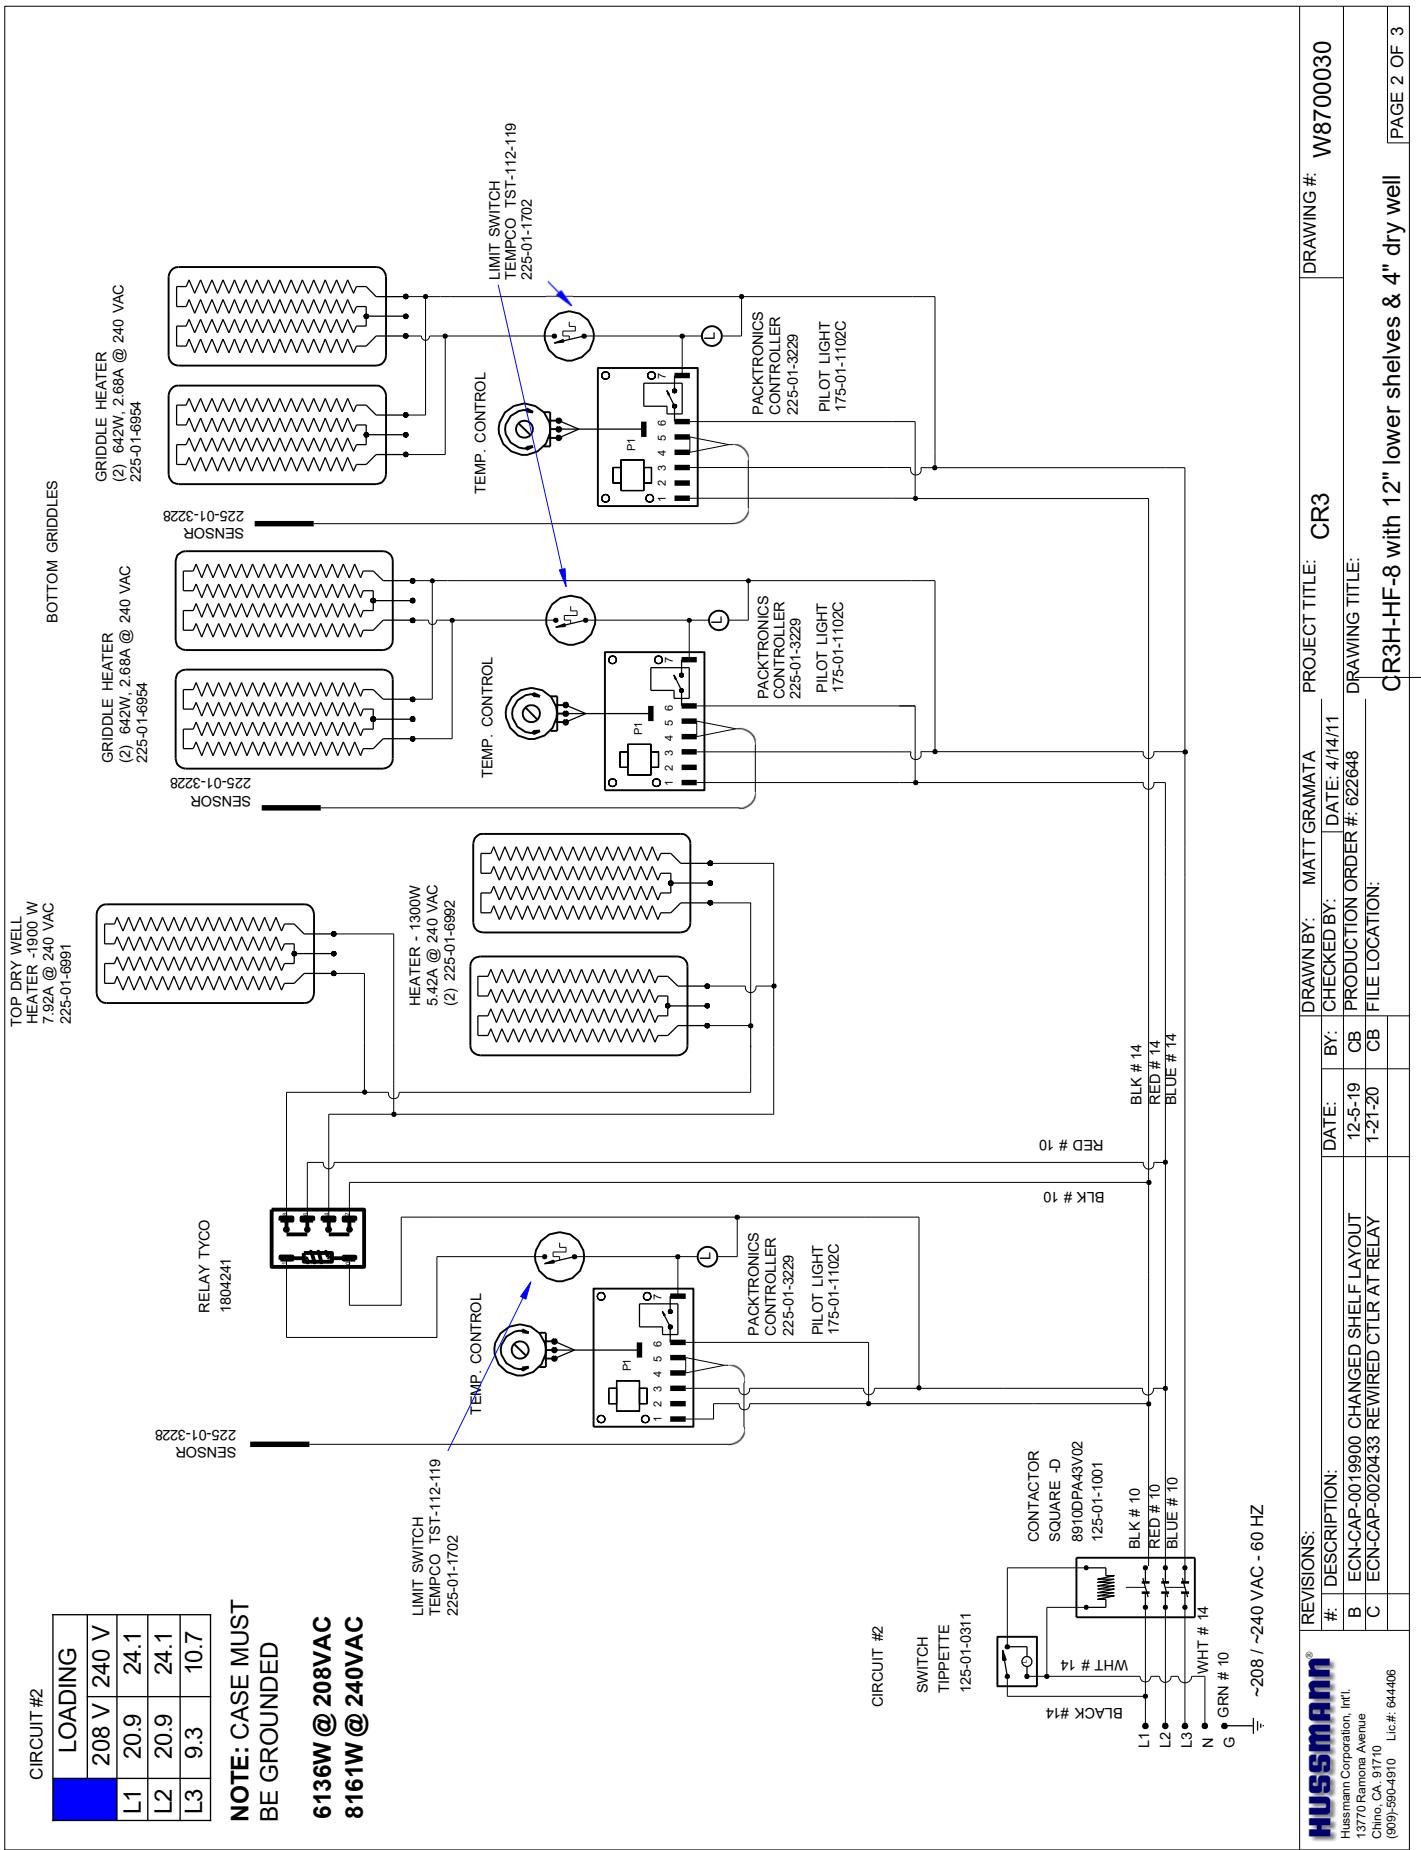

CIRCUIT #3


LOADING	
120 V	
L1	15.0

**NOTE: CASE MUST
BE GROUNDED**

RJ-45 NETWORK JACK
125-01-002



NOTE FOR GFCI PROTECTION: IF MORE THAN ONE
SINGLE RECEPTACLE IS USED IN CONJUNCTION WITH
A GFCI DUPLEX RECEPTACLE "DOWNSTREAM" ON
THE LOAD SIDE, THE SUM OF ALL RECEPTACLES
SHOULD NOT BE MORE THAN 15A

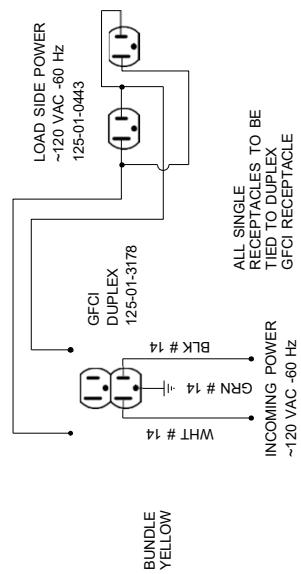

Hussmann®


REVISIONS:

DESCRIPTION: B ECON-CAP-0019900 CHANGED SHELF LAYOUT
C ECON-CAP-0020433 REWIRED CTR AT RELAY
13770 Ramona Avenue
Chino, CA 91710
(909) 500-4910 Lic.#: 644406

DRAWN BY:	MATT GRAMATA	PROJECT TITLE:	CR3	DRAWING #: W8700030
BY:	CHECKED BY:	DATE:	4/14/11	
B	CB	P	622348	DRAWING TITLE:
C	CB	FILE LOCATION:	CR3H-HF-8 with 12" lower shelves & 4" dry well	PAGE 3 OF 3

PENSIONN HISTORY		
REV	EN	DATE
A	EN-CR-005367	RELEASED TO PRODUCTION
		2016/05/05

CIRCUIT #1
LOADING
208V/240V
L1|L0|127
L2|L1|140
L3|75|86
3675W @ 208VAC
4891W @ 240VAC

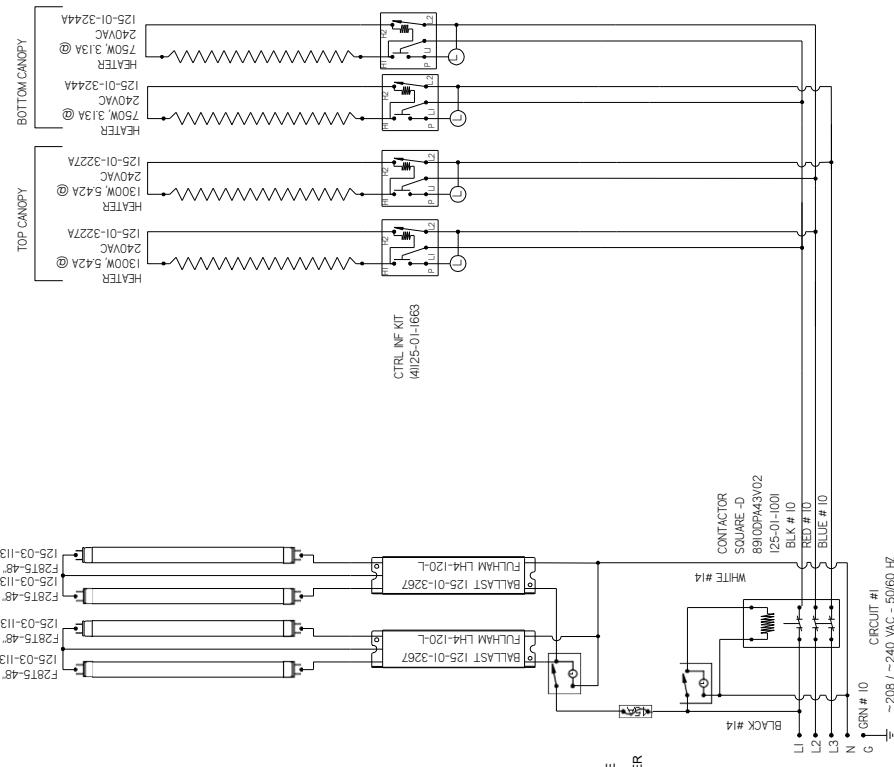

HUSSMANN
DIAGRAM-CR3TFH-8
SHEET 0 OF 3
W/OUT SHELF
ECONCAP-0003967
REVIEWED BY - CRAIG BOOREY
APPROVED BY - CRAIG BOOREY
UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES.
DECIMALS XX ± 0.3, XXX
±0.10 ANGLES ± 2°
PROJECTION


MATERIAL - N/A
DATE DRAWN - 10-5-16
DRAWN BY - CRAIG BOOREY
REVIEWED BY - CRAIG BOOREY
APPROVED BY - CRAIG BOOREY
SHEET 0 OF 3
UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES.
DECIMALS XX ± 0.3, XXX
±0.10 ANGLES ± 2°
PROJECTION

NOTES
CASE MUST BE GROUNDED
WHEN PASSING WIRES THROUGH METAL HOLES A GROMMET MUST BE USED

CIRCUIT #2
LOADING

208V	240V
L1 208	241
L2 208	241
L3 93	107

6I1ZN @ 208VAC
8I6IW @ 240VAC

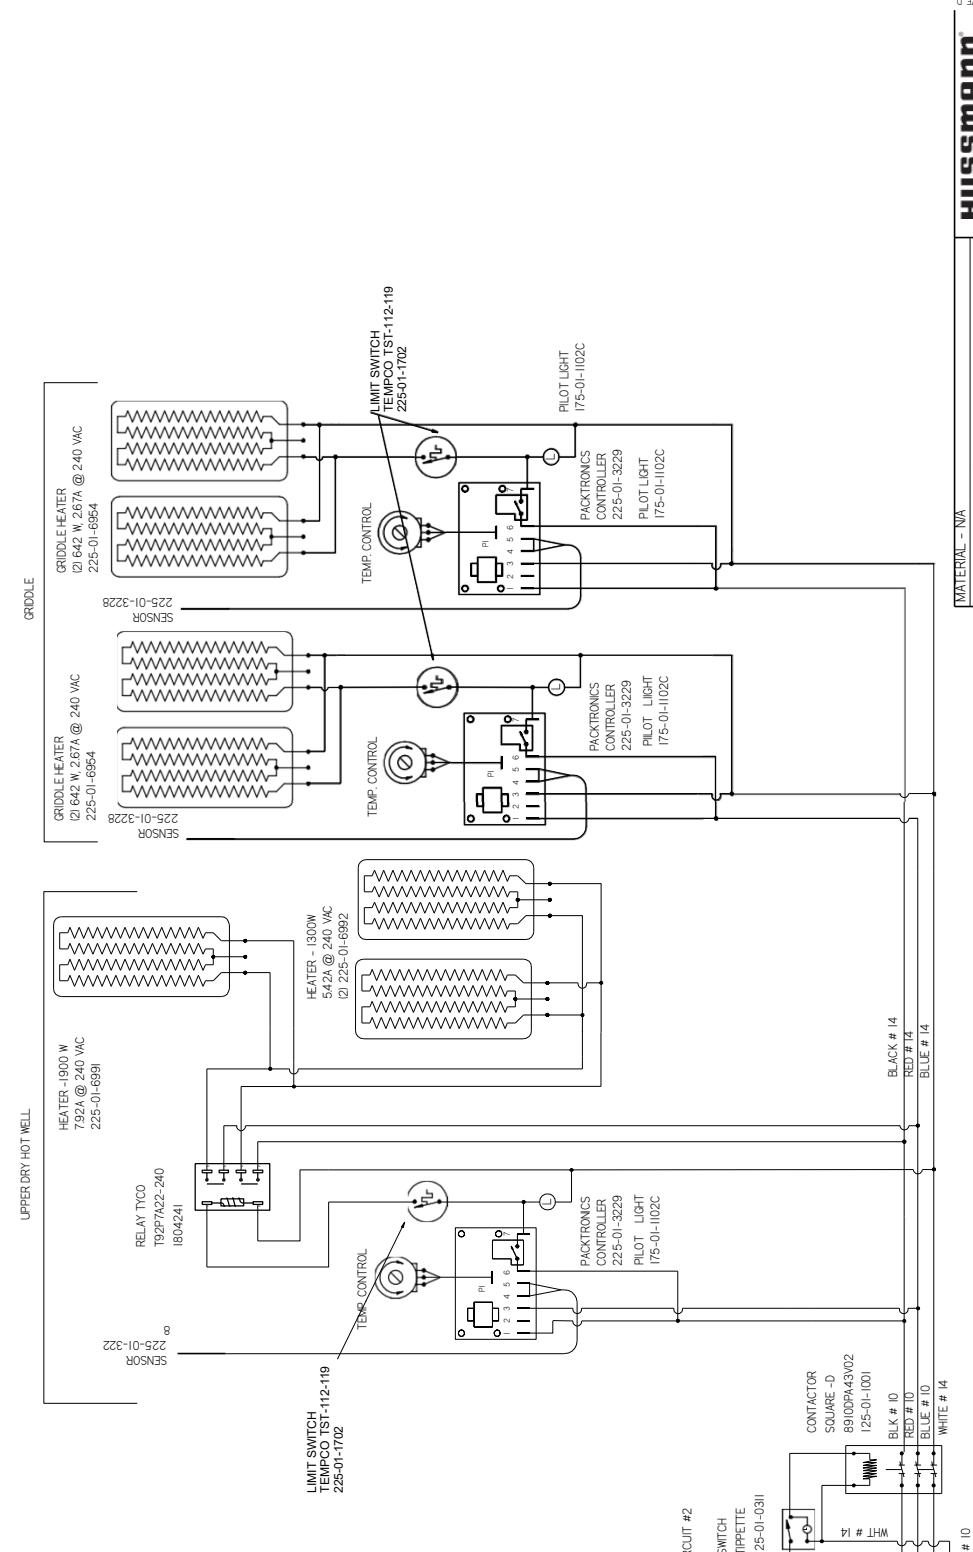


HUSSMANN
DIAGRAM-CR3TFH-8
W/OUT SHELF
PROJECTION

HUSSMANN CR3TFH-8
W/OUT SHELF
PROJECTION


MATERIAL - N/A
DATE DRAWN - 10-5-16
DRAWN BY - CRAIG BOOREY
REVIEWED BY - CRAIG BOOREY
APPROVED BY - CRAIG BOOREY
UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES.
DECIMALS XX ± 0.3, XXX
±0.10 ANGL E
ANGLES ± 2°

PENSION HISTORY		REV	EN	DATE	RELEASED BY / APPROVED
A	EONCAP-000597		2016/05	CB	CB

DIAGRAM-CR3TFH-8		W/OUT SHELF
HUESMANN		
SHEET 3 OF 3		
UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES.		
DECIMALS XX ± 0.3, XXX ± 0.10 ANGLES ± 2°		
E PROJECTION		

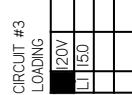CIRCUIT #3
LOADINGRJ-45 NETWORK JACK
125-01-0202

NOTE FOR GCFI PROTECTION IF MORE THAN ONE SINGLE RECEPTACLE IS USED IN CONJUNCTION WITH A GFCI DUPLEX RECEPTACLE 'DOWNSTREAM' ON THE LOAD SIDE, THE SUM OF ALL RECEPTACLES SHOULD NOT BE MORE THAN 15A

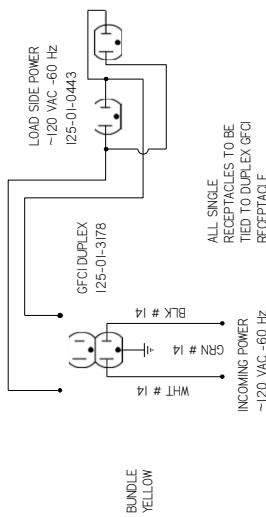

NOTES
CASE MUST BE GROUNDED
WHEN PASSING WIRES THROUGH METAL HOLES A GROMMET MUST BE USED

MATERIAL - N/A

DATE DRAWN - 10-5-16

DRAWN BY - CRAIG BOOREY

REVIEWED BY - CRAIG BOOREY

APPROVED BY - CRAIG BOOREY

SHEET 3 OF 3

UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES.

DECIMALS XX ± 0.3, XXX ± 0.10 ANGLES ± 2°

E PROJECTION

CIRCUIT #1

LOADING		
L1	208 V	240 V
L1	27.6	31.9
L2	25.6	29.6
L3	23.1	26.7

NOTE: CASE MUST BE GROUNDED

**12221W @ 240VAC
9163W @ 208VAC**


CANOPY LIGHTING
FRONT CASE SHELVES

LIGHT CIRCUIT 252W 2.33 AMPS


HEATER -1300W
5.42A @ 240 VAC
(2) 225-01-6892

TOP CASE

HEATER -1200W
7.92A @ 240 VAC
(2) 225-01-6891

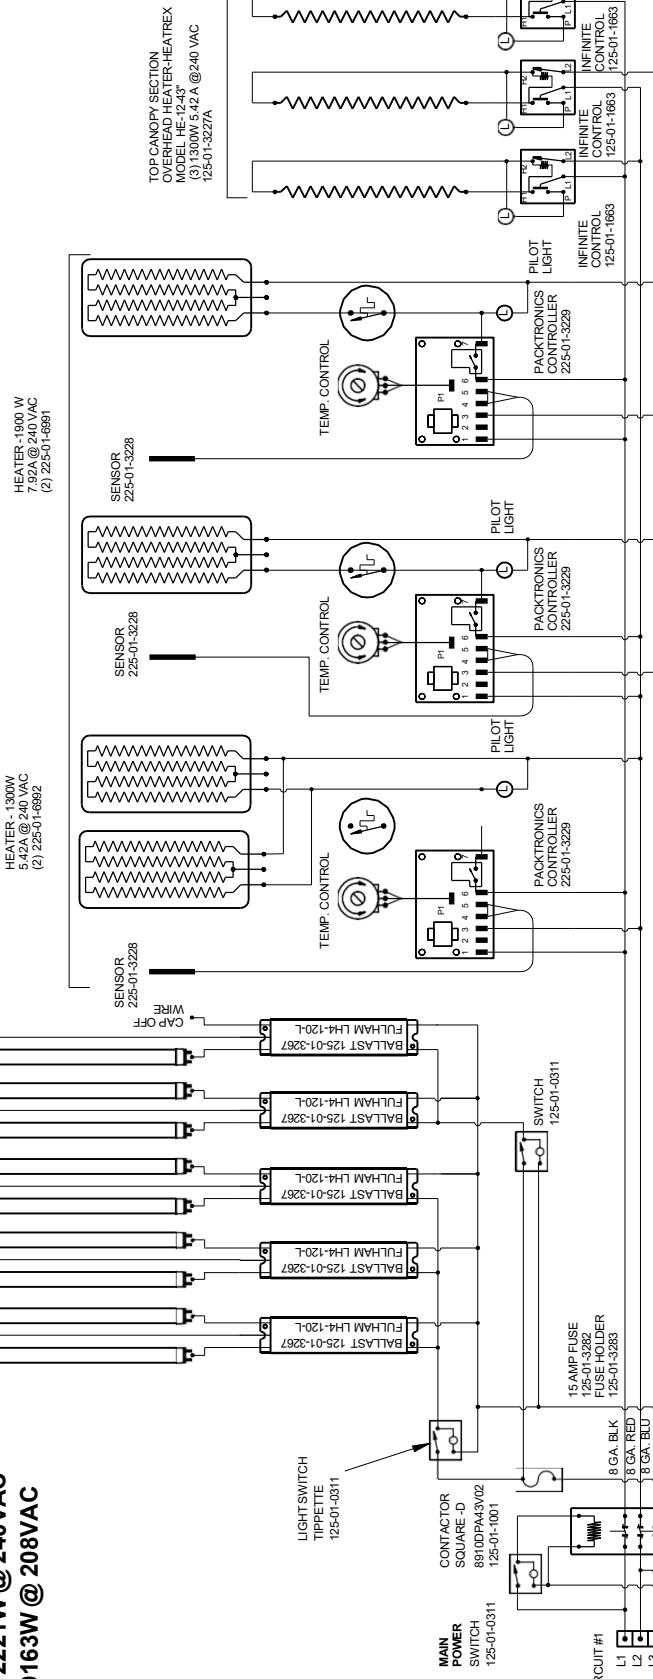

CIRCUIT #1
MAIN POWER SWITCH 125-01-0311
CIRCUIT #2
MAIN POWER SWITCH 125-01-0311
CIRCUIT #3
MAIN POWER SWITCH 125-01-0311
G

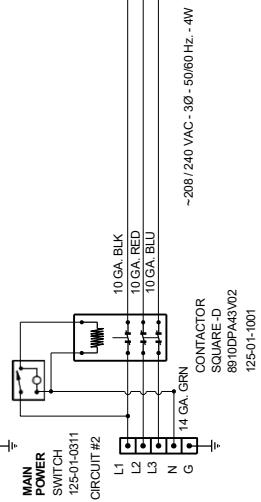

REVISIONS:

DESCRIPTION: DRAWN BY: CRAIG BOOREY PROJECT TITLE: CR3 DRAWING #: W6600066

Hussmann Corporation, Int'l.

13770 Ramona Avenue

Chino, CA 91710

Lic. # 644406

DATE: 12/14/12

CHECKED BY: CB

PRODUCTION ORDER #: _____

DRAWING TITLE: CR3H-HF-12 W/10" SHELF

SEE PAGE 2 OF 3

L1

L2

L3

FILE LOCATION: _____

CB


PAGE 1 OF 3

CIRCUIT #2	LOADING	208 V	240 V
L1	19.3	22.3	
L2	19.3	22.3	
L3	19.3	22.3	

**NOTE: CASE MUST
BE GROUNDED**

**9270W @ 240VAC
6953W @ 208VAC**

BOTTOM
GRIDDLE HEATERS
THERMOFLEX
(6) 643W 2.68A @240 VAC
225-01-6954

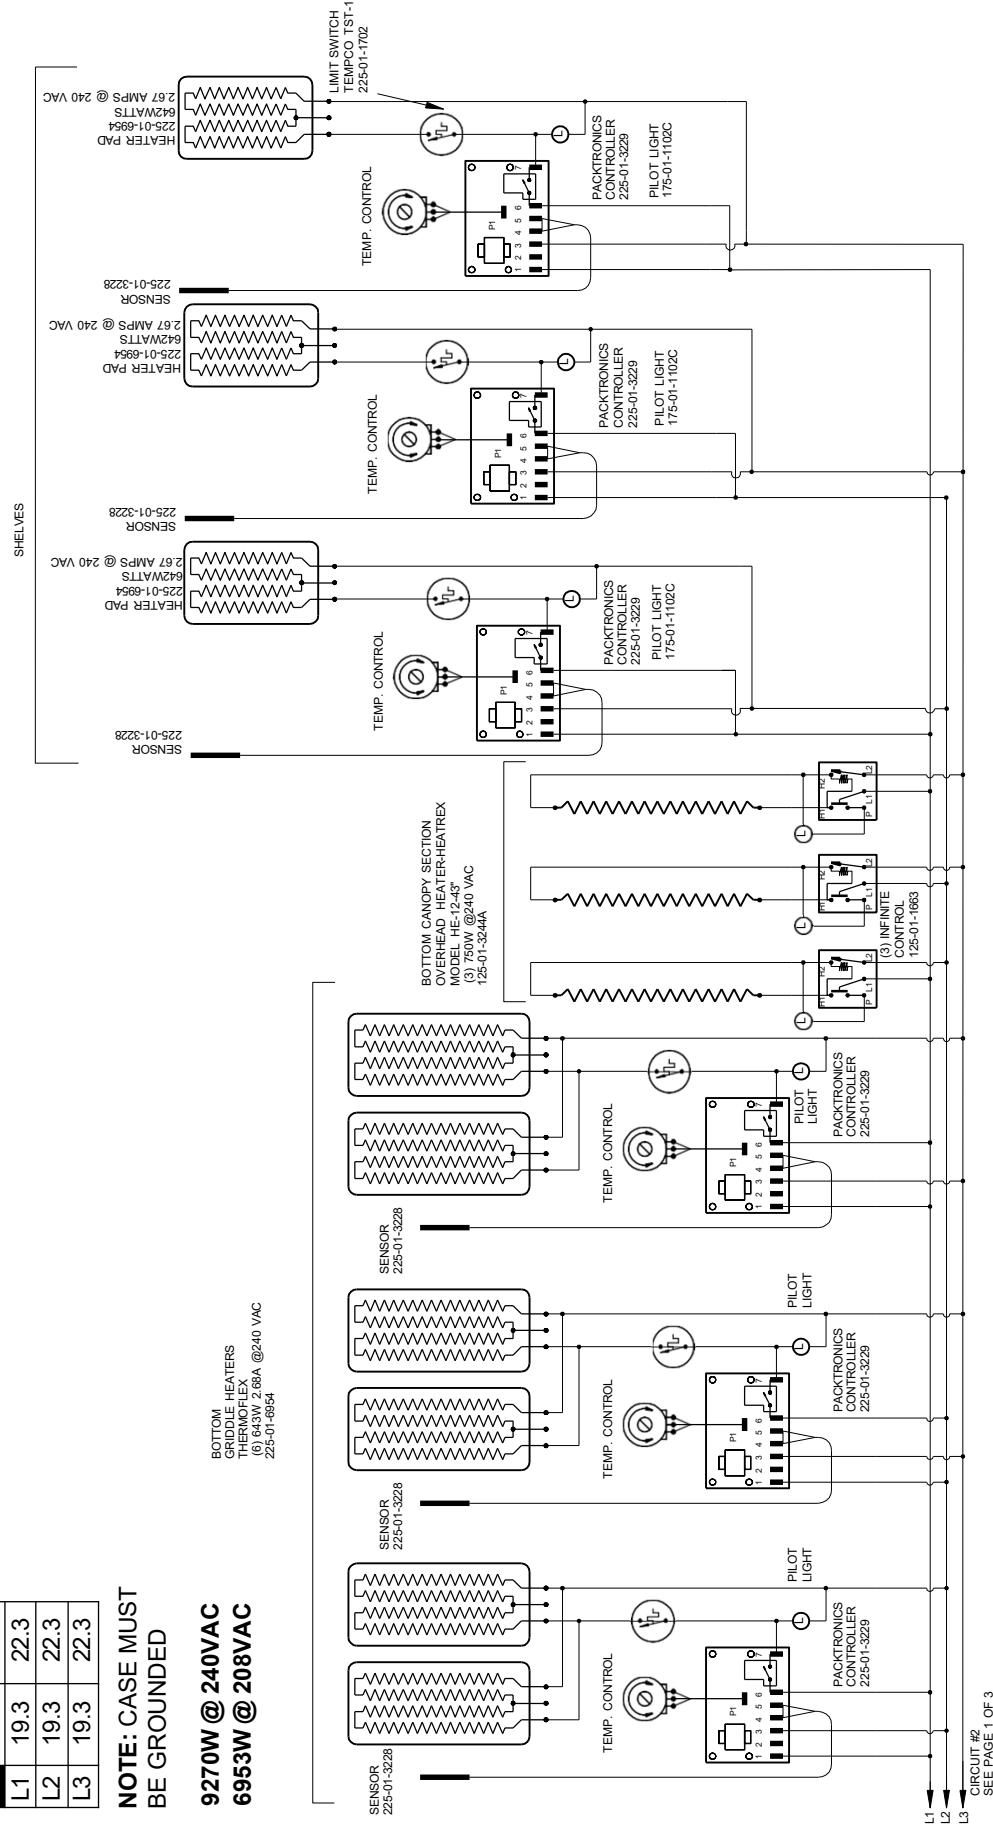

HUSSMANN®

DRAWN BY: CRAIG BOOREY
CHECKED BY: DATE: 12/

E: CR3

W6600066

	ECN-0009100 ADDED LIMIT SWITCHED	8/22/17	CB	PRODUCTION OR
	ECN-13669 REVISED TOP HATTERS LOADS	6/29/13	CB	FILE LOCATION:
E	ECN-COD-014517 REVISED WIRE GAUGES			

DRAWING TITLE:

DRAWING TITLE:
CR3H-HF-12 W/10

100

CIRCUIT #3


LOADING	
120 V	
L1	15.0

**NOTE: CASE MUST
BE GROUNDED**

RJ-45 NETWORK JACK
125-01-002



NOTE FOR GFCI PROTECTION: IF MORE THAN ONE
SINGLE RECEPTACLE IS USED IN CONJUNCTION WITH
A GFCI DUPLEX RECEPTACLE "DOWNSTREAM" ON
THE LOAD SIDE, THE SUM OF ALL RECEPTACLES
SHOULD NOT BE MORE THAN 15A

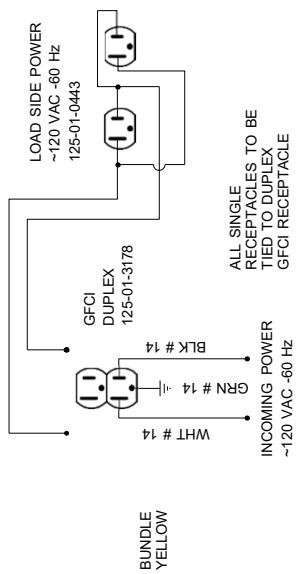

Hussmann®
Hussmann Corporation, Int'l.
13770 Ramona Avenue
Chino, CA 91710
(909) 500-4910 Lic.#: 644406

REVISIONS:

#:	DESCRIPTION:	DATE:	CRAIG BOOREY	PROJECT TITLE:	CR3	DRAWING #: W6600066
E	ECN-0009100 ADDED LIMIT SWITCHED	8/22/17	CB	CHECKED BY:	DATE: 12/14/12	DRAWING TITLE:
F	ECN-0013669 REVISED TOP HEATERS/LOADS	6/21/21	CB	PRODUCED ORDER #:	FILE LOCATION:	CR3H-HF-12 W/10" SHELF
G	ECN-COD-0014517 REVISED WIRE GAUGES	7/29/31	CB			PAGE 3 OF 3

CIRCUIT #1
LOADING

208V	240V
L	12.4
U	4.7
GND	2.42

350.4W @ 208VAC
257.9W @ 240VAC

CIRCUIT #2

RJ-45 NETWORK

JACK 125-01-0202

(1) GFCI DUPLEX
125-01-3178

ALL SINGLE
RECEPTICLES TO BE
TIED TO DUPLEX
GFCI RECEPTACLE

BUNDL
E
YELLO
W

INCOMING POWER
~120 VAC - 60 Hz

LOWER FRONT SECTION
LIGHT CIRCUIT = 16A 17W
LIGHT CIRCUIT = 28W 26A

F28T5-48

F28T5-03-113

4 LED LIGHT

4 LED LIGHT

125-03-113


125-03-48

BLK # 14

WHT # 14

REV/SPEC HISTORY

REV	ECN	DATE	REV BY	APPR BY
A	987576	2015/06/15	RELEASED TO PRODUCTION	CB CB
B	ECN-CAR-001-2699	2015/06/07	CHANGED ANTI-SWEAT THERM	CB CB
C	ECN-CAR-001-4507	2015/06/07	ADDED OPTIONAL REAR TONGUE	CB CB
D	ECN-COO-001-0141	2013/07/05	CHANGED FAN MOTOR	CB CB

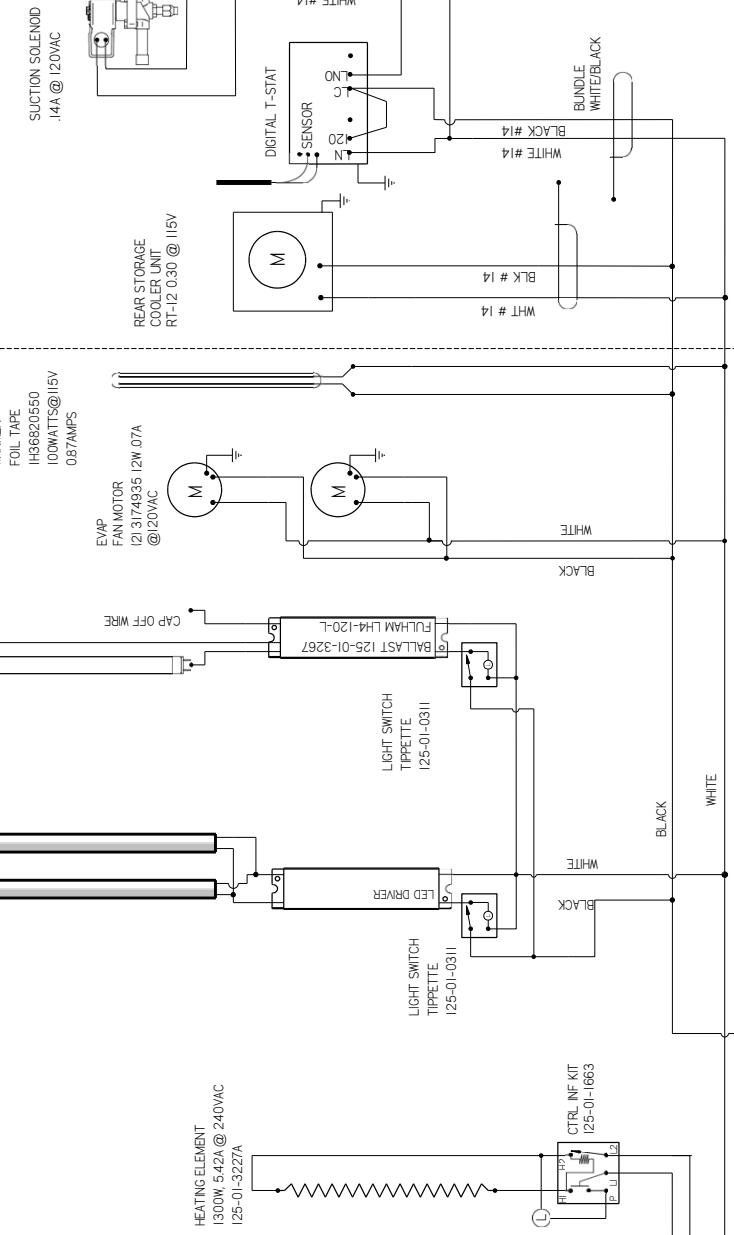

MATERIAL - NA

DATE DRAWN - 6-15-15

DRAWN BY - CRAIG BOOREY

REVIEWED BY - CRAIG BOOREY

APPROVED BY - CRAIG BOOREY

SHEET 1 OF 1

-4CR-I-DS-R

REF -

THIRD

ANGL

E

PROJECTION

Hussmann®

DIAGRAM-R3-P-4-SH

ECN# - 987576

REF -

-4CR-I-DS-R

NOTES

CASE MUST BE GROUNDED

W6600152 | D




CIRCUIT #1

LOADING	
208 V	240 V
L1	13.0
L2	11.6
	13.4

**NOTE: CASE MUST
BE GROUNDED**


**3624W @ 240VAC
2711W @ 208VAC**

HEATER PAD
THERMOFLEX® HEATER
PAD
1900W, 7.92A @ 240 VAC
225-01-6891

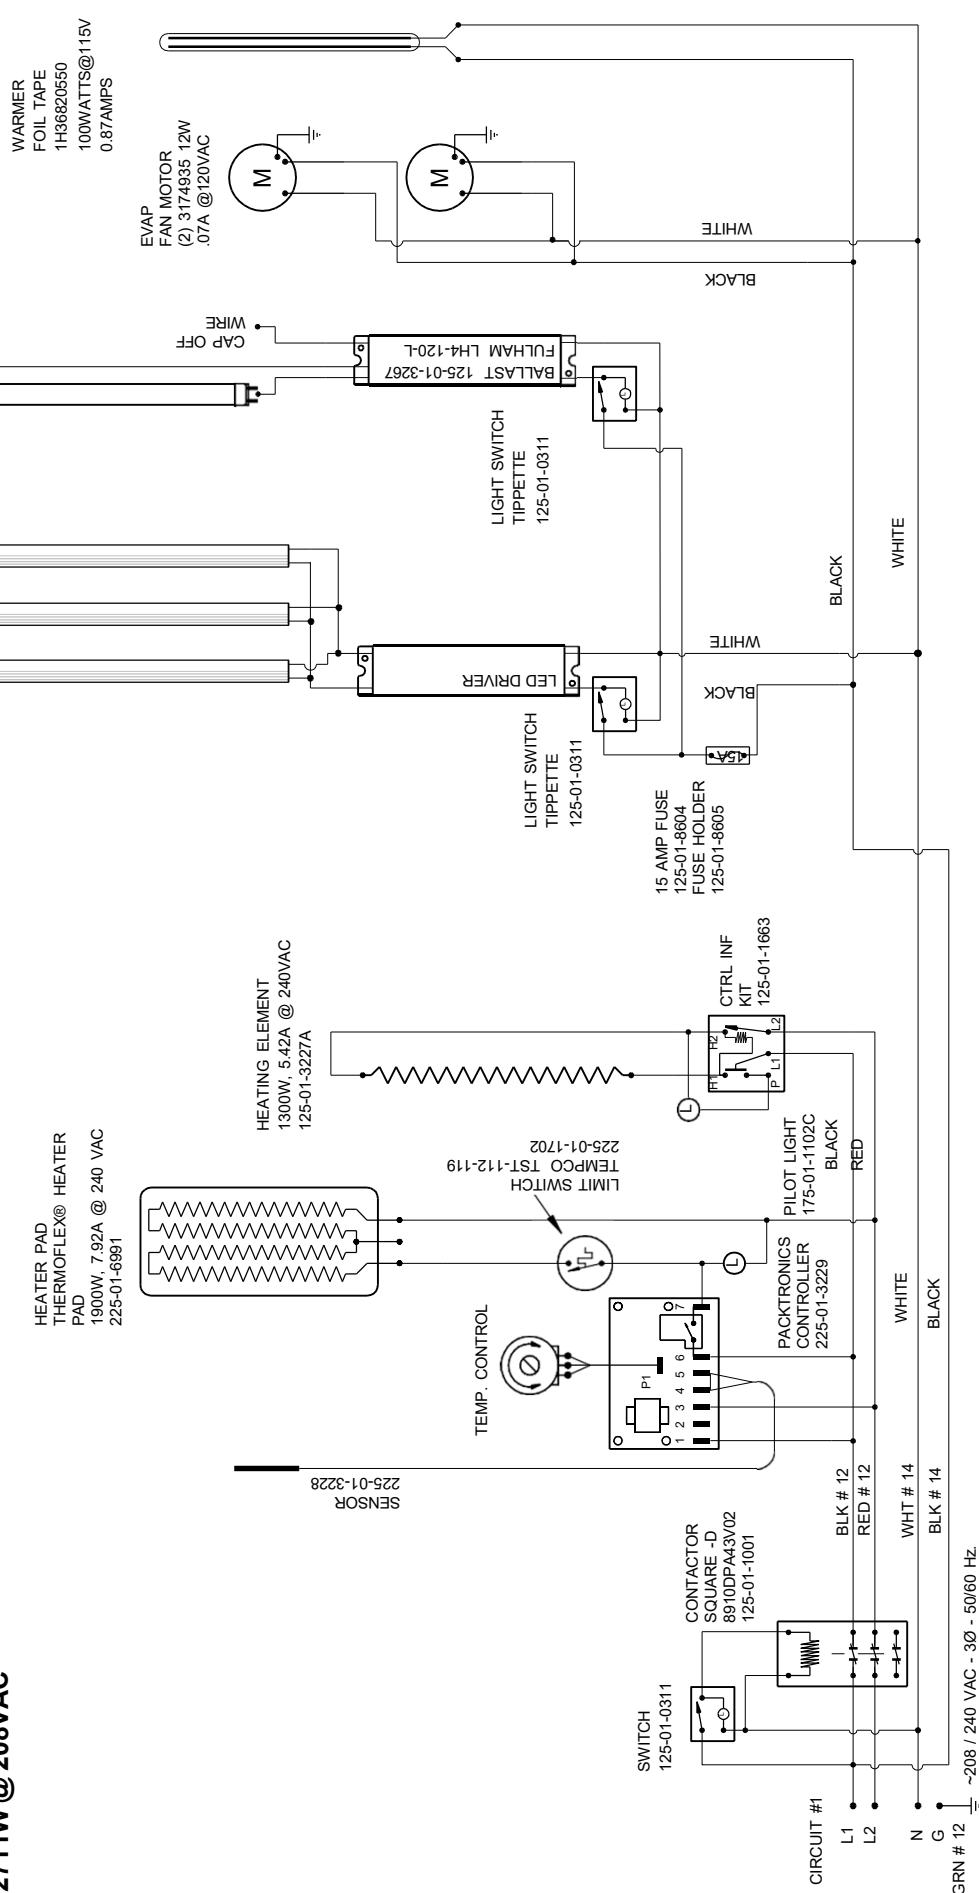

LOADING	
120 V	
L1	15.0

**NOTE: CASE MUST
BE GROUNDED**

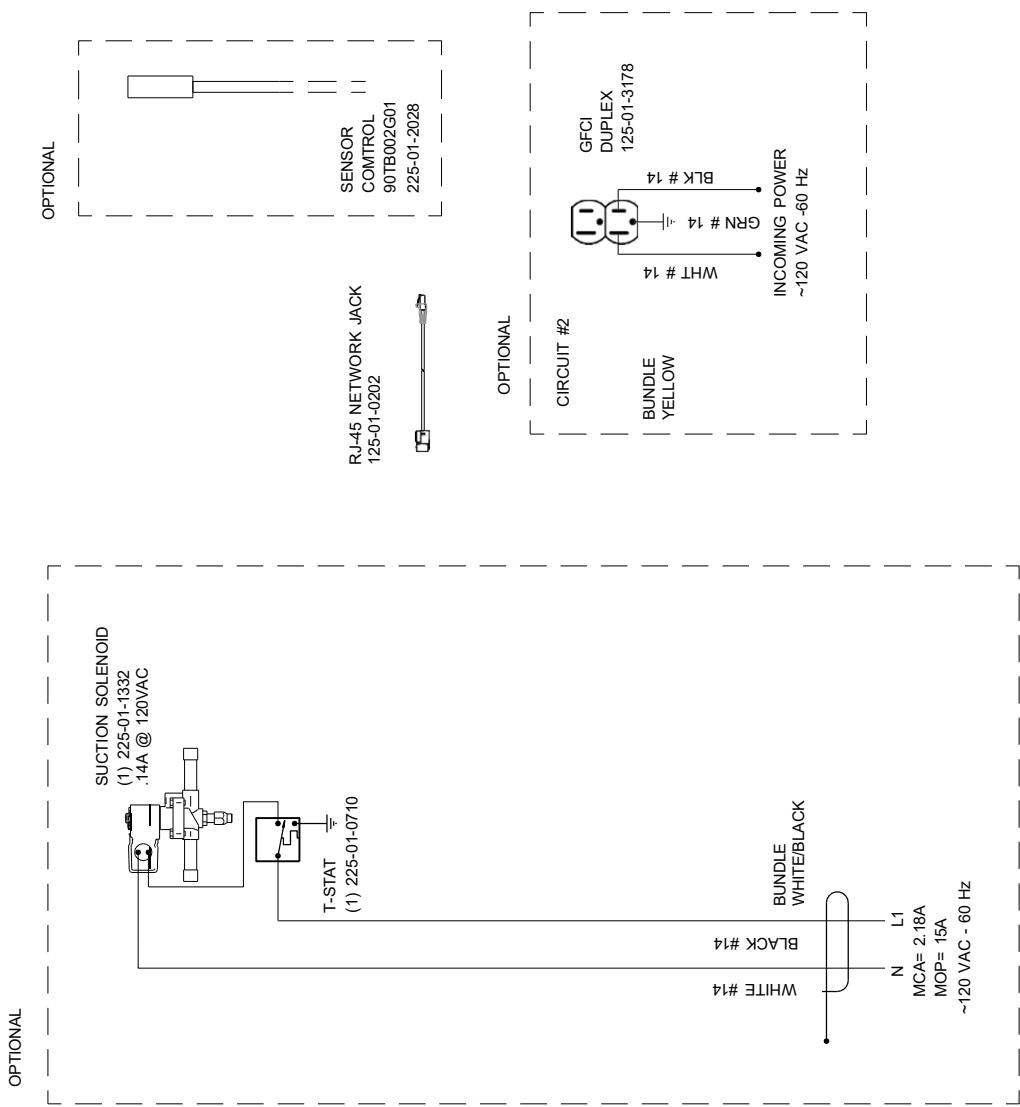

CIRCUIT #:

LOADING	V	Amps
	208	240
L1	14.1	16.3
L2	12.9	14.9

**NOTE: CASE MUST
BE GROUNDED**

**2933W @ 208VAC
3912W @ 240VAC**

HEATER PAD
(3)490W, 2.04A @ 240 VAC
225-01-3528T

225-01-3228
SENSOR

WARMER
125-01-0767
TYCO
THERMAL
CONTROLS
10BTY1-CCR
60 WATTS
0.5AMP@120V

TEMP. CONTROL

225-01-1702
LIMIT SWITCH
TEMPCO TST-112-119

PACKTRONICS
CONTROLLER
225-01-3229
PILOT LIGHT
175-01-102C
1H29361550

HEATING ELEMENT
2100W, 8.75A @ 240VAC
125-01-3236A
1H29361550

SWITCH
125-01-0311
CONTACTOR
SQUARE_D
8910DP443/02
125-01-1001
BLK # 10
RED # 10
WHT # 14
BLK # 14
BLK # 14
GRN # 10

~208 / 240 VAC - 60 Hz.

SHELF
CANOPY
LIGHTS


3. LED LIGHT

3. LED LIGHT

3. LED LIGHT

LIGHT CIRCUIT= 0.63A 68.4W

EVAP
FAN MOTOR 12W
(3) 3174935 .07A EA
125-03-1129
F21T5-36"
125-03-1129
F21T5-36"

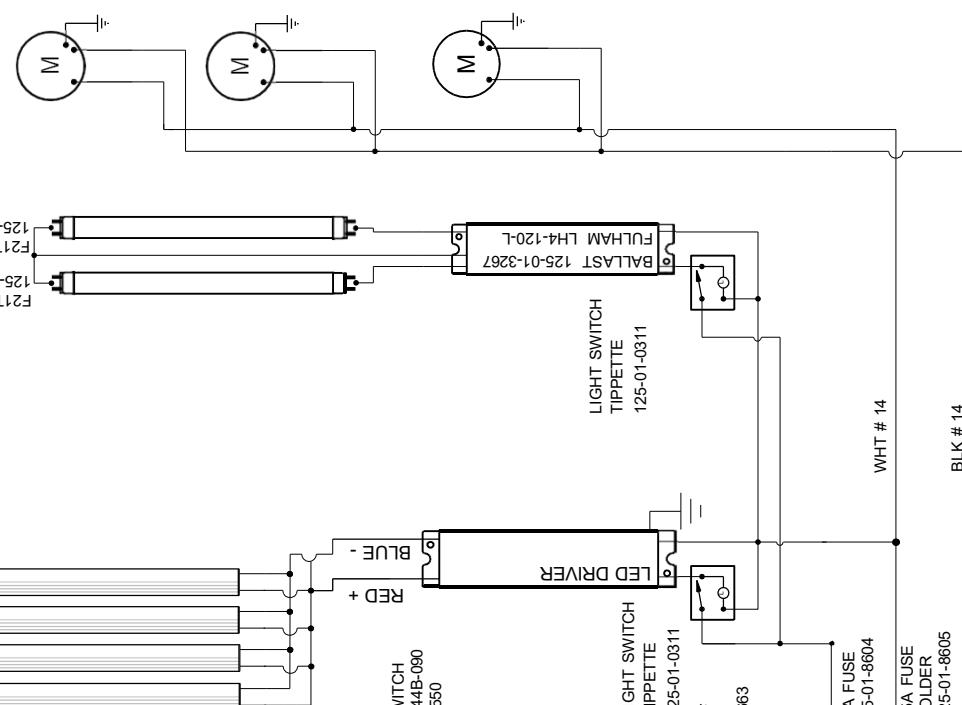

Hussmann®
REVISIONS:

DRAWN BY: JESSE RIOS
DRAWING #: W1800191

DESCRIPTION:

DATE: BY:
CHECKED BY:

PROJECT TITLE: R3

DATE: 12/10/08

FILE LOCATION:

FILE LOCATION:

PRODUCTION ORDER #: 603701

FILE LOCATION:

FILE LOCATION:

C Placed fans/heater tape before light circuit fuse

D ECN-CAP-00064-56 Changed Lights & Fans

E ECN-COD-0018141 Changed Fan Motors


CR3H-6-REM

CIRCUIT #2

LOADING	120 V	
L1	15.0	

**NOTE: CASE MUST
BE GROUNDED**

NOTE FOR GFCI PROTECTION: IF MORE THAN ONE SINGLE RECEPTACLE IS USED IN CONJUNCTION WITH A GFCI DUPLEX RECEPTACLE "DOWNTREAM" ON THE LOAD SIDE, THE SUM OF ALL RECEPTACLES SHOULD NOT BE MORE THAN 15A

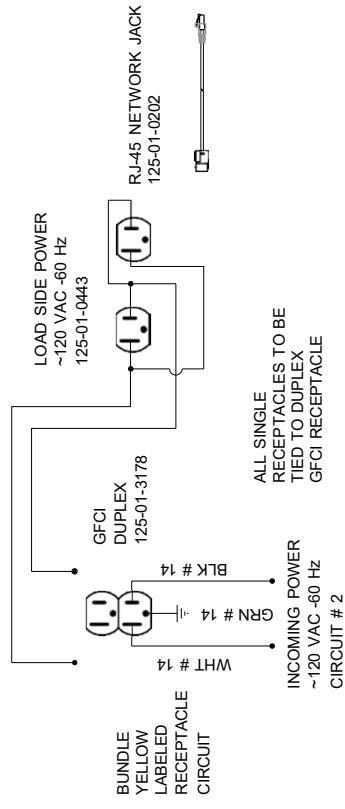

Hussmann®
Hussmann Corporation, Int'l.
13770 Ramona Avenue
Chino, CA, 91710
(909)-595-4910 Lic.#: 644406

REVISIONS:
DESCRIPTION: DATE: DRAWN BY: CHECKED BY: PROJECT TITLE: DRAWING #:
C Placed fans/heater tape before light circuit fuse 3/19/10 JR JESSE RIOS R3 W1800191

D ECN-CAP-00006456 Changed Lights & Fans 2/13/17 CB PRODUCTION ORDER #: 603701 DRAWING TITLE:
E ECN-COD-0018141 Changed Fan Motors 7/5/23 CB FILE LOCATION:
CR3H-6-REM


CIRCUIT #1

CIRCUIT #	LOADING	VOLTAGE	AMPS
L1	208 V	240 V	24.5
L2	21.2	24.5	22.1
	19.2	22.1	

**NOTE: CASE MUST
BE GROUNDED**

**4411W @ 208VAC
5880W @ 240VAC**

WARMER
FOIL TAPE
1H36821550
150 WATTS @ 115V
1.30 AMPS

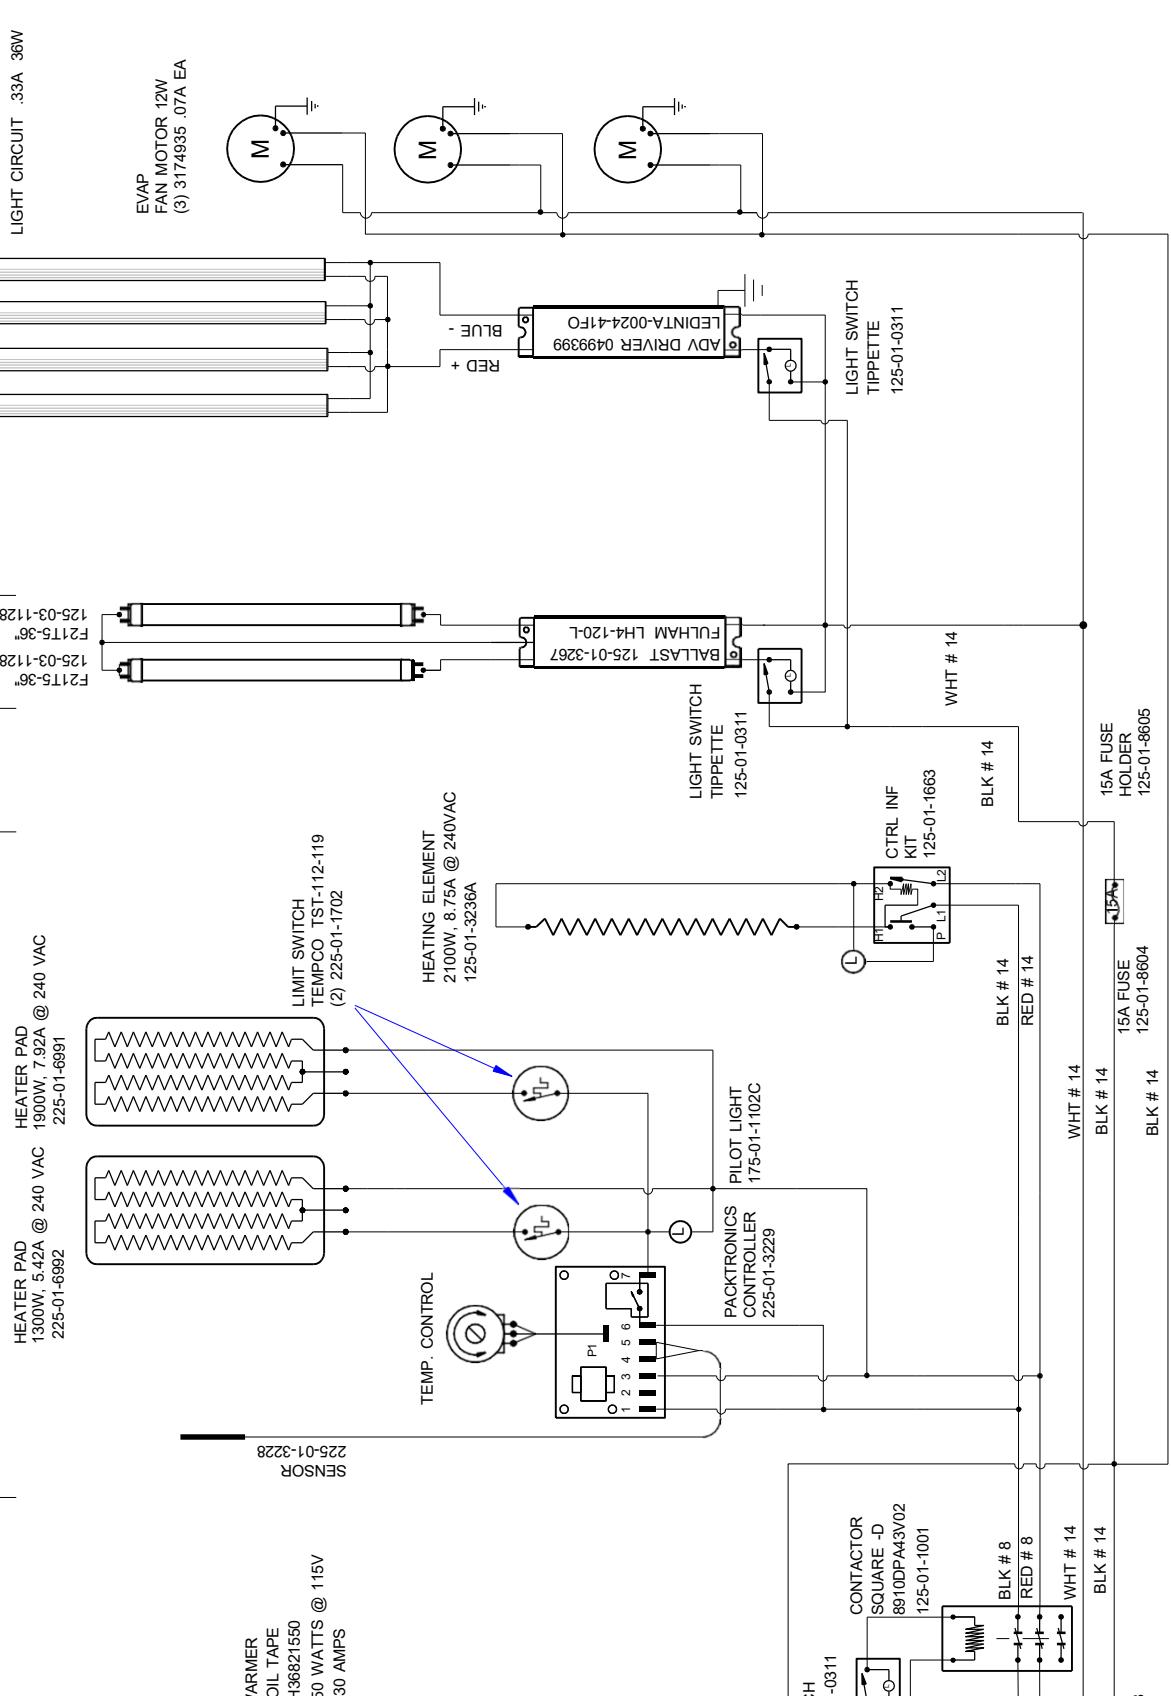

Hussmann®

REVISIONS:

: DESCRIPTION: DRAWN BY: JESSE RIOS DRAWING #: W1800195

D : Added Fan Motor to DWG DATE: 4/21/12 BY: CB CHECKED BY: CB

E : ECN-CAP-001 Changed Anti-Sweat Heater DATE: 6/8/18 CB PRODUCTION ORDER #: 622060 FILE LOCATION: CB

F : ECN-COD-001 Changed Fan Motor DATE: 7/5/23 CB

Hussmann Corporation, Int'l.
1370 Ramona Avenue
Chino, CA, 91710
(909) 956-4910 Lic.#: 644406


CR3H-6-REM

PAGE 1 OF 2

CIRCUIT #2	LOADING
L1	120 V

NOTE: CASE MUST BE GROUNDED

NOTE FOR GFCI PROTECTION: IF MORE THAN ONE SINGLE RECEPTACLE IS USED IN CONJUNCTION WITH A GFCI DUPLEX RECEPTACLE "DOWNTREAM" ON THE LOAD SIDE, THE SUM OF ALL RECEPTACLES SHOULD NOT BE MORE THAN 15A

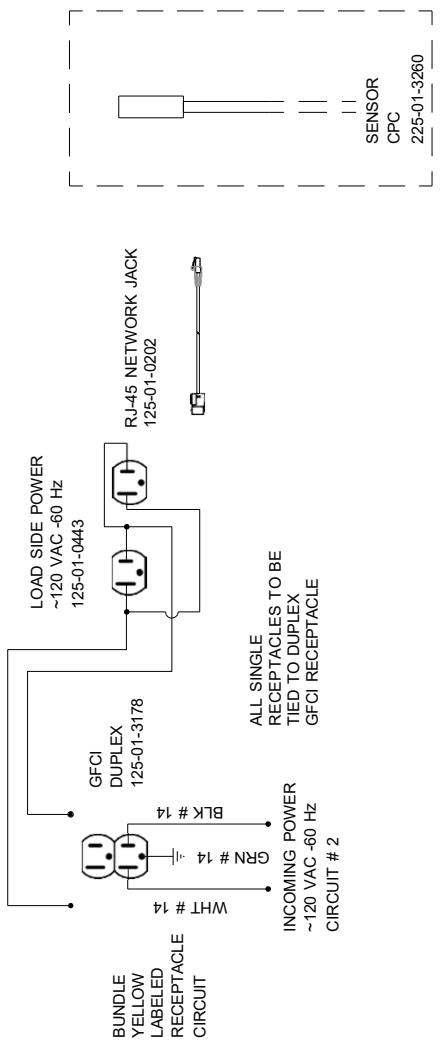

Hussmann®
Hussmann Corporation, Int'l.
13770 Ramona Avenue
Chino, CA, 91710
(909)-595-4910 Lic.#: 644406


REVISIONS:
DESCRIPTION: DATE: DRAWN BY: CHECKED BY: PROJECT TITLE: DRAWING #:
D Added Fan Motor to DWG 4/2/1/12 CB JESSE RIOS R3 W1800195

E EON-CAP-0012699 Changed Anti-Sweat Heater 6/8/18 CB DATE: 11/9/09
F ECN-COD-0018141 Changed Fan Motor 7/5/23 CB PRODUCTION ORDER #: 622060
FILE LOCATION:
DRAWING TITLE:
CR3H-6-REM

CIRCUIT #1

LOADING	
208 V	240 V
L1	21.2
L2	19.2

**NOTE: CASE MUST
BE GROUNDED**
**4411W @ 208VAC
5880W @ 240VAC**

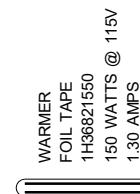


WARMER
FOIL TAPE
1H26621550
150 WATTS @ 115V
1.30 AMPS

SENSEOR
225-01-3228

HEATER PAD
1300W 5.42A @ 240 VAC
225-01-6992

HEATER PAD
1900W 7.92A @ 240 VAC
225-01-6991

LIGHT CIRCUIT= .33A 36W
LOWER FRONT SECTION
TOP LIGHT CIRCUIT= .39A 42W

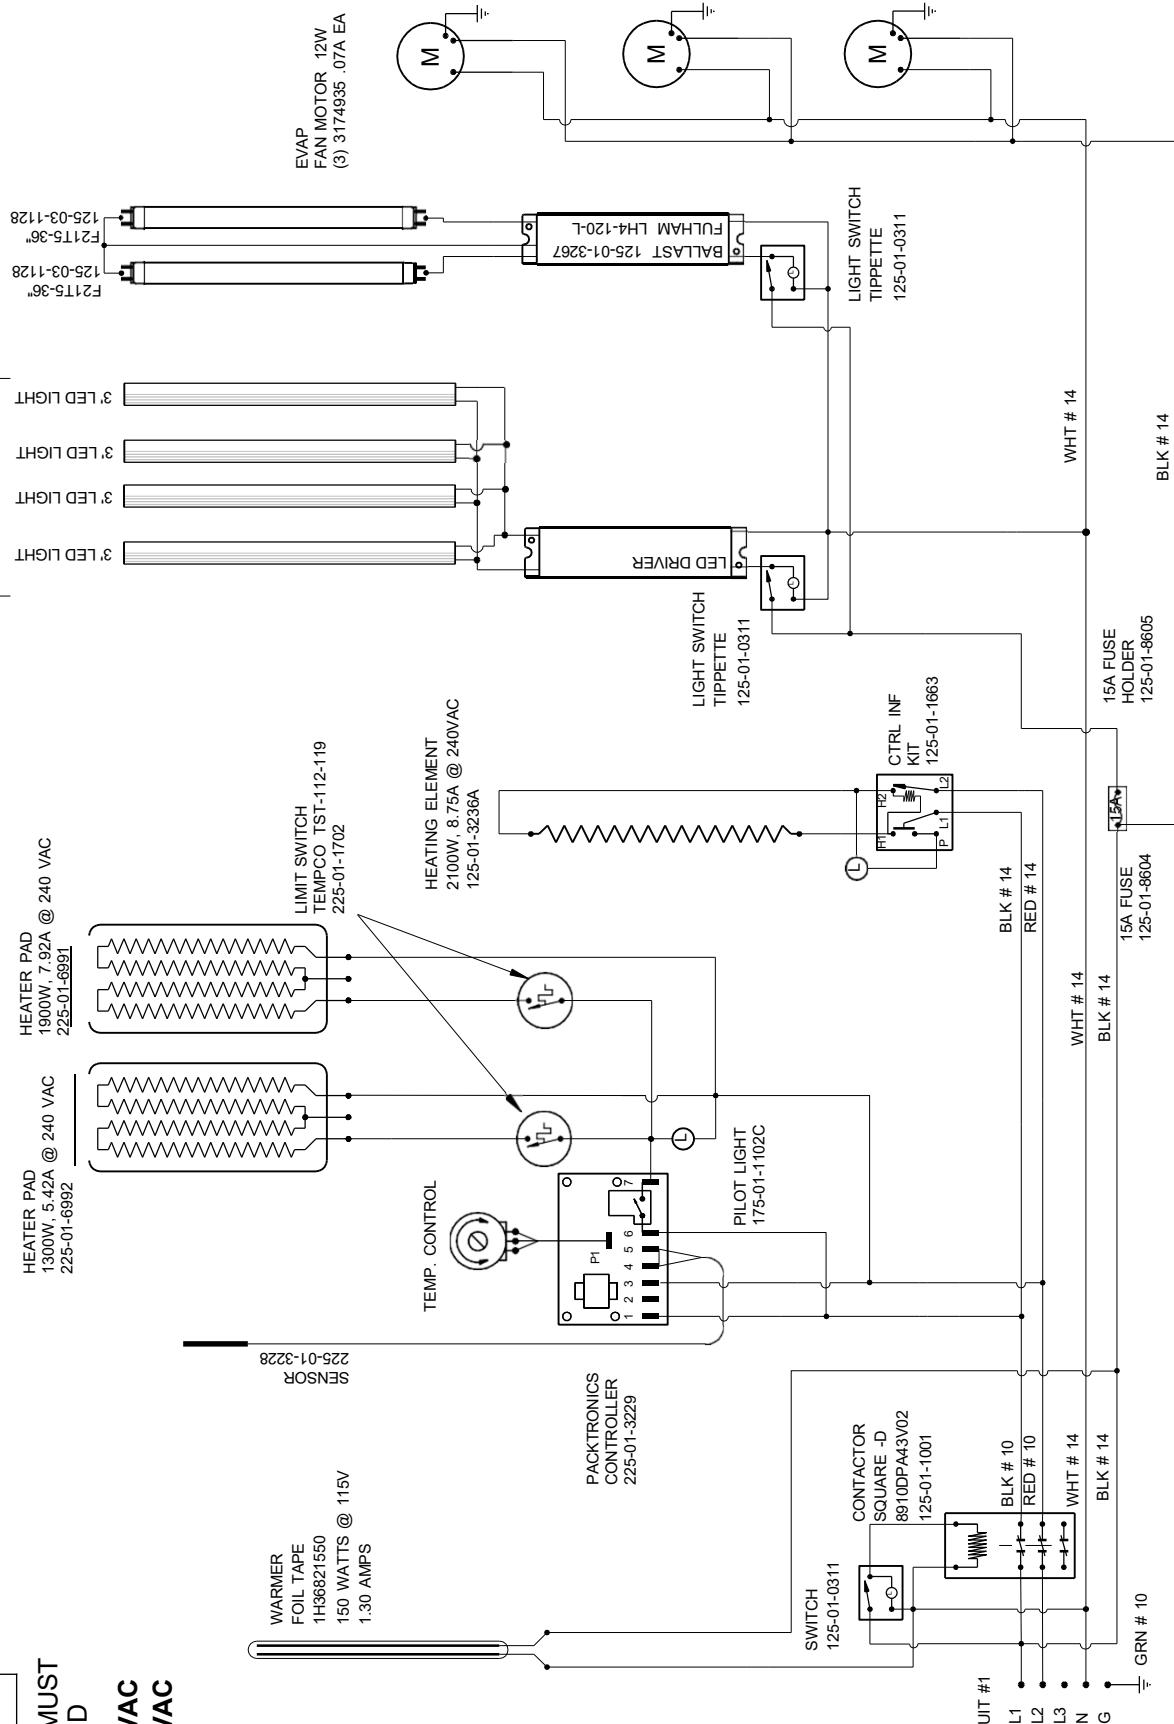

~208 / 240 VAC - 60 Hz.

Hussmann®

REVISIONS:

DESCRIPTION:

L CIN#6-34531 Added a 2nd limit Switch Back

M ECN-LAP-0012699 Changed Anti-Sweat Heater

N ECN-COD-0018141 Changed Fan Motor

R3

PROJECT TITLE: R3

DRAWING #: W8700015

Hussmann Corporation, Int'l.
1370 Ramona Avenue
Chino, CA, 91710
(909) 595-4910 Lic.#: 644406

CR3H-6-REM


DRAWN BY: JESSE RIOS
CHECKED BY: DATE: 8/3/07
PRODUCTION ORDER #: 621106
FILE LOCATION: 7/5/23 CB

PAGE 1 OF 2

CIRCUIT #2	LOADING
120 V	
L1	15.0

**NOTE: CASE MUST
BE GROUNDED**

NOTE FOR GFCI PROTECTION: IF MORE THAN ONE SINGLE RECEPTACLE IS USED IN CONJUNCTION WITH A GFCI DUPLEX RECEPTACLE "DOWNTREAM" ON THE LOAD SIDE, THE SUM OF ALL RECEPTACLES SHOULD NOT BE MORE THAN 15A

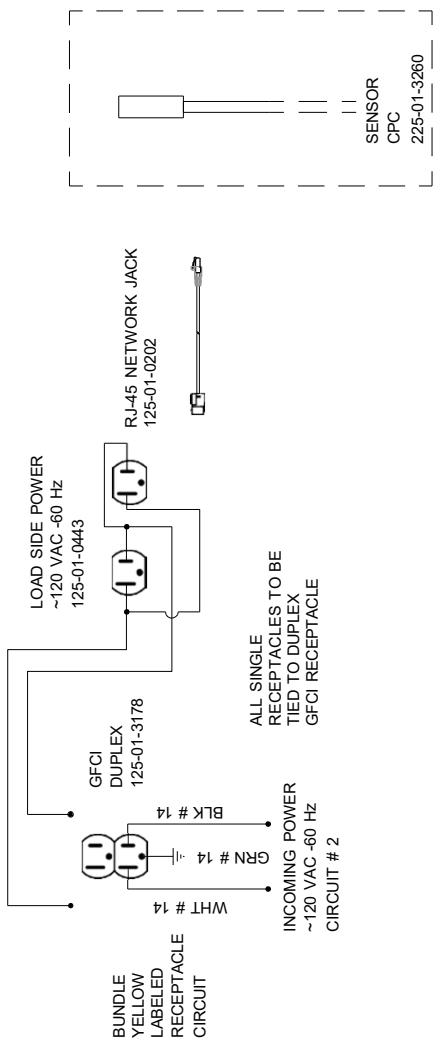


Hussmann®
Hussmann Corporation, Int'l.
13770 Ramona Avenue
Chino, CA, 91710
(909)-595-4910 Lic.#: 644406

REVISIONS:
DESCRIPTION: DATE: DRAWN BY: JESSE RIOS CHECKED BY: DATE: 8/3/07
L CN#634531 Added a 2nd limit Switch Back 7/13/12 CB
M ECN-AP-0012699 Changed Anti-Sweat Heater 6/8/18 CB PRODUCTION ORDER #: 621106
N ECN-COD-0018141 Changed Fan Motor 7/5/23 CB FILE LOCATION:

PROJECT TITLE: R3 DRAWING #: W8700015


PAGE 2 OF 2

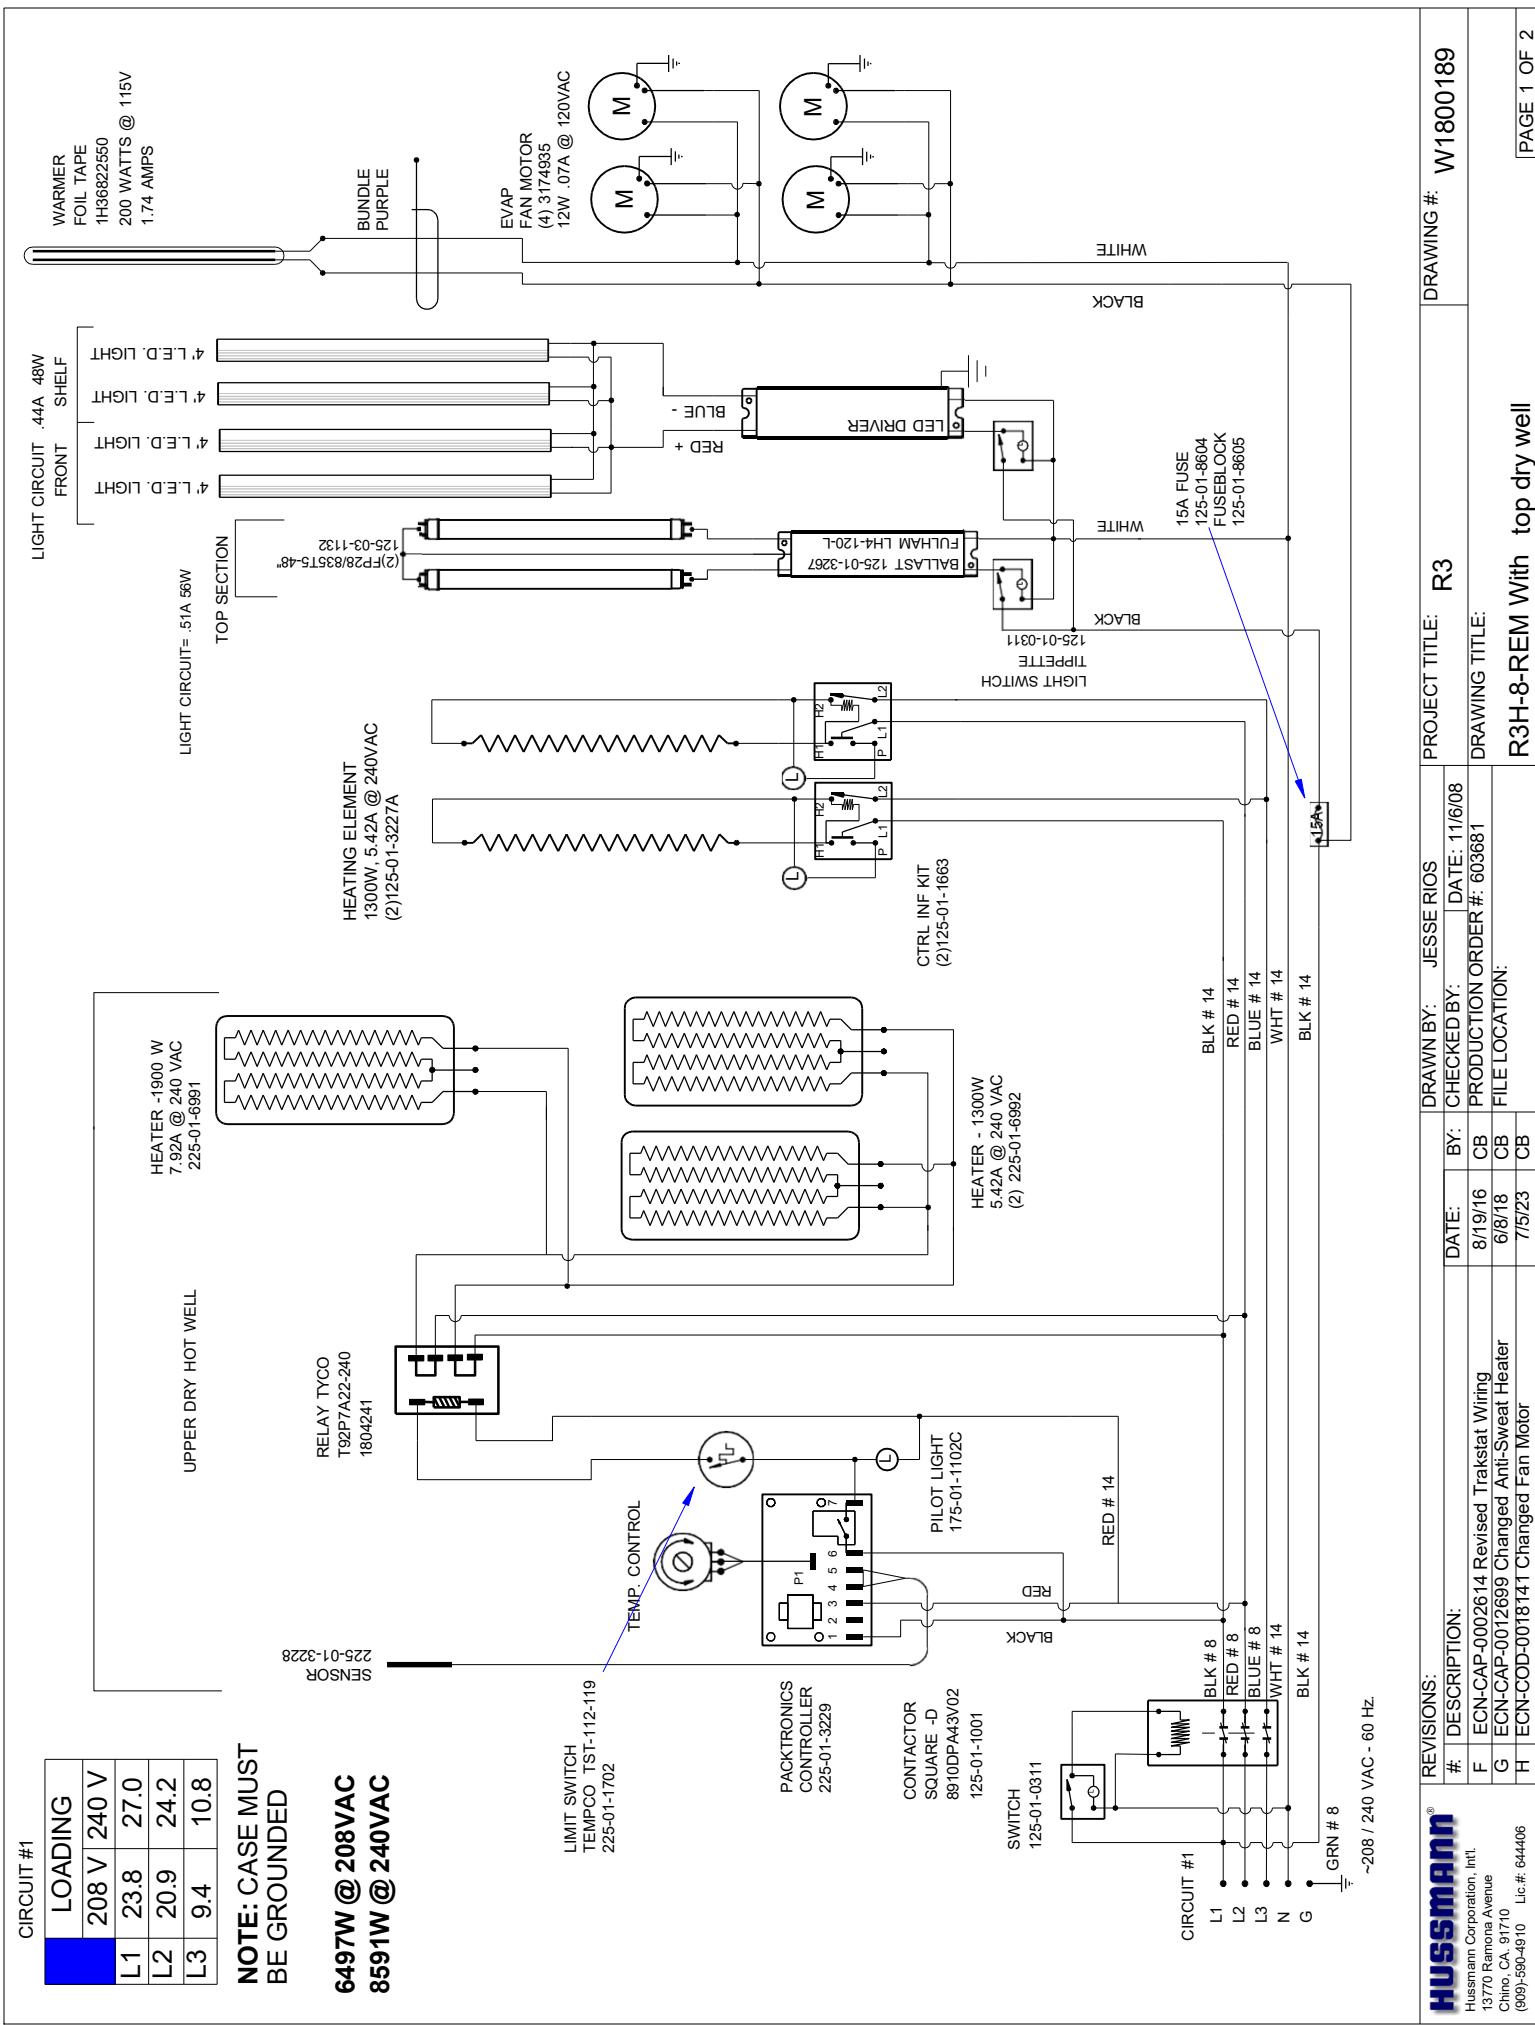

CIRCUIT #2

LOADING	
120 V	
L1	15.0

CIRCUIT #2

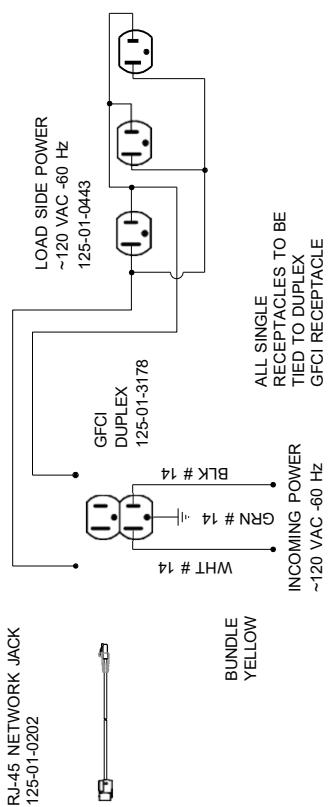

INCOMING POWER
~120 VAC -60 Hz

ALL SINGLE
RECEPTACLES TO BE
TIED TO DUPLEX
GFCI RECEPTACLE


REVISIONS:	
#	DESCRIPTION:
F	ECN-CAP-0002614 Revised Traksat Wiring
G	ECN-CAP-0012699 Changed Anti-Sweat Heater
H	ECN-COD-0018141 Changed Fan Motor

Hussmann Corporation, Int'l.
1370 Ramona Avenue
Chino, CA, 91710
(909) 595-4910 Lic.#: 644406

PROJECT TITLE: R3
DRAWING BY: JESSE RIOS
DATE: 11/6/08
CHECKED BY:
PRODUCTION ORDER #: FILE LOCATION:

DRAWING #: W1800189


DRAWING TITLE:
R3H-8-REM With top dry well

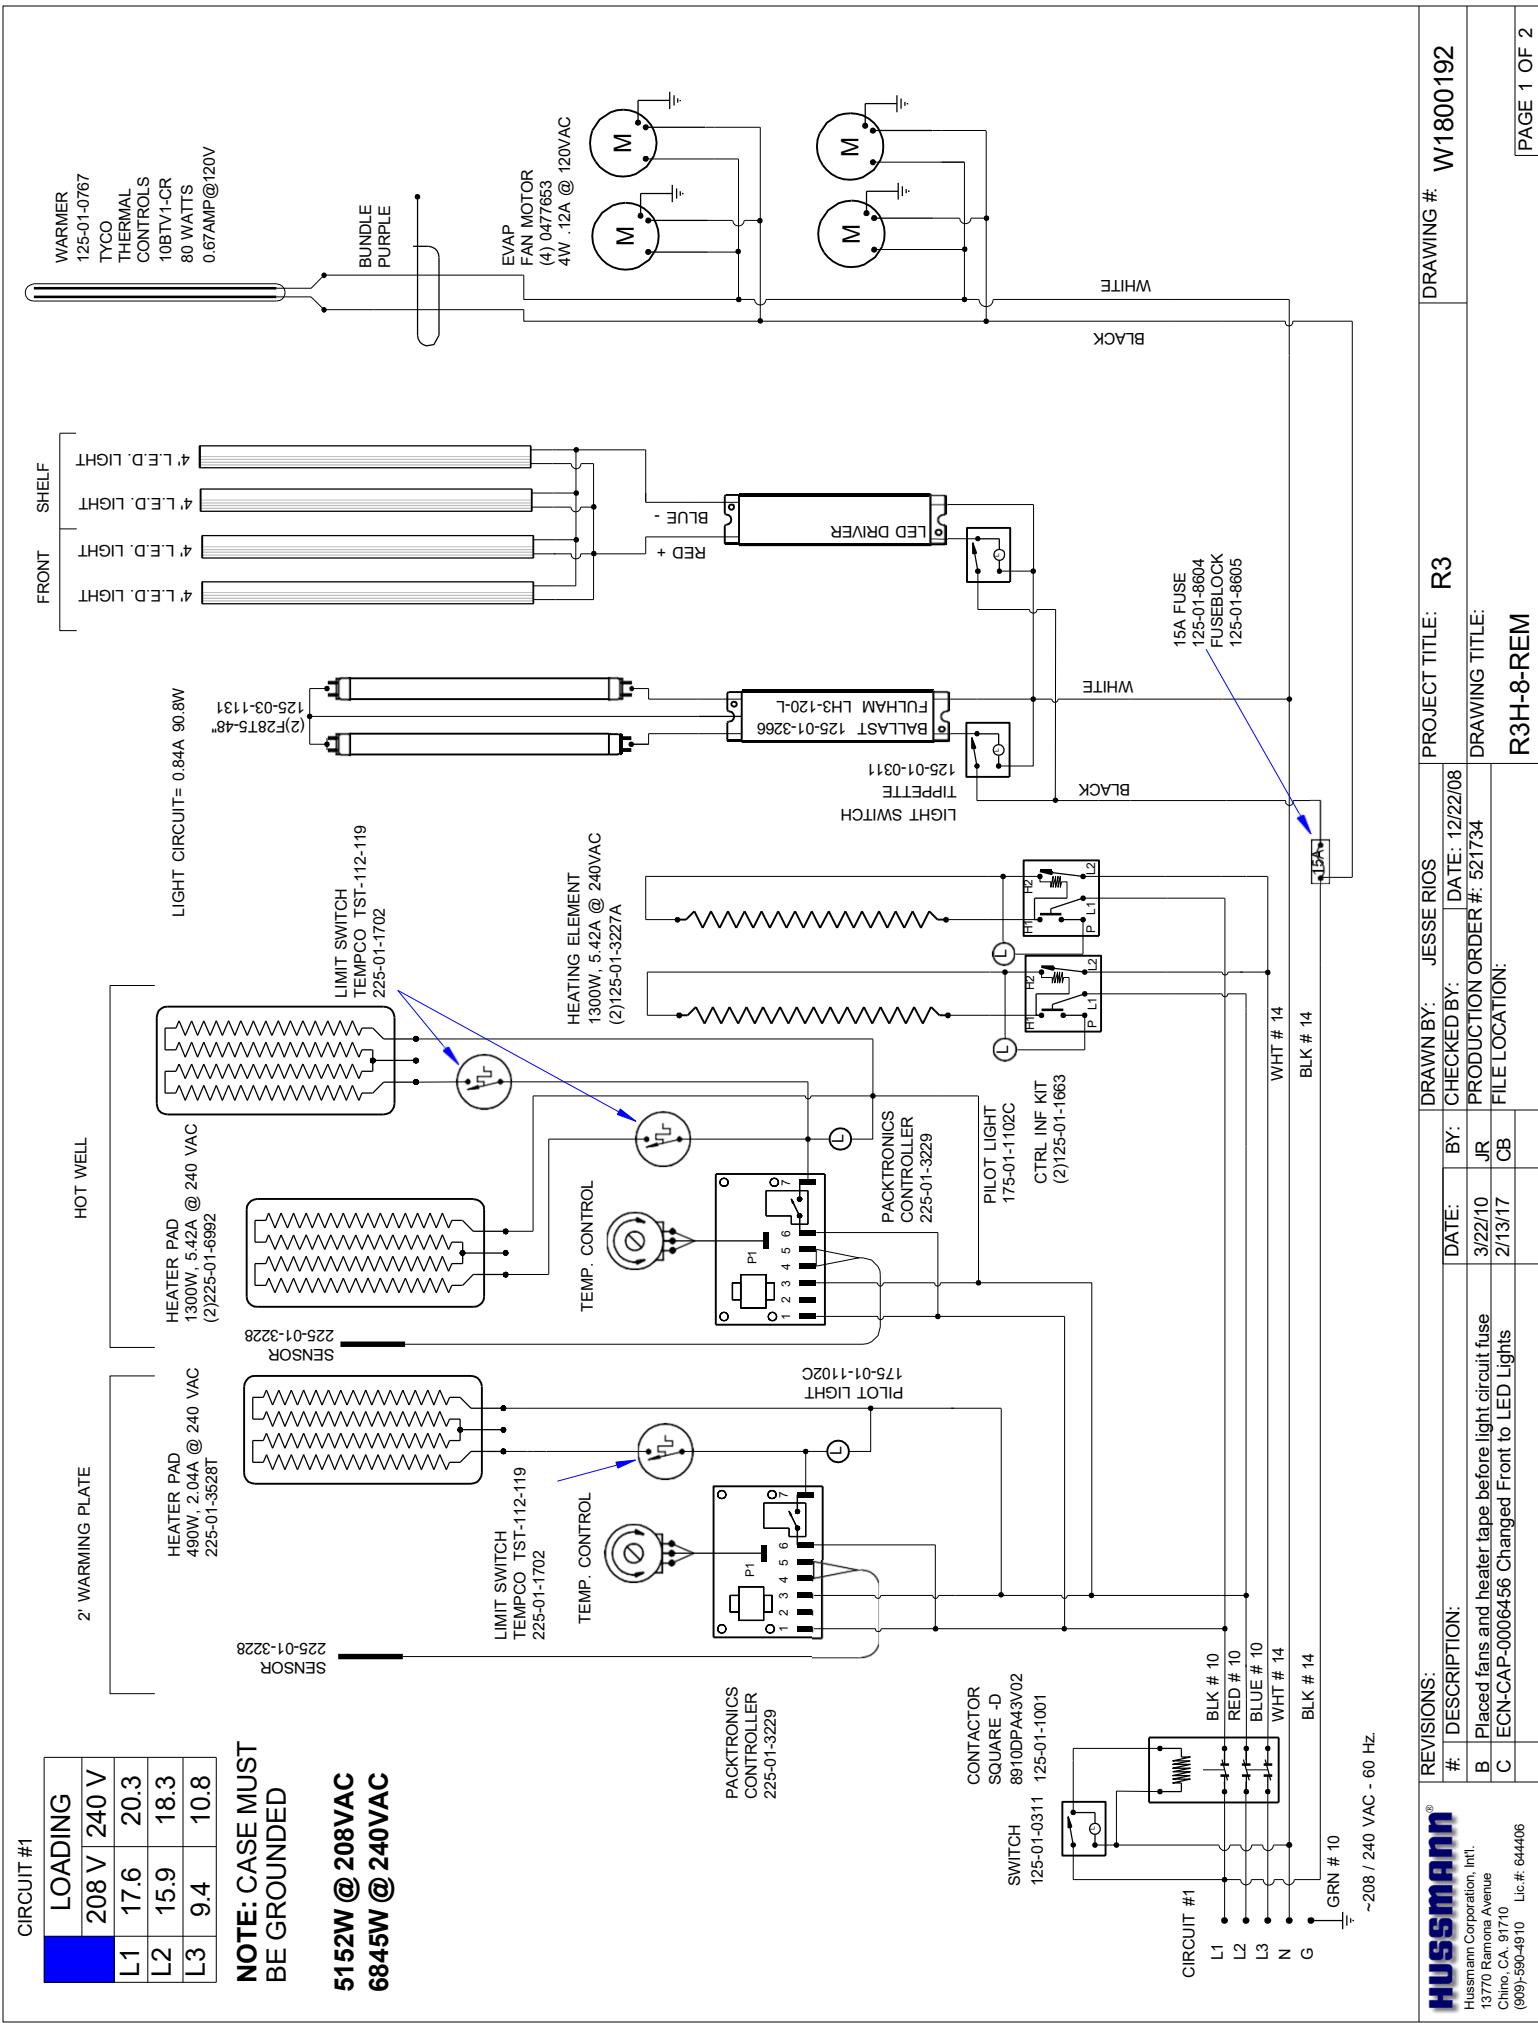

CIRCUIT #2

LOADING	120 V
L1	15.0

CIRCUIT #2

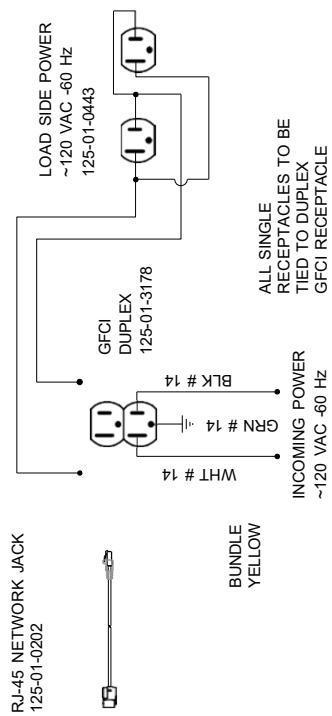

Hussmann®
Hussmann Corporation, Int'l.
13770 Ramona Avenue
Chino, CA, 91710
(909) 595-4910 Lic.#: 644406

REVISIONS:
DESCRIPTION:
B Placed fans and heater tape before light circuit fuse

PROJECT TITLE: R3
DRAWN BY: JESSE RIOS
CHECKED BY: JR
DATE: 12/22/08
PRODUCTION ORDER #: 521734
FILE LOCATION:

DRAWING #: W1800192

PAGE 2 OF 2

CIRCUIT #1

LOADING		
208 V	240 V	
L1	21.6	25.0
L2	19.2	22.1

**NOTE: CASE MUST
BE GROUNDED**

**4493W @ 208VAC
6000W @ 240VAC**

WARMER
FOIL TAPE
1146822550
200 WATTS @ 115V
1.74 AMPS

SENSOR
225-01-3228

LIMIT SWITCH
TEMPCO TST-112-119
(2) 225-01-1702

TEMP. CONTROL

HEATING ELEMENT
2100W, 8.75A @ 240VAC
125-01-3236A

PACKTRONICS
CONTROLLER
225-01-3229

PILOT LIGHT
175-01-1102C

LIGHT SWITCH
TIPPIETTE
125-01-0311

CONTACTOR
SQUARE -D
8910DF-A43V02
125-01-1001

WHT # 14

CTRL. INF.
KIT
125-01-1663

LIGHT SWITCH
TIPPIETTE
125-01-0311

WHT # 14

WHT # 14

BLK # 14

RED # 14

BLK # 14

RED # 14

BLK # 14

BLK # 14

BLK # 14

BLK # 14

CIRCUIT #1

L1

L2

N

G

GRN # 8

-208 / 240 VAC - 60 Hz.

Hussmann®

REVISIONS:

DESCRIPTION: DRAWN BY: JESSE RIOS

DATE: 2/5/10

CHECKED BY:

PRODUCTION ORDER #: 622194

FILE LOCATION:

PAGE 1 OF 2

DRAWING #: W1800196

PAGE 1 OF 2


CR3H-8-REM, 6' UPPER HOT WELL

PAGE 1 OF 2

CIRCUIT #2	LOADING
120 V	
L1	15.0

**NOTE: CASE MUST
BE GROUNDED**

NOTE FOR GFCI PROTECTION: IF MORE THAN ONE SINGLE RECEPTACLE IS USED IN CONJUNCTION WITH A GFCI DUPLEX RECEPTACLE "DOWNTREAM" ON THE LOAD SIDE, THE SUM OF ALL RECEPTACLES SHOULD NOT BE MORE THAN 15A

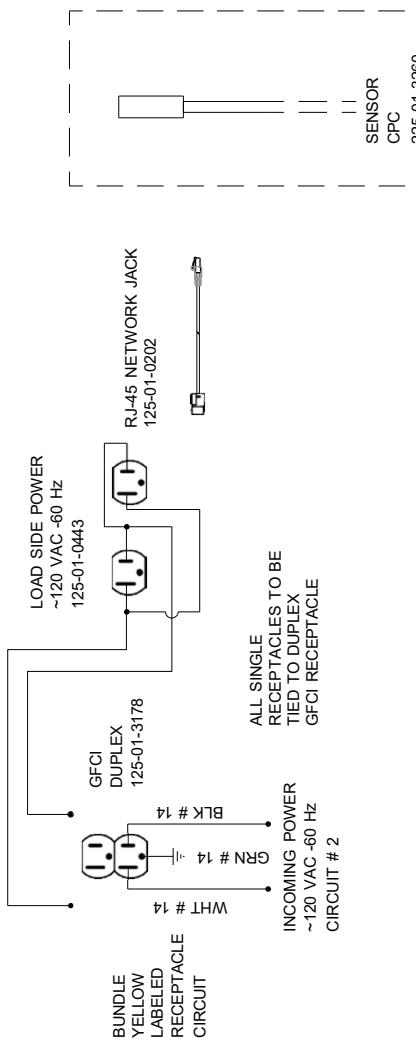

REVISIONS:	
#	DESCRIPTION:
B	ECN-CAP-0006456 Changed Front To LED Lights
C	ECN-CAP-0012699 Changed Anti-Sweat Heaters
D	ECN-COD-0018141 Changed Fan Motor

PROJECT TITLE: R3 DRAWN BY: JESSE RIOS CHECKED BY: DATE: 2/5/10 DRAWING #: W1800196


DRAWING TITLE: CR3H-8-REM, 6' UPPER HOT WELL
FILE LOCATION: 7/5/23 CB
PRODUCTION ORDER #: 622194
DATE: 6/8/18 CB
FILE LOCATION: 7/5/23 CB
Husmann Corporation, Int'l.
13770 Ramona Avenue
Chino, CA, 91710
(909)-595-4910 Lic.#: 644406

REVISION HISTORY	
REV	ECN
A	80263
B	980949
C	EDV/Cir-002699
	20140324
	20150715
	20180611
	NEW DIAGRAM
	CHANGED TERMINAL BLOCK ON CIRCUIT 2
	CB

LIGHT CIRCUIT 334.352W
SHELF FRONT

CIRCUIT #1 DNG 120V L 20A


OPTIONAL

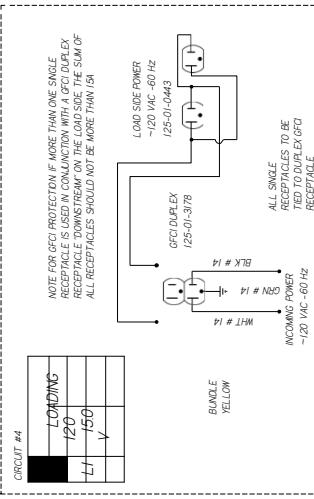


CIRCUIT #4

LOADING


120	150	V
L	T	

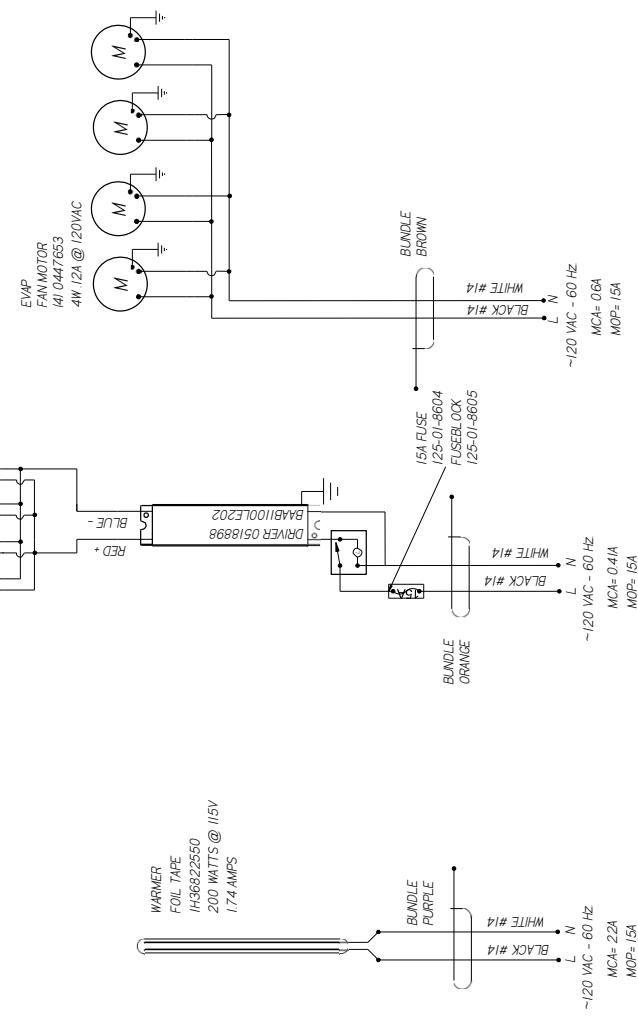


NOTES:
CASE MUST BE GROUNDED

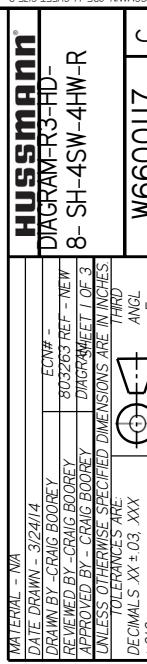

REVISION HISTORY	
REV	ECN
A	ECN 80263
B	DATE 20/07/24 ECN# 980949 NEW DIAGRAM
C	DATE 20/07/15 ECN# 002699 CHANGED TERMINAL BLOCK ON CIRCUIT 2
	CB CB CB CB CB CB

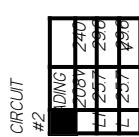

534.6W @ 208VAC
7104W @ 240VAC

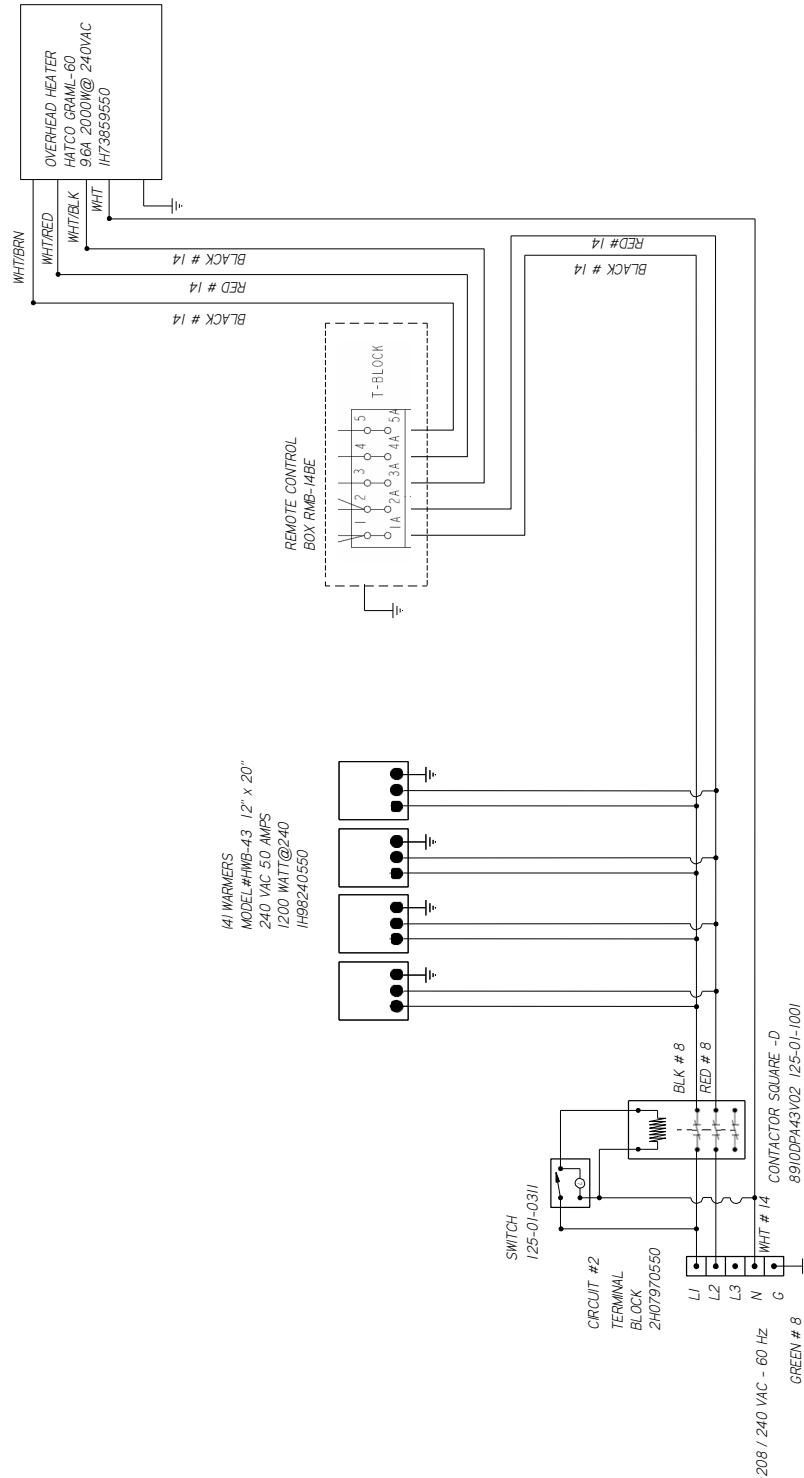


NOTES:
CASE MUST BE GROUNDED

HUSSMANN®
DIAGRAM-R3-HD-
8-SH-4S-4H-W-R
W6600117 | C
PROJECTION


MATERIAL - NA
DATE DRAWN - 3/24/14
DRAWN BY - CRAIG BOOREY
REVIEWED BY - CRAIG BOOREY
APPROVED BY - CRAIG BOOREY
DIAGRAM REF - NEW
DIMENSIONS ARE IN INCHES
UNLESS OTHERWISE SPECIFIED
THIRD ANGLE
DECIMALS XX ± 03. XXX
±010
ANGLES ± 2°

REVISION HISTORY					
REV	ECN	DATE	REV BY	CHKD BY	APPR BY
A	80263	20/04/13/24		CB	CB
B	990949	20/07/15	CHANGED TERMINAL BLOCK ON CIRCUIT 2	CB	CB
C	ECN/CIR-002699	20/09/01	CHANGED AND SWEAT HEATER	CB	CB


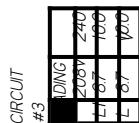


180W @ 208VAC
2400W@ 240VAC


(4) SOUP WARMERS
MODEL#HWB-11Q1
2.5 AMPS @240V
600WATTS
H33446550

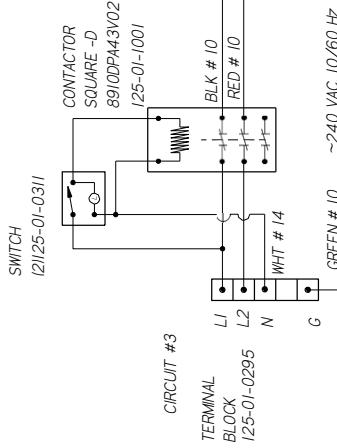

NOTES:
CASE MUST BE GROUNDED

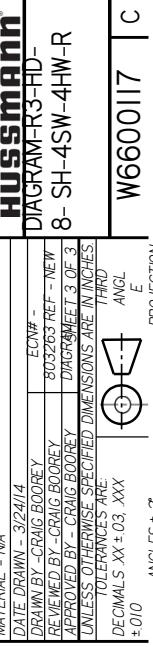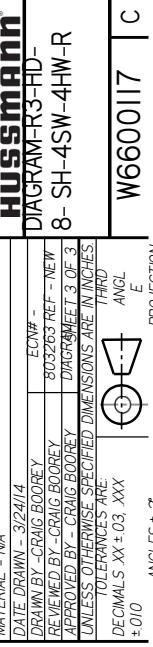


CIRCUIT #	LOADING
	120 V
L1	15.0

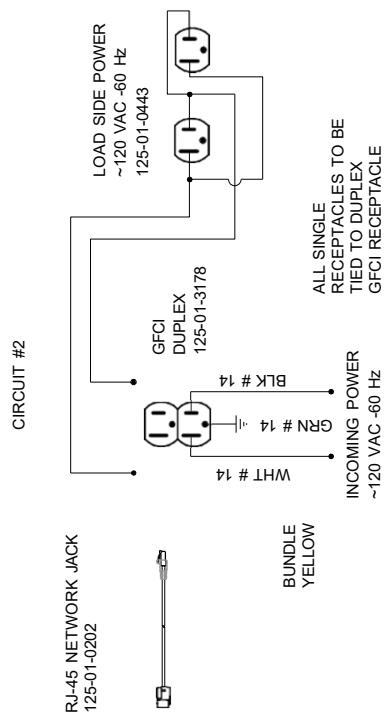

CIRCUIT #2


REVISIONS:		PROJECT TITLE: CR3		DRAWING #: W8700020	
#:	DESCRIPTION:	DATE:	BY:	DATE:	BY:
H	ECN-CAP-0012699 Changed Anti-Sweat Heater	6/11/18	CB	6/5/08	CB
I	ECN-COD-13665 Changed A,S Htr	5/20/21	CB	PRODUCTION ORDER #: 621533	DRAWING TITLE:
J	ECN-COD-0018141 Changed Fan Motor	7/5/23	CB	FILE LOCATION:	CR3H-8-REM
Hussmann® Hussmann Corporation, Int'l. 13770 Ramona Avenue Chino, CA, 91710 (909) 595-4910 Lic.#: 644406					
PAGE 2 OF 2					

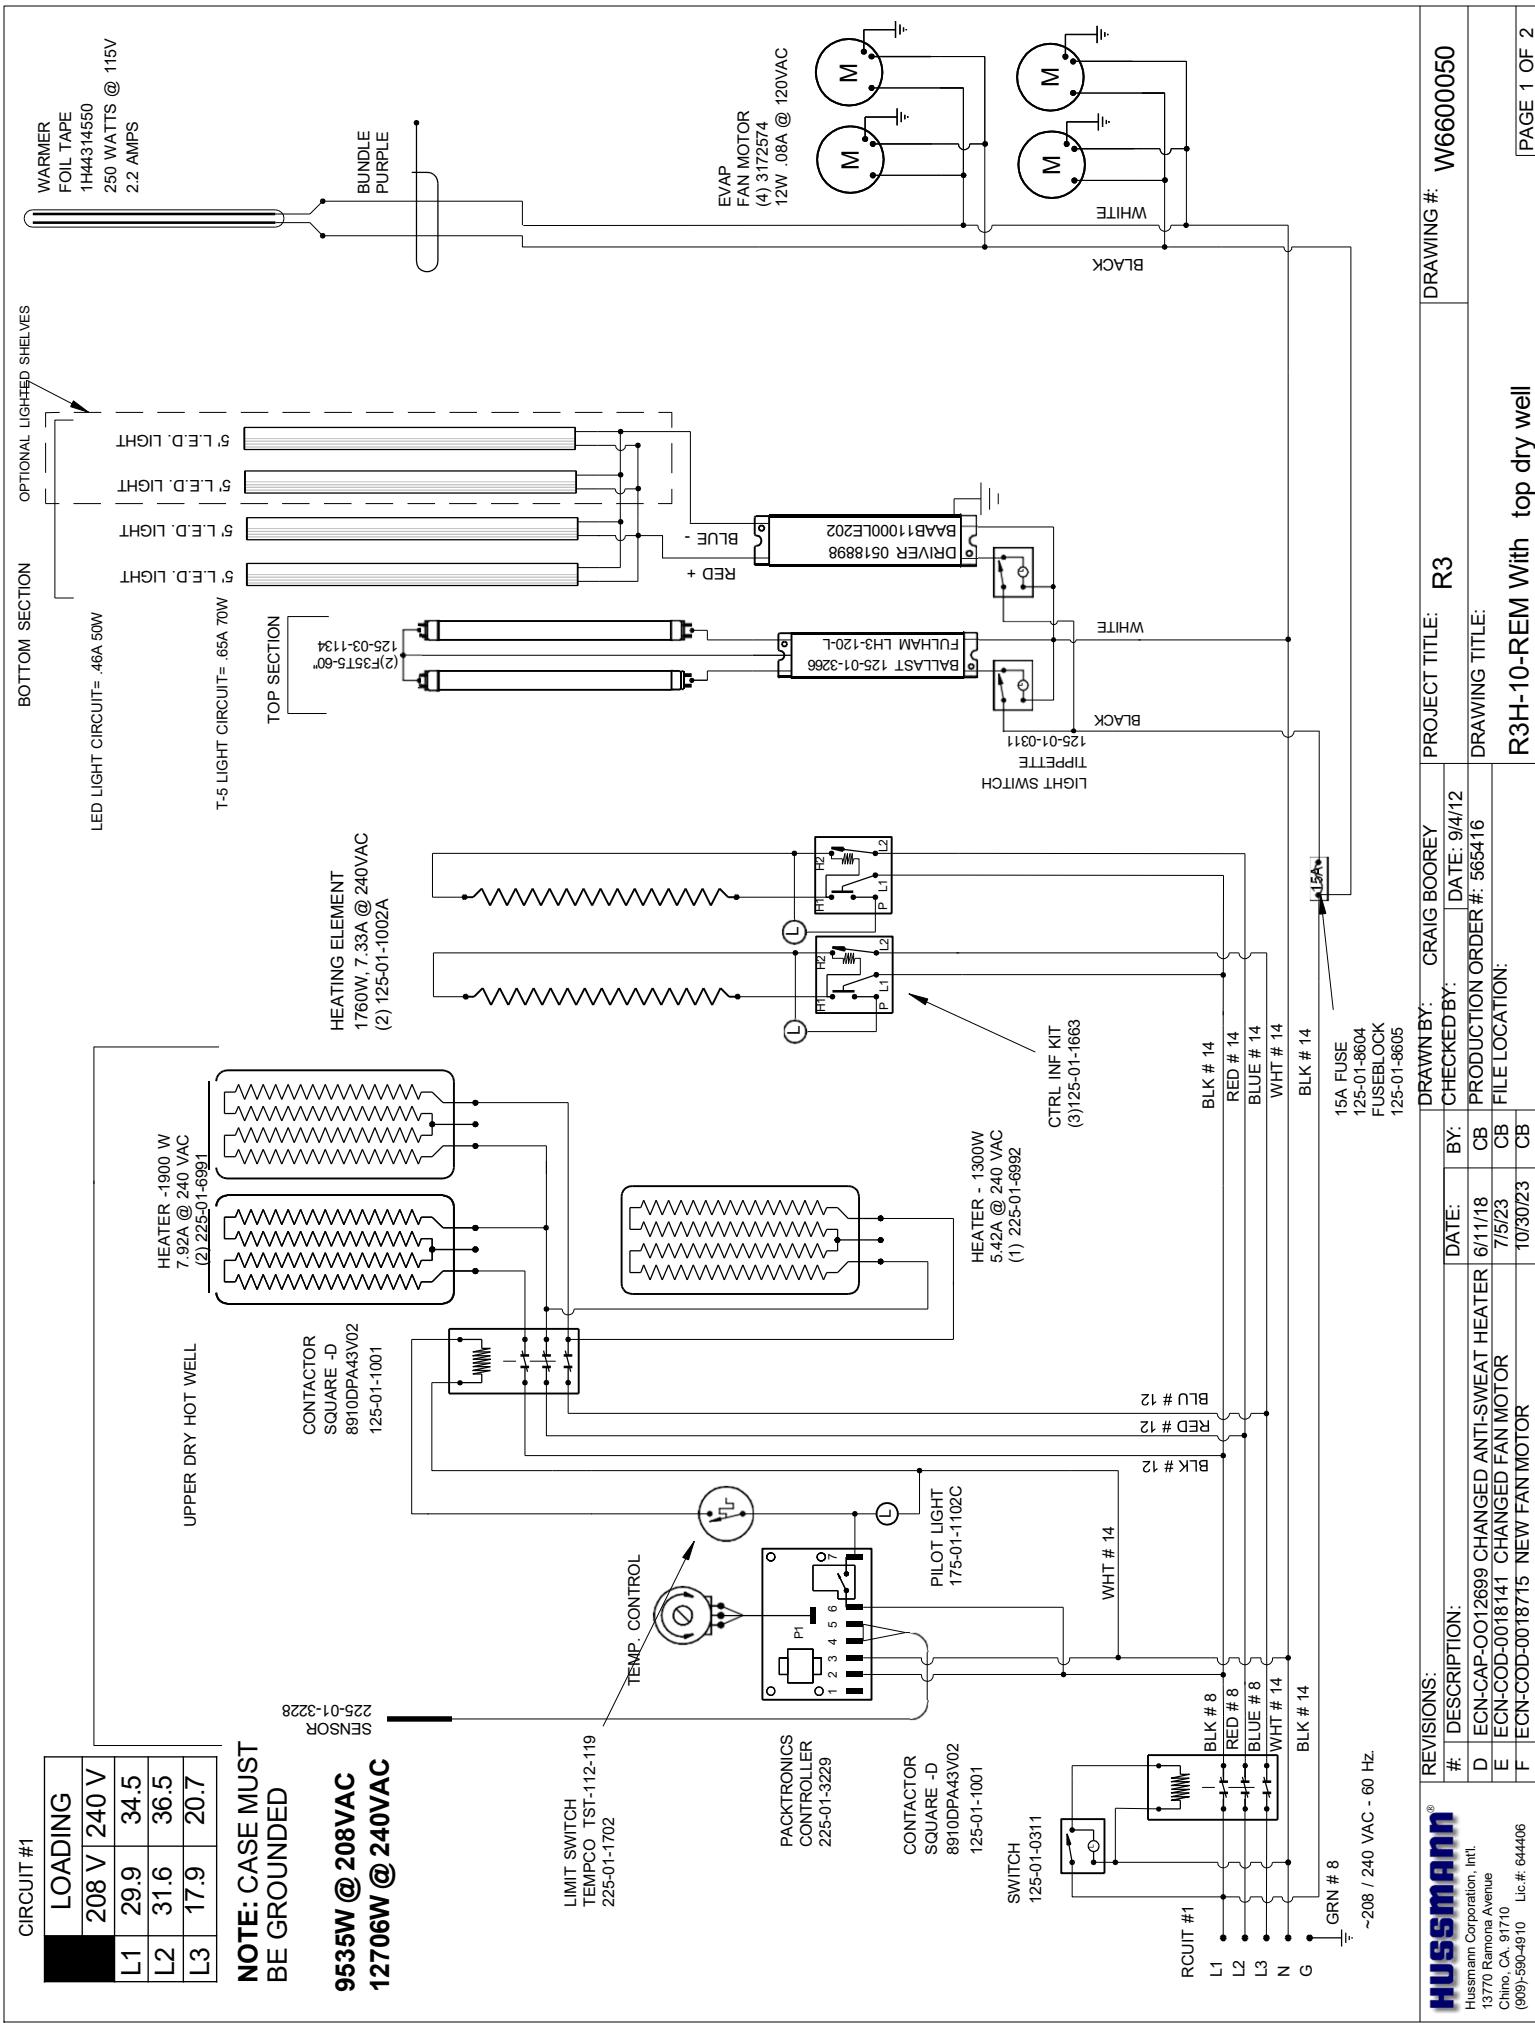

CIRCUIT #2

LOADING	
120 V	
L1	15.0

CIRCUIT #2

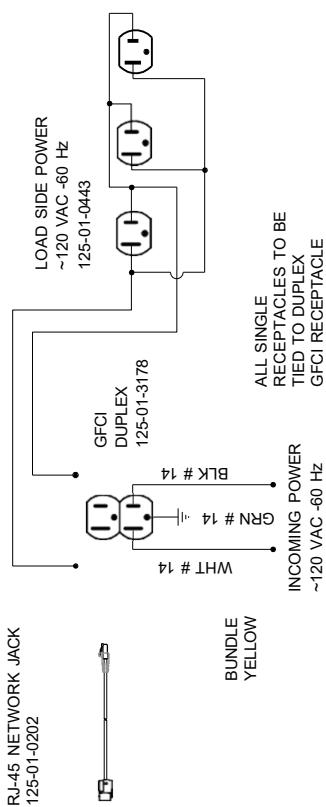

Hussmann®
Hussmann Corporation, Int'l.
1370 Ramona Avenue
Chino, CA 91710
(909) 595-4910 Lic.#: 644406

REVISIONS:

DESCRIPTION: DRAWN BY: CRAIG BOOREY PROJECT TITLE: R3

D ECN-CAP-0012699 CHANGED ANTI-SWEAT HEATER DATE: 6/11/18 CHECKED BY: DATE: 9/4/12

E ECN-COD-0018141 CHANGED FAN MOTOR PRODUCTION ORDER #: 565416 DRAWING TITLE:

F ECN-COD-0018715 NEW FAN MOTOR FILE LOCATION:

10/30/23 CB

DRAWING #: W6600050

PAGE 2 OF 2

CIRCUIT #1

LOADING	V	Amps
	208 V	240 V
L1	25.1	28.9
L2	27.8	32.1
L3	25.7	29.6

**NOTE: CASE MUST
BE GROUNDED**

**9439W @ 208VAC
12553W @ 240VAC**

LIMIT SWITCH
TEMPCO TST-112-19
225-01-1702

PACKTRONICS
CONTROLLER
225-01-3229
8910DPA43V02
125-01-1001

PILOT LIGHT
175-01-1102C
P1
1 2 3 4 5 6 7

SWITCH
125-01-0311

CIRCUIT #1
L1 L2 L3 N G GRN # 8
BLK # 14 RED # 8 BLUE # 8 WHT # 14 BLK # 14

~208 / 240 VAC - 60 Hz

Hussmann®

REVISIONS:

DESCRIPTION:

DRAWING #: W1800119

Hussmann Corporation, Int'l.
13770 Ramona Avenue
Chino, CA, 91710
(909) 595-4910 Lic.# 644406

C ECN-CAP-0006456 Changed Front to LED Lights
D ECN-CAP-0012699 Changed Anti-Sweat Heater
E ECN-COD-0018141 Changed Fan Motor

DRAWN BY: MATT GRAMATA
CHECKED BY: DATE: 2/17/11
PRODUCTION ORDER #: 522952
FILE LOCATION: 7/5/23 CB


PROJECT TITLE: R3
DRAWING TITLE: R3H-12-REM With top dry well

PAGE 1 OF 2

CIRCUIT #2

LOADING	
120 V	
L1	15.0

CIRCUIT #2

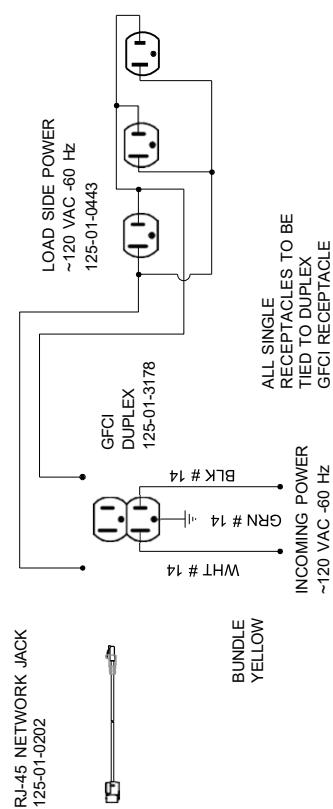

REVISIONS:	
#	DESCRIPTION:
C	ECN-CAP-0006456 Changed Front to LED Lights
D	ECN-CAP-0012699 Changed Anti-Sweat Heater
E	ECN-COD-0018141 Changed Fan Motor

PROJECT TITLE: R3 DRAWING #: W1800119

DRAWING TITLE: R3H-12-REM With top dry well

Hussmann®
Hussmann Corporation, Int'l.
13770 Ramona Avenue
Chino, CA, 91710
(909) 595-4910 Lic.#: 644406

DATE: 2/17/11

FILE LOCATION: 75/23 CB


DATE: 2/17/11

FILE LOCATION: 61/118 CB

DATE: 5/22/52

FILE LOCATION: 7/5/23 CB

PAGE 2 OF 2

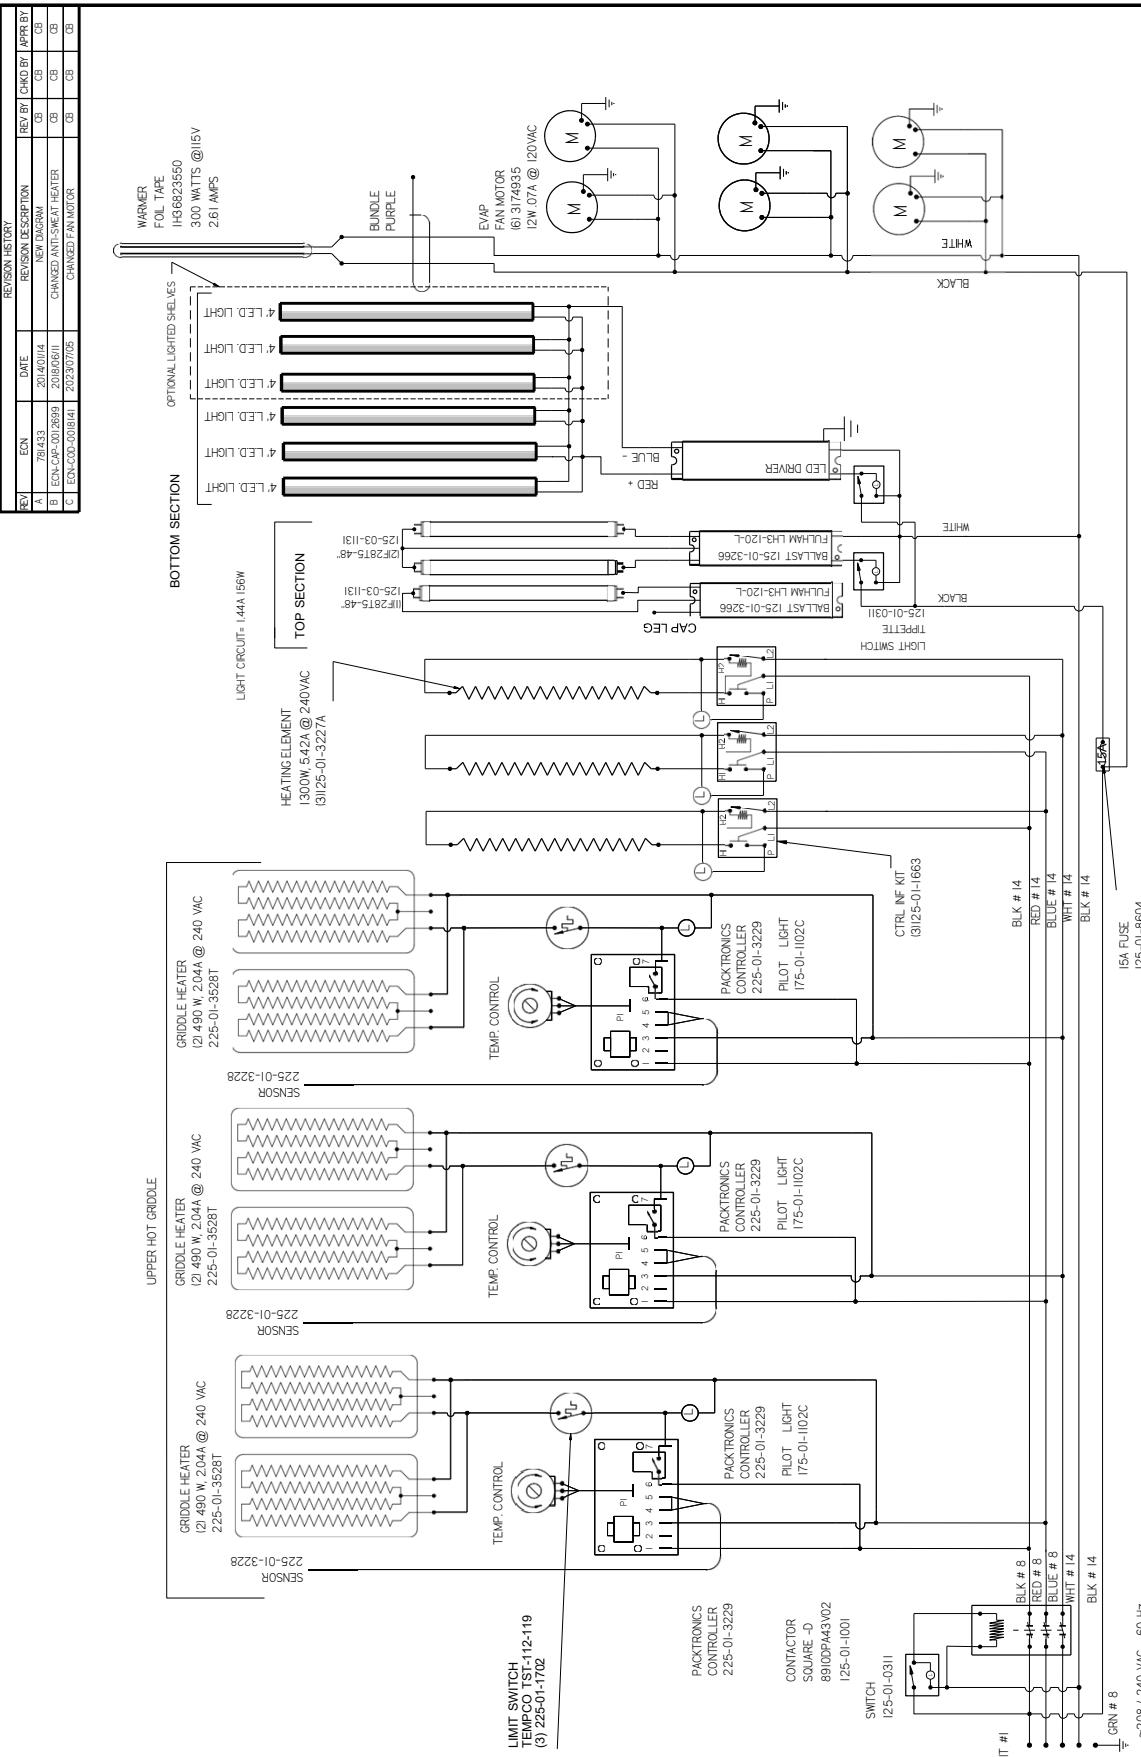

CIRCUIT #1
LOADING

86.21W @ 240VAC
64.13W @ 208VAC

LIMIT SWITCH
TEMPCO TS-112-119
(3) 225-01-1702

PACKTRONICS
CONTROLLER
225-01-3229

CONTACTOR
SQUARE -D
890DP4A3V02
125-01-001

SWITCH
(225-01-0311)

CIRCUIT #1
L1
L2
L3
N
G
GRN # 8
BLK # 8
RED # 8
BLUE # 8
BLK # 8
BLK # 8
BLK # 14
BLK # 14

~208 / 240 VAC - 60 Hz

NOTES:
CASE MUST BE GROUNDED

15A FUSE
125-01-8604
FUSEBLOCK
125-01-8605

HUSSMANN

DIAGRAM-R3-H-T2-R

MATERIAL = N/A
DATE DRAWN - 1/14/14
DRAWN BY - CRAIG BOOREY
REVIEWED BY - CRAIG BOOREY
APPROVED BY - CRAIG BOOREY
UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES.
THIRD ANGL E
DECIMALS XX ±.03, XXX
±.010
ANGLES ± 2°


ECN# -
781433 REF - NEW
DIAGRAM SHEET 1 OF 1
UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES.
THIRD ANGL E
PROJECTION

W6600113 | C



CIRCUIT #2

LOADING	
120 V	
L1	15.0

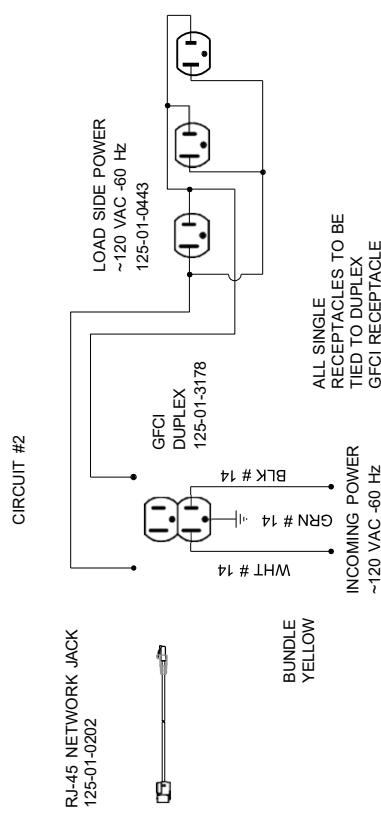

Hussmann®
Hussmann Corporation, Int'l.
13770 Ramona Avenue
Chino, CA, 91710
(909) 595-4910 Lic.#: 644406

REVISIONS:
DESCRIPTION: DRAWN BY: CRAIG BOOREY
B ECN-CAP-001/2698 CHANGED ANTI-SWEAT HEATER DATE: 6/1/18 CHECKED BY: DATE: 1/11/12
C ECN-COD-0018141 CHANGED FAN MOTOR PRODUCTION ORDER #: 523364
FILE LOCATION: CB

PROJECT TITLE: R3
DRAWING #: W6600020

DRAWING TITLE:

R3H-12-REM With top dry well

12. Troubleshooting

Problem	Possible Cause	Possible Solution
Product not holding temperature.	Ambient conditions may be affecting the case operation.	Check case position in store. Is the case located near an open door, window, electric fan or air conditioning vent that may cause air currents? Case must be located minimum 15 Ft away from doors or windows. Cases are designed to operate at 55% Relative humidity and a temperature of 75°F.
	Unit not preheated.	Preheat case before loading product.
	Heat settings too low	Adjust shelf/griddle control setting.
	Low voltage.	Using volt meter make sure line voltage matches serial plate voltage.
	Product held too long	Hold product for recommended time.
	Product not placed correctly in case.	Place product in case per recommendations.
	Product not hot when placed in case.	Place prepackaged hot food in case.
No shelf heat.	Faulty shelf heater.	Check and replace if necessary.
	Faulty control.	Check and replace if necessary.
	Loose wiring on heater.	Check wiring/electrical connections.
	Temperature setting "Off".	Increase shelf heat setting.
No griddle heat.	Faulty griddle heater.	Check and replace if necessary.
	Faulty control.	Check and replace if necessary.
	Loose wiring on heater.	Check wiring/electrical connections.
	Temperature setting "Off".	Increase griddle heat setting.
No hot/soup well heat.	Faulty hot/soup well.	Check and replace if necessary.
	Loose wiring on hot/soup well.	Check wiring/electrical connections.
Main Power switch on but case is inoperative.	Open Circuit.	Check to see that cord is plugged in if plug is provided. Check wiring/electrical connections for hard wired cases. Check line voltage. Check power switch and replace if defective.
Condensation on glass.	Ambient conditions may be affecting the case operation.	Check case position in store. Is the case located near an open door, window, electric fan or air conditioning vent that may cause air currents? Case must be located minimum 15 Ft away from doors or windows. Cases are designed to operate at 55% Relative humidity and a temperature of 75°F.
	Inadequate air circulation.	Check if air sweep fans are functioning, check electrical connections.
	There is not enough heat provided in the airflow.	Check if air sweep heater is functioning, check electrical connections.
	There are glass gaps on the side of the case.	See glass adjustment section.
	Glass is not completely shut.	Close glass correctly.
	Calrods may not be working.	Check calrod operation.
	Well control setting is too high.	Check that well setting is not above "7" on control knob.

Troubleshooting (Cont'd)

Problem	Possible Cause	Possible Solution
Large gap is visible on bottom of front glass or glass can't be opened because it is too low.	Glass Height adjusters need to be adjusted.	See Glass Adjustment section.
Large gaps are visible in between glass panels or glass rubs against end panel.	Glass/glass clamp assembly needs to be adjusted.	See Glass Adjustment section.
Front glass does not stay open and falls closed.	Glass shock/piston may need to be replaced.	Case should be serviced by a qualified service technician.
Lights do not come on.	Ballast/light socket wiring.	Check electrical connections. See Electrical Section and check wiring diagram.
	Ballast needs to be replaced.	Case should be serviced by a qualified service technician. See Electrical Section.
	Lamp socket needs to be replaced.	Case should be serviced by a qualified service technician.
	Lamp needs to be replaced.	See Maintenance Section.
	Light Switch needs to be replaced.	Case should be serviced by a qualified service technician.
PR1 Error Code	Faulty controller or sensor	<p>Unplug sensor from plug connection: If PR1 code remains, then the controller is faulty; if the PR1 code disappears, then the sensor is faulty.</p> <p>Case should be serviced by a qualified Hatco service technician. Call the 24 Hour Tech Hotline (800) 558-0607</p>


13. Appendices

Appendix A. - Temperature Guidelines - Refrigerated

The refrigerators should be operated according to the manufacturer's published engineering specifications for entering air temperatures for specific equipment applications. Table 1 shows the typical temperature of the air entering the food zone one hour before the start of defrost and one hour after defrost for various categories of refrigerators. Refer to Appendix C for Field Evaluation Guidelines.

Table 1

Type of Refrigerator	Typical Entering Air Temperature
I. OPEN DISPLAY	
A. Non frozen:	
1) Meat	28°F
2) Dairy/Deli	32°F
3) Produce	
a. Processed	36°F
b. Unprocessed	45°F
B. Frozen	0°F
C. Ice Cream	-5°F
II. CLOSED DISPLAY	
A. Non frozen:	
1) Meat	34°F
2) Dairy/Deli	34°F
3) Produce	
a. Processed	36°F
b. Unprocessed	45°F
B. Frozen	0°F
C. Ice Cream	-5°F

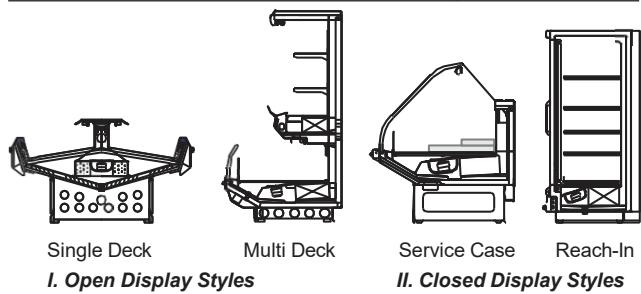

Hot

- 1.0 Hot cases are tested to maintain all hot food at 140° - 150°F. These cases are not designed to heat up or cook food. It is the user's responsibility to stock the hot food cases immediately after the cooking of the food with a pulp temperature of at least 150° to 160°F.

Appendix B. - Application Recommendations - Refrigerated

- 1.0 Temperature performance is critical for controlling bacteria growth. Therefore, the following recommendations are included in the standard. They are based on confirmed field experience over many years.

1. The installer is responsible for following the installation instructions and recommendations provided by Hussmann for the installation of each individual type refrigerator.
 2. Refrigeration piping should be sized according to the equipment manufacturer's recommendations and installed in accordance with normal refrigeration practices. Refrigeration piping should be insulated according to Hussmann's recommendations.
 3. A clogged waste outlet blocks refrigeration. The installer is responsible for the proper installation of the system which dispenses condensate waste through an air gap into the building indirect waste system.
 4. The installer should perform a complete start-up evaluation prior to the loading of food into the refrigerator, which includes such items as:
 - a) Initial temperature performance, Coils should be properly fed with a refrigerant according to manufacturer's recommendations.
 - b) Observation of outside influences such as drafts, radiant heating from the ceiling and from lamps. Such influence should be properly corrected or compensated for.
 - c) At the same time, checks should be made of the store dry-bulb and wet-bulb temperatures to ascertain that they are within the limits prescribed by Hussmann.
 - d) Complete start-up procedures should include checking through a defrost to make certain of its adequate frequency and length without substantially exceeding the actual needs. This should include checking the electrical or refrigerant circuits to make sure that defrosts are correctly programmed for all the refrigerators connected to each refrigeration system.
 - e) Recording instruments should be used to check performance.
- Hot**
- 1.0 The installer should perform a complete start-up evaluation prior to the loading of food into the hot food case, which includes such items as:
 - a) Initial temperature performance, Griddles and Hot Wells.
 - b) Observation of outside influences such as drafts, radiant heating from the ceiling and from lamps. Such influence should be properly corrected or compensated for.
 - c) Complete start-up procedures should include
 1. Heat I display lamps are lighting

Appendices (Cont'd)

2. Indicator lamps on control panel(s) are working
3. Auto-fill is functioning properly (Service cases)
4. Hot Griddles are functioning.

Appendix C. - Field Recommendations - Refrigerated

Recommendations for field evaluating the performance of retail food refrigerators and hot cases

1. The most consistent indicator of display refrigerator performance is temperature of the air entering the product zone (see Appendix A). In practical use, the precise determination of return air temperature is extremely difficult. Readings of return air temperatures will be variable and results will be inconsistent. The product temperature alone is not an indicator of refrigerator performance.

NOTE: Public Health will use the temperature of the product in determining if the refrigerator will be allowed to display potentially hazardous food. For the purpose of this evaluation, product temperature above the FDA Food Code 1993 temperature for potentially hazardous food will be the first indication that an evaluation should be performed. It is expected that all refrigerators will keep food at the FDA Food Code 1993 temperature for potentially hazardous food.

1. The following recommendations are made for the purpose of arriving at easily taken and understood data which, coupled with other observations, may be used to determine whether a display refrigerator is working as intended:
 - a) **INSTRUMENT** - A stainless steel stem-type thermometer is recommended and it should have a dial a minimum of 1 inch internal diameter. A test thermometer scaled only in Celsius or dually scaled in Celsius and Fahrenheit shall be accurate to 1°C (1.8°F). Temperature measuring devices that are scaled only in Fahrenheit shall be accurate to 2°F. The thermometer should be checked for proper calibration. (It should read 32°F when the stem is immersed in an ice water bath).
 - b) **LOCATION** - The probe or sensing element of the thermometer should be located in the airstream where the air first enters the display or storage area, and not more than 1 inch away from the surface and in the center of the discharge opening.
 - c) **READING** - It should first be determined that the refrigerator is refrigerating and has operated at least one hour since the end of the last defrost period. The thermometer

- reading should be made only after it has been allowed to stabilize, i.e., maintain a constant reading.
- d) **OTHER OBSERVATIONS** - Other observations should be made which may indicate operating problems, such as unsatisfactory product, feel/appearance.
 - e) **CONCLUSIONS** - In the absence of any apparent undesirable conditions, the refrigerator should be judged to be operating properly. If it is determined that such condition is undesirable, i.e., the product is above proper temperature, checks should be made for the following:
 1. Has the refrigerator been loaded with warm product?
 2. Is the product loaded beyond the "Safe Load Line" markers?
 3. Are the return air ducts blocked?
 4. Are the entering air ducts blocked?
 5. Is a dumped display causing turbulent air flow and mixing with room air?
 6. Are spotlights or other high intensity lighting directed onto the product?
 7. Are there unusual draft conditions (from heating/air-conditioning ducts, open doors, etc.)?
 8. Is there exposure to direct sunlight?
 9. Are display signs blocking or diverting airflow?
 10. Are the coils of the refrigerator iced up?
 11. Is the store ambient over 75°F, 55% RH as set forth in ASHRAE Standard 72 and ASHRAE Standard 117?
 12. Are the shelf positions, number, and size other than recommended by Hussmann?
 13. Is there an improper application or control system?
 14. Is the evaporator fan motor/blade inoperative?
 15. Is the defrost time excessive?
 16. Is the defrost termination, thermostat (if used) set too high?
 17. Are the refrigerant controls incorrectly adjusted?
 18. Is the air entering the condenser above design conditions? Are the condenser fins clear of dirt, dust, etc.?
 19. Is there a shortage of refrigerant?
 20. Has the equipment been modified to use replacements for CFC-12, CFC-502 or other refrigerant? If so,

Appendices (Cont'd)

have the modifications been made in accordance with the recommendations of the equipment manufacturer? Is the refrigerator charged with the proper refrigerant and lubricant? Does the system use the recommended compressor?

Hot

1. The most consistent indicator of display hot case performance is temperature of the product itself.

NOTE: Public Health will use the temperature of the product in determining if the hot case will be allowed to display potentially hazardous food. For the purpose of this evaluation, product temperature above the FDA Food Code 1993 temperature for potentially hazardous food will be the first indication that an evaluation should be performed. It is expected that all hot cases will keep food at the FDA Food Code 1993 temperature to prevent the sale of potentially hazardous food.

1. The following recommendations are made for the purpose of arriving at easily taken and understood data which, coupled with other observations, may be used to determine whether a display refrigerator is working as intended:
 - a) **INSTRUMENT** - A stainless steel stem-type thermometer is recommended and it should have a dial a minimum of 1 inch internal diameter. A test thermometer scaled only in Celsius or dually scaled in Celsius and Fahrenheit shall be accurate to 1°C (1.8°F). Temperature measuring devices that are scaled only in Fahrenheit shall be accurate to 2°F. The thermometer should be checked for proper calibration. (It should read 32°F when the stem is immersed in an ice water bath).
 - b) **LOCATION** - The thermometer must be inserted into the food itself to acquire proper food pulp temperature.
 - c) **READING** - The thermometer reading should be made only after it has been allowed to stabilize, i.e., maintain a constant reading. Loading Product: Cases should be allowed to heat up for one hour before product is loaded. Temperature adjustments: Allow 4 hours after adjustment has been made before testing pulp temperature of product
 - d) **OTHER OBSERVATIONS** - Other observations should be made which may indicate operating problems, such as unsatisfactory product, feel/appearance.

Appendix D. - Recommendations to User - Refrigerated

1. Hussmann Corporation provides instructions and recommendations for proper periodic cleaning. The user will be responsible for such cleaning, including the cleaning of low temperature equipment within the compartment and the cooling coil area(s). Cleaning practices, particularly with respect to proper refrigerator unloading and warm-up, must be in accordance with applicable recommendations.
1. Cleaning of non frozen food equipment should include a weekly cleaning of the food compartment as a minimum to prevent bacteria growth from accumulating. Actual use and products may dictate more frequent cleaning. Circumstances of use and equipment design must also dictate the frequency of cleaning the display areas. Weekly washing down of the storage compartment is also recommended, especially for equipment subject to drippage of milk or other liquids, or the collection of vegetable, meat, crumbs, etc. or other debris or litter. Daily cleaning of the external areas surrounding the storage or display compartments with detergent and water will keep the equipment presentable and prevent grime buildup.
2. Load levels as defined by the manufacturer must be observed.
3. The best preservation is achieved by following these rules:
 - a) Buy quality products.
 - b) Receive perishables from transit equipment at the ideal temperature for the particular product.
 - c) Expedite perishables to the store's storage equipment to avoid unnecessary warm-up and prolonged temperature recovery. Food store refrigerators are not food chillers nor can they reclaim quality lost through previous mishandling.
 - d) Care must be taken when cross merchandising products to ensure that potentially hazardous vegetable products are not placed in non refrigerated areas.
 - e) Display and storage equipment doors should be kept closed during periods of inactivity.
 - f) Minimize the transfer time of perishables from storage to display.
 - g) Keep meat under refrigeration in meat cutting and processing area except for the few

Appendices (Cont'd)

- moments it is being handled in processing. When a cut or tray of meat is not to be worked on immediately, the procedure should call for returning it to refrigeration.
- h) Keep tools clean and sanitized. Since mechanical equipment is used for fresh meat processing, all such equipment should be cleaned at least daily and each time a different kind of meat product comes in contact with the tool or equipment.
 - i) Make sure that all refrigeration equipment is installed and adjusted in strict accordance with the manufacturer's recommendations.
 - j) See that all storage and refrigeration equipment is kept in proper working order by routine maintenance.

Hot

- 1.0 Hussmann should provide instructions and recommendations for proper periodic cleaning. The user will be responsible for such cleaning, including the cleaning of equipment within the compartment and the hot area(s). Cleaning practices, particularly with respect to proper refrigerator unloading and warm-up, must be in accordance with applicable recommendations.
 1. Allow the case to preheat for one hour prior to loading.
 2. Hot foods should enter the case directly after cooking or no lower than 150° - 160°F. The Hot Cases are not designed to heat up or cook food.
 3. Self Service - be sure to display product in single layer in direct contact with heating surface and/or wire rack.
 4. All griddle type units are designed to maintain temperatures above the FDA guideline of 140°F. This is product temperature, not air or griddle temperature. Due to the open design of these units, they must be loaded with product for proper operation. When units are empty, they experience rapid rise of heated air from air outside the case. This action gives empty units a false, lower than desired, temperature reading. Loading the case traps the air at the griddle, raising temperatures to the 165°F to 185°F range, keeping product well above the FDA guidelines. Remember, these units must be loaded with product to maintain safe product temperature.

5. Check the food pulp temperature frequently with a thermometer to make sure it is at the proper holding temperature. Hot foods should be at 140°F. The thermometer must be inserted into the food itself for the proper temperature.
6. Do not display more food than will be sold within a 4 hour period.
7. When restocking, bring older food to the front, and stock fresher food on top.
8. Clean spills as soon as they happen.
9. Fingerprints and food splatter will drastically shorten bulb life. Clean splatter oil the bulbs immediately with a soft cloth. When handling bulbs, wear cotton gloves or use a cotton rag/towel.
10. When "freshening" foods such as macaroni and cheese with added water, heat the water in a clean container until it is 10° to 20°F above the desired holding temperature of the food. This will keep the food at a safe serving temperature. Depending on the amount of water, the temperature can drop 10° to 20°F in as little as five minutes.
11. When transferring hot foods in the heated merchandiser to clean pans, preheat the clean pan. Transferring hot foods to room temperature pans can cause the temperature of the food to drop 20°F or more thus causing food to be at an unsafe serving temperature.
12. Clean spills as they happen simply by wiping with a cloth. Be sure to use a dry cloth on very hot surfaces to prevent steam burns.
13. Turn the equipment off and allow to cool before cleaning.
14. To remove "baked-on" splatter from Stainless Steel, the following may be used

Grade F Italian Pumice	Scour or rub with a damp cloth
Liquid NuSteel	Scour with a small amount of a dry cloth
Paste NuSteel	Rub with a damp cloth
Household Cleaners	Coopers Stainless Steel Cleaner
Allen Stainless Steel Polish	

For further technical information, please log on to <http://www.hussmann.com/products/R3HTO.htm> or <http://www.hussmann.com/products/R3H.htm>



This warning does not mean that Hussmann products will cause cancer or reproductive harm, or is in violation of any product-safety standards or requirements. As clarified by the California State government, Proposition 65 can be considered more of a 'right to know' law than a pure product safety law. When used as designed, Hussmann believes that our products are not harmful. We provide the Proposition 65 warning to stay in compliance with California State law. It is your responsibility to provide accurate Proposition 65 warning labels to your customers when necessary. For more information on Proposition 65, please visit the California State government website.

Service Record

Last service date: By:

HUSSMANN®/Chino

Additional copies of this publication may be obtained by contacting:
Hussmann® Chino
13770 Ramona Avenue • Chino, California 91710
(909) 628-8942 FAX
(909) 590-4910
(800) 395-9229

The **MODEL NAME** and **SERIAL NUMBER** is required in order to provide you with the correct parts and information for your particular unit.

They can be found on a small metal plate on the unit. Please note them below for future reference.

MODEL:

SERIAL NUMBER: